

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 7	Body ECU	90980-12151
A 4	Pressure SW	90980-10943	B 8	Body ECU	90980-12149
A 5	A/C Lock Sensor	90980-11016	B 9	Body ECU	90980-12150
	A/C Magnetic Clutch		C 1	Camshaft Position Sensor	90980-10947
A12	ABS Speed Sensor Front LH	90980-10941	C 2	Center Diff. Lock Control Motor	90980-11024
A13	ABS Speed Sensor Front RH	90980-11002	C 3	Crankshaft Position Sensor	90980-11162
A14	Accel Position Sensor	90980-11144	C 5	Center Diff. Lock Control Relay	90980-10801
A15	Airbag Sensor Front LH	90980-11856	C10	Cigarette Lighter	90980-10760
A16	Airbag Sensor Front RH		C11	Cigarette Lighter Illumination	90980-11148
A17	Auto Antenna Motor	90980-11194	C12	Combination Meter	82824-60060
A18	A/C Solar Sensor	90980-11919	C13	Combination Meter	82824-60050
A19	A/C Thermistor	90980-11918	C14	Combination Meter	82824-60060
A24	Air Inlet Control Servo Motor	90980-11909	C15	Combination Meter	82824-60050
A25	Air Mix Control Servo Motor	90980-10797	C16	Combination SW	90980-11672
A26	Air Vent Mode Control Servo Motor	90980-11165	C17	Combination SW	90980-12155
A27	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	C18	Combination SW	90980-12183
A28	Airbag Squib (Steering Wheel Pad)		C19	Combination SW	90980-11594
A29	Ashtray Illumination	90980-10825	C25	Center Airbag Sensor Assembly (w/ Side Airbag)	82824-50160
A30	Auto Antenna Control Relay	90980-10819		Center Airbag Sensor Assembly (w/o Side Airbag)	90980-11873
A31	Automatic Light Control Sensor	90980-12056	C26	Center Airbag Sensor Assembly	90980-11872
A32	A/C Amplifier (Rear)	90980-11502	C27	Center Airbag Sensor Assembly (w/ Side Airbag)	82824-50150
A33	A/C Amplifier (Rear)	90980-11475		Center Airbag Sensor Assembly (w/o Side Airbag)	90980-11871
A34	A/C Amplifier (Rear)	90980-11497	C28	Center Cluster Integration Panel	90980-12200
A35	ABS Speed Sensor Rear LH	90980-11073	C29	Curtain Shield Airbag Squib LH	90980-11864
A36	ABS Speed Sensor Rear RH		C30	Curtain Shield Airbag Squib RH	
A37	ABS & BA & TRAC & VSC Actuator	90980-11413	D 1	Data Link Connector 1	90980-11195
A38	ABS & BA & TRAC & VSC Actuator	90980-10895	D 2	Daytime Running Light Relay No.3	90980-10939
A39	ABS & BA & TRAC & VSC Actuator	90980-11151	D 3	Daytime Running Light Relay No.3	90980-10940
A40	ABS & BA & TRAC & VSC Actuator	90980-11009	D 4	Detection SW (Center Diff. Lock)	90980-11250
A41	ABS & BA & TRAC & VSC ECU	90980-11935	D 5	Detection SW (Transfer L Position)	
A42	ABS & BA & TRAC & VSC ECU	90980-11476	D 6	Detection SW (Transfer Neutral Position)	90980-11025
A43	ABS & BA & TRAC & VSC ECU	90980-11637	D 7	Data Link Connector 3	90980-11665
A44	ABS & BA & TRAC & VSC ECU	90980-11638	D10	Door Courtesy Light Front LH	90980-11148
A45	A/C Control Assembly	90980-12170	D11	Door Courtesy Light Front RH	
A46	A/C Control Assembly	90980-11913	D12	Door Courtesy Light Rear LH	
A47	A/C Control Assembly	90980-11927	D13	Door Courtesy Light Rear RH	90980-10871
A48	A/T Shift Lever Illumination	90980-11911	D14	Door Courtesy SW Front LH	
	Shift Lock Control ECU		D15	Door Courtesy SW Front RH	
B 1	Blower Motor Controller	90980-10910	D16	Door Courtesy SW Rear LH	90980-11170
B 2	Back Door Courtesy SW	90980-10039	D17	Door Courtesy SW Rear RH	
B 3	Back Door Key Lock and Unlock SW	90980-11490	D18	Door Key Lock and Unlock SW LH	90980-11170
B 4	Back Door Lock Motor	90980-11150	D19	Door Key Lock and Unlock SW RH	
	Back Door Unlock Detection SW		D20	Door Lock Control SW RH	90980-11950
B 5	Buckle SW LH	90980-11169			
B 6	Buckle SW RH				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D21	Door Lock Motor Front LH	90980-11150	H 3	Headlight RH (High)	90980-11659
	Door Unlock Detection SW Front LH		H 4	Headlight RH (Low)	90980-11660
D22	Door Lock Motor Front RH		H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
	Door Unlock Detection SW Front RH		H 6	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D23	Door Lock Motor Rear LH		H 7	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
	Door Unlock Detection SW Rear LH		H 8	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
D24	Door Lock Motor Rear RH		H 9	Horn LH	90980-10619
	Door Unlock Detection SW Rear RH		H10	Horn RH	
D26	DVD Automatic Changer	90980-11971	H11	High Mounted Stop Light	90980-11211
D27	Door Control Receiver	90980-11909	I 1	Ignition Coil and Igniter No.1	90980-11885
E 1	Electronically Controlled Transmission Solenoid	90980-12293	I 2	Ignition Coil and Igniter No.2	
E 2	Engine Coolant Temp. Sensor	90980-10736	I 3	Ignition Coil and Igniter No.3	
E 3	Engine Hood Courtesy SW	90980-11003	I 4	Ignition Coil and Igniter No.4	
E 4	Electronically Controlled Transmission Pattern Select SW	90980-10933	I 5	Ignition Coil and Igniter No.5	
E 5	Engine Control Module	90980-12144	I 6	Ignition Coil and Igniter No.6	
E 6	Engine Control Module	90980-12145	I 7	Ignition Coil and Igniter No.7	
E 7	Engine Control Module	90980-12143	I 8	Ignition Coil and Igniter No.8	
E 8	Engine Control Module	90980-12146	I 9	Injector No.1	90980-11153
E 9	Engine Control Module	90980-12142	I10	Injector No.2	
F 1	Front Fog Light LH	90980-11660	I11	Injector No.3	
F 2	Front Fog Light RH		I12	Injector No.4	
F 3	Front Turn Signal Light LH	90980-11020	I13	Injector No.5	
	Side Marker Light LH		I14	Injector No.6	
F 4	Front Turn Signal Light RH		I15	Injector No.7	
	Side Marker Light RH		I16	Injector No.8	
F 5	Front Wiper Motor	90980-11599	I18	Ignition SW	90980-11615
F 8	Front Door Speaker LH	90980-10935	I22	Inner Mirror	90980-11186
F 9	Front Door Speaker RH		J 1	Junction Connector	90980-11398
F10	Front Interior Light	90980-12211	J 2	Junction Connector	90980-11915
	Rear Personal Light		J 3	Junction Connector	90980-11398
F11	Front Personal Light	90980-10825	J 4	Junction Connector	
F12	Fuel Pump	90980-11077	J 6	Junction Connector	90980-11927
	Fuel Sender		J 7	Junction Connector	
F14	Fuel Pump Resistor	90980-11156	J 8	Junction Connector	90980-10803
F15	Fusible Link Block	90980-11996	J 9	Junction Connector	90980-11927
F16	Fusible Link Block	90980-11881	J10	Junction Connector	
F17	Fusible Link Block	90980-11775	J11	Junction Connector	90980-10803
F18	Fusible Link Block	90980-10995	J12	Junction Connector	90980-11927
F19	Fusible Link Block	82675-60050	J13	Junction Connector	90980-11925
G 1	Generator	90980-11964	J14	Junction Connector	90980-11927
G 2	Generator	90980-09212	J15	Junction Connector	90980-11925
G 3	Glove Box Light	90980-11098	J16	Junction Connector	90980-11915
G 4	Gateway ECU	90980-11911	J17	Junction Connector	
H 1	Headlight LH (High)	90980-11659			
H 2	Headlight LH (Low)	90980-11660			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J18	Junction Connector	90980-11661	P18	Power Window Control SW Front RH	90980-11947
J19	Junction Connector		P19	Power Window Control SW Rear LH	
J20	Junction Connector		P20	Power Window Control SW Rear RH	
J21	Junction Connector		P21	Pretensioner LH	90980-11862
J22	Junction Connector	90980-11915	P22	Pretensioner RH	90980-10803
J23	Junction Connector		P23	Power Seat Control SW (Driver's Seat)	
J25	Junction Connector		P24	Power Seat Control SW (Front Passenger's Seat)	
J26	Junction Connector		P25	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
K 1	Knock Sensor (Bank 1)	90980-11166	P26	Power Seat Motor (Driver's Seat Lumbar Support Control)	
K 2	Knock Sensor (Bank 2)		P27	Power Seat Motor (Driver's Seat Rear Vertical Control)	
K 3	Key Interlock Solenoid	90980-10825	P28	Power Seat Motor (Driver's Seat Reclining Control)	
L 1	License Plate Light LH	90980-11148	P29	Power Seat Motor (Driver's Seat Slide Control)	
L 2	License Plate Light RH		P30	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	
L 3	Lumbar Support Control SW (Driver's Seat)	90980-10601	P31	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
L 4	Lumbar Support Control SW (Front Passenger's Seat)		P32	Power Seat Motor (Front Passenger's Seat Reclining Control)	
M 1	Mass Air Flow Meter	90980-11317	P33	Power Seat Motor (Front Passenger's Seat Slide Control)	
M 2	Moon Roof Control ECU	90980-10997	P34	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)	
M 3	Moon Roof Control SW	90980-10789	R 5	Remote Control Mirror SW	90980-11657
M 4	Master Cylinder Pressure Sensor	90980-11451	R 6	Rheostat	90980-10799
M 5	Multi-Display	90980-12203	R 7	Room Temp. Sensor (Front)	90980-11918
M 6	Multi-Display	90980-12410	R 8	Rear A/C Control SW	90980-11503
M 7	Multi-Display	90980-12012	R 9	Rear Air Mix Control Servo Motor	90980-11319
M 9	Multi-Display	90980-12094	R10	Rear Combination Light LH	90980-11587
N 1	Noise Filter (Ignition)	90980-10843	R11	Rear Combination Light LH	90980-10908
N 2	Navigation ECU	90980-11973	R12	Rear Combination Light RH	
N 3	Navigation ECU	90980-11923	R13	Rear Combination Light RH	90980-11587
N 4	Navigation ECU	90980-12221	R14	Rear Cooler Blower Motor	90980-10214
O 2	Oil Pressure Sender	90980-11363	R15	Rear Cooler Magnetic Valve	90980-10860
O 5	Overhead J/B	90980-12155	R16	Rear Cooler Power Transistor	90980-10171
P 1	Park/Neutral Position SW	90980-11784	R17	Rear Cooler Relay	
P 2	Parking Light LH	90980-11156	R19	Rear Door Speaker LH	90980-10935
P 3	Parking Light RH		R20	Rear Door Speaker RH	
P 4	Power Outlet (Front)	90980-10760	R21	Rear Evaporator Temp. Sensor	90980-11918
P 5	Power Outlet (Rear Console Box)	90980-10860	R22	Rear Heater Blower Motor	90980-10860
P 6	Power Quarter Window SW LH	90980-10797	R25	Rear Heater Power Transistor	90980-10171
P 7	Power Quarter Window SW RH	90980-10996	R26	Rear Inlet Air Temp. Sensor	90980-11369
P 8	Parking Brake SW	90980-10871	R27	Rear Interior Light	90980-10935
P 9	Power Outlet (Luggage Compartment)	90980-10860			
P10	Power Vent Window Motor LH				
P11	Power Vent Window Motor RH				
P12	Power Window Master SW	90980-12166			
P14	Power Window Motor Front LH	90980-11599			
P15	Power Window Motor Front RH				
P16	Power Window Motor Rear LH				
P17	Power Window Motor Rear RH				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
R28	Rear Window Defogger	90980-11097	T 5	Theft Deterrent ECU	90980-12169
R29	Rear Window Defogger		T 7	Tilt and Telescopic ECU	90980-10799
R30	Rear Wiper Motor	90980-10795	T 8	Tilt and Telescopic ECU	90980-10848
R31	Rear Wiper Relay	90980-10797	T 9	Tilt Motor	90980-10799
R32	Remote Control Mirror LH	90980-11573	T10	Ignition Key Cylinder Light	90980-12092
R33	Remote Control Mirror RH			Transponder Key Amplifier	
R34	Room Temp. Sensor (Rear)	90980-11918	T11	Turn Signal Flasher	90980-10799
R36	Radio and Player	90980-12038	T12	Trailer Socket	82824-34030
R37	Radio and Player	90980-12183	T13	Tweeter LH	90980-11300
R38	Radio and Player	90980-12259	T14	Tweeter RH	
R39	Rear Seat Audio Controller	90980-12200	T15	Towing Converter Relay	90980-11535
R40	Roll Sensing of Curtain Shield Airbags Cutoff SW	90980-10957	T16	Throttle Control Motor and Sensor	90980-11858
S 1	Starter	90980-11400	T17	Turbine Speed Sensor	90980-11156
S 2	Starter	90980-09585	T18	Towing Brake Controller	90980-11603
S 3	Seat Heater SW (Driver's Seat)	90980-10797	T19	Transponder Key Computer	90980-11911
S 4	Seat Heater SW (Front Passenger's Seat)	90980-10996	T20	Television Camera	90980-12381
S 5	Stop Light SW	90980-11118	T21	Television Camera ECU	90980-12169
S 6	Stereo Component Amplifier	90980-10848	T22	Television Camera ECU	90980-10997
S 7	Stereo Component Amplifier	90980-10807	T23	Towing Hitch Relay	82660-20340
S 8	Seat Belt Warning Occupant Detection Sensor	90980-10860	U 1	Unlock Warning SW	90980-10860
S 9	Seat Heater (Driver's Seat)	90980-10907	V 1	Vapor Pressure Sensor	90980-11143
S10	Seat Heater (Front Passenger's Seat)		V 2	Vehicle Speed Sensor (Combination Meter)	
S11	Side Airbag Sensor Front LH	90980-12225	V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
S12	Side Airbag Sensor Front RH		V 4	VSV (EVAP)	
S13	Side Airbag Sensor Rear LH		V 6	Vanity Light LH	90980-11918
S14	Side Airbag Sensor Rear RH		V 7	Vanity Light RH	
S15	Seat Heater (Driver's Seat Cushion)	90980-10794	V 8	VSC Warning Buzzer	90980-10906
S16	Seat Heater (Front Passenger's Seat Cushion)		V 9	VSV (Canister Closed Valve)	90980-11162
S17	Seat Position Sensor	90980-12195	V10	VSV (Pressure Switching Valve)	90980-11859
S18	Side Airbag Squib LH	90980-11864	W 1	Washer Motor	90980-11294
S19	Side Airbag Squib RH		W 4	Woofers (Speaker)	90980-10795
T 1	Theft Deterrent Horn	90980-10619	Y 1	Yaw Rate Sensor	90980-12080
T 4	Telescopic Motor	90980-10799	Z 1	Option Connector (Glass Breakage Sensor)	90980-10825