




F RELAY LOCATIONS

[Engine Compartment]

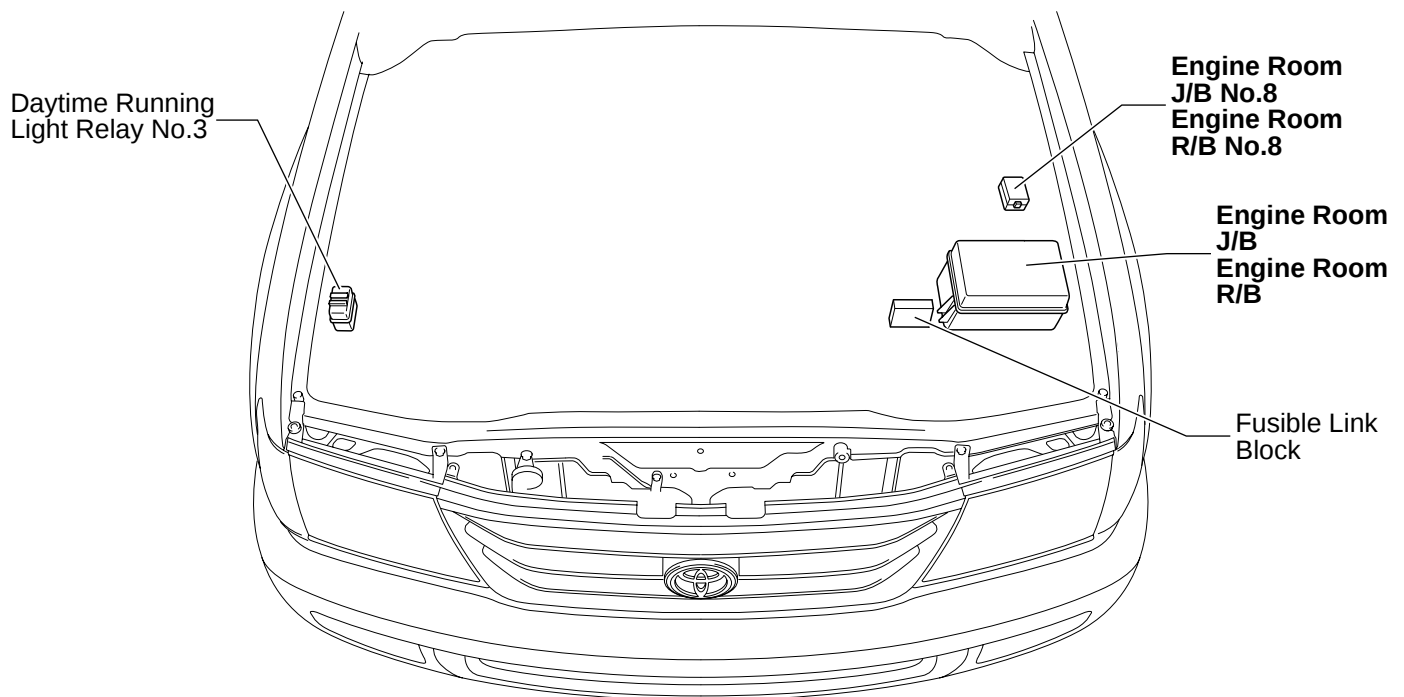

[Instrument Panel]

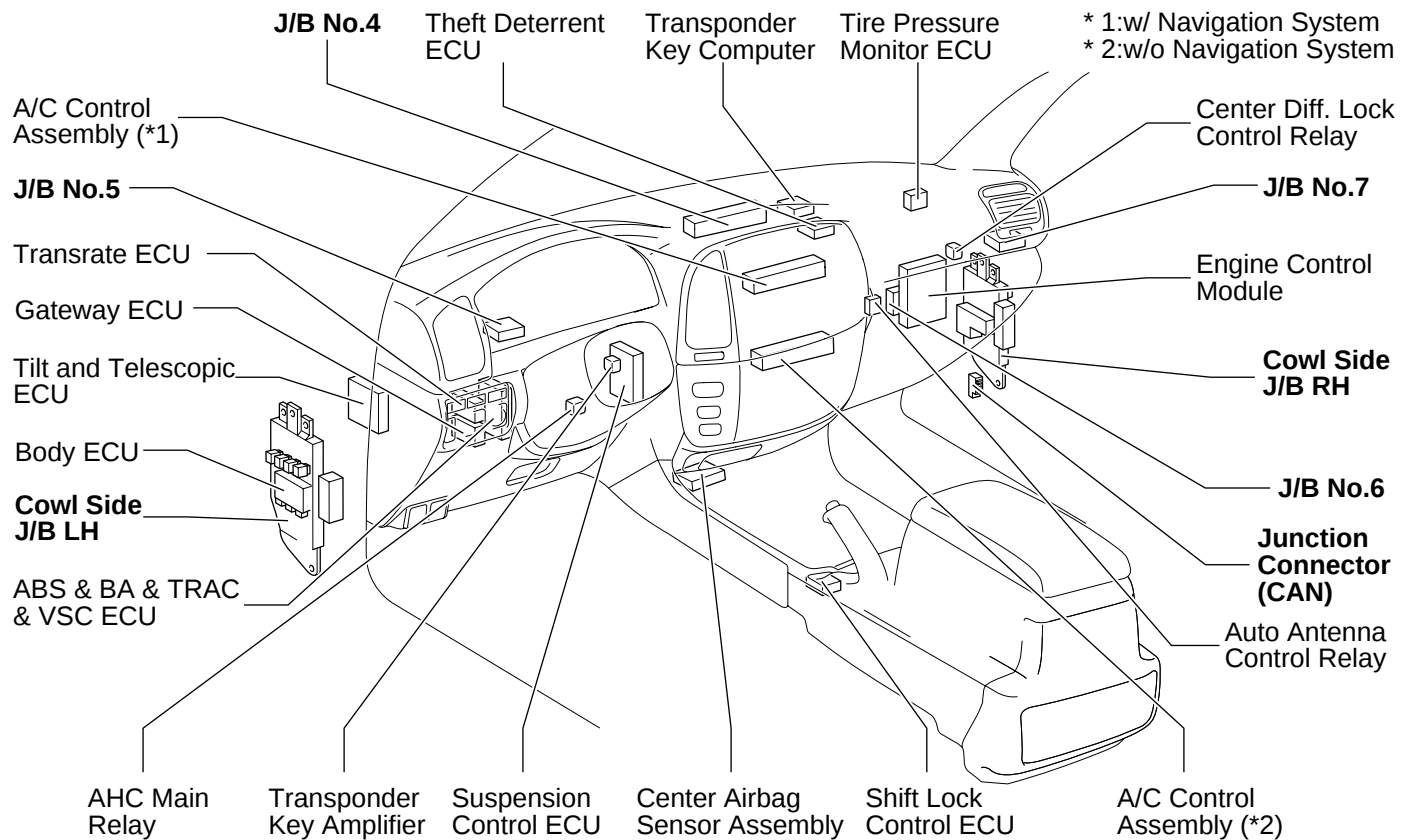


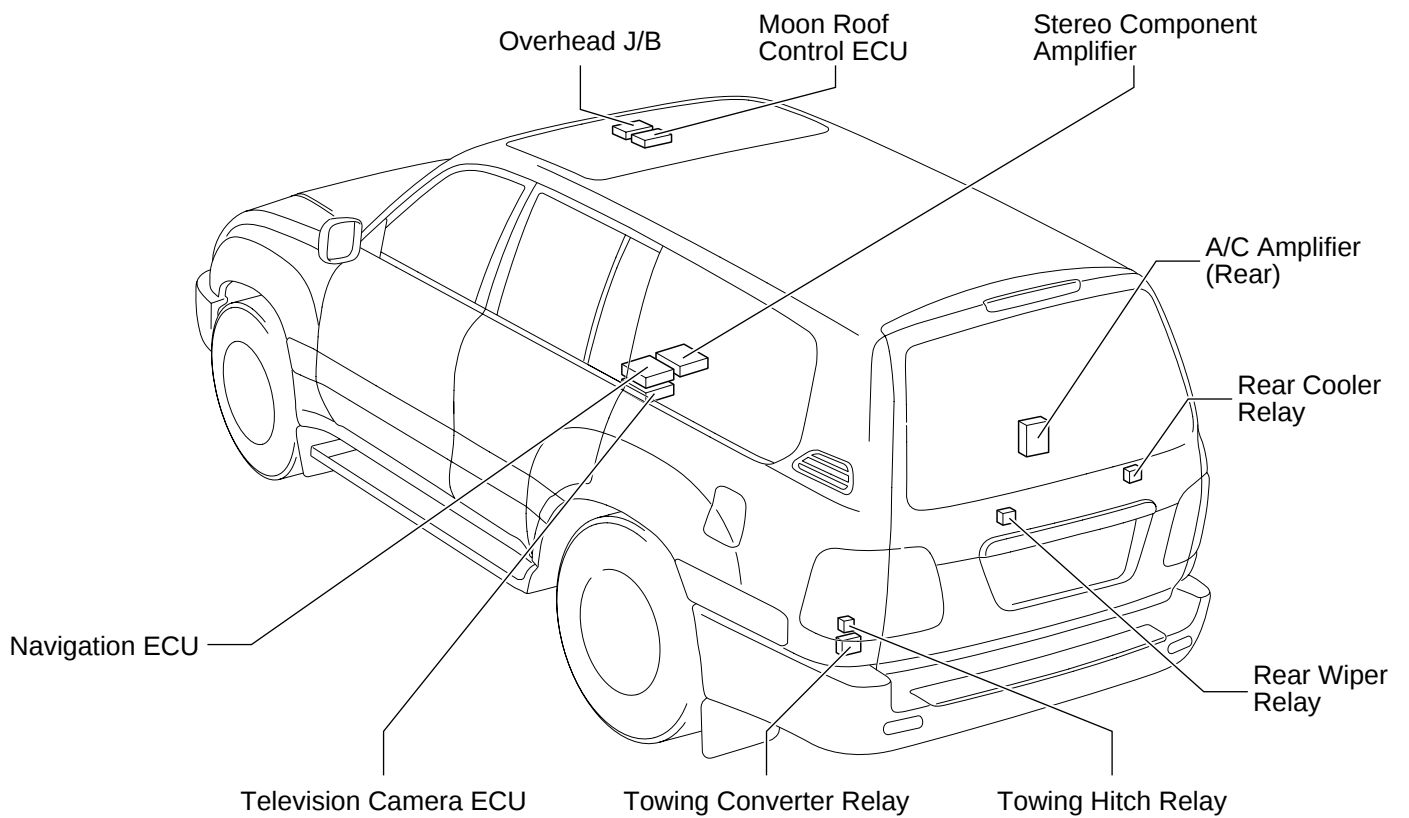
[Body]

F RELAY LOCATIONS

○ : Engine Room J/B	Engine Compartment Left (See Page 20)
① : Engine Room R/B	

(Inner Circuit : See Page 26)

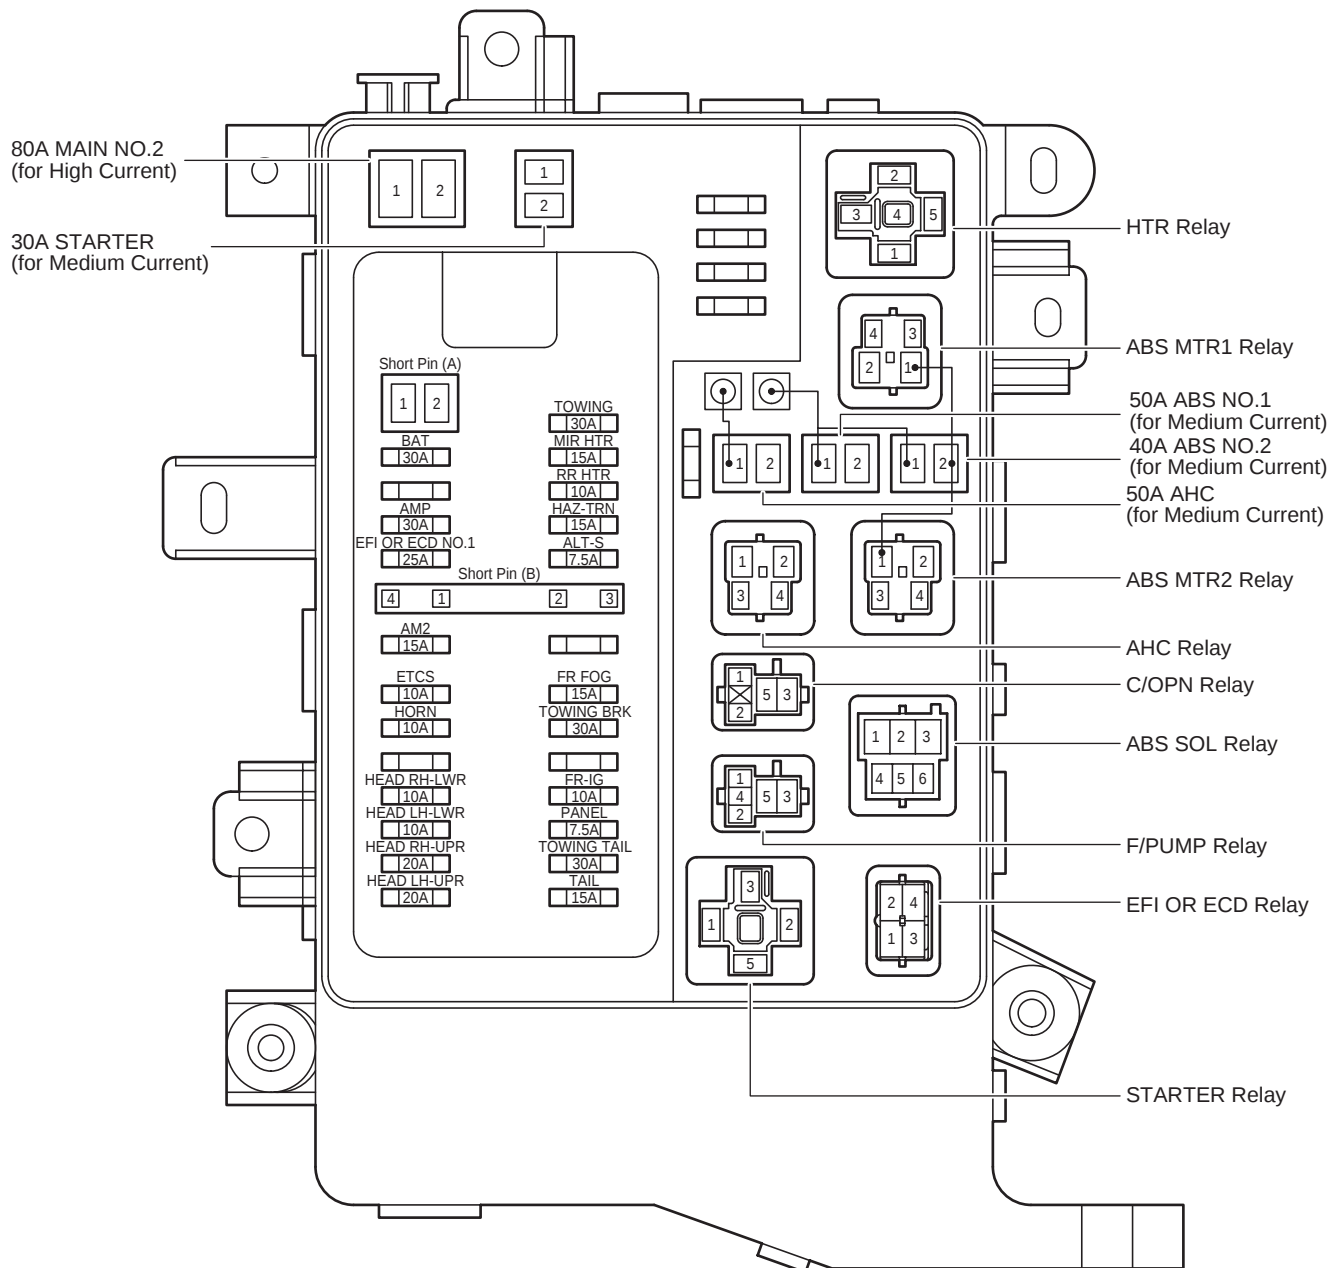

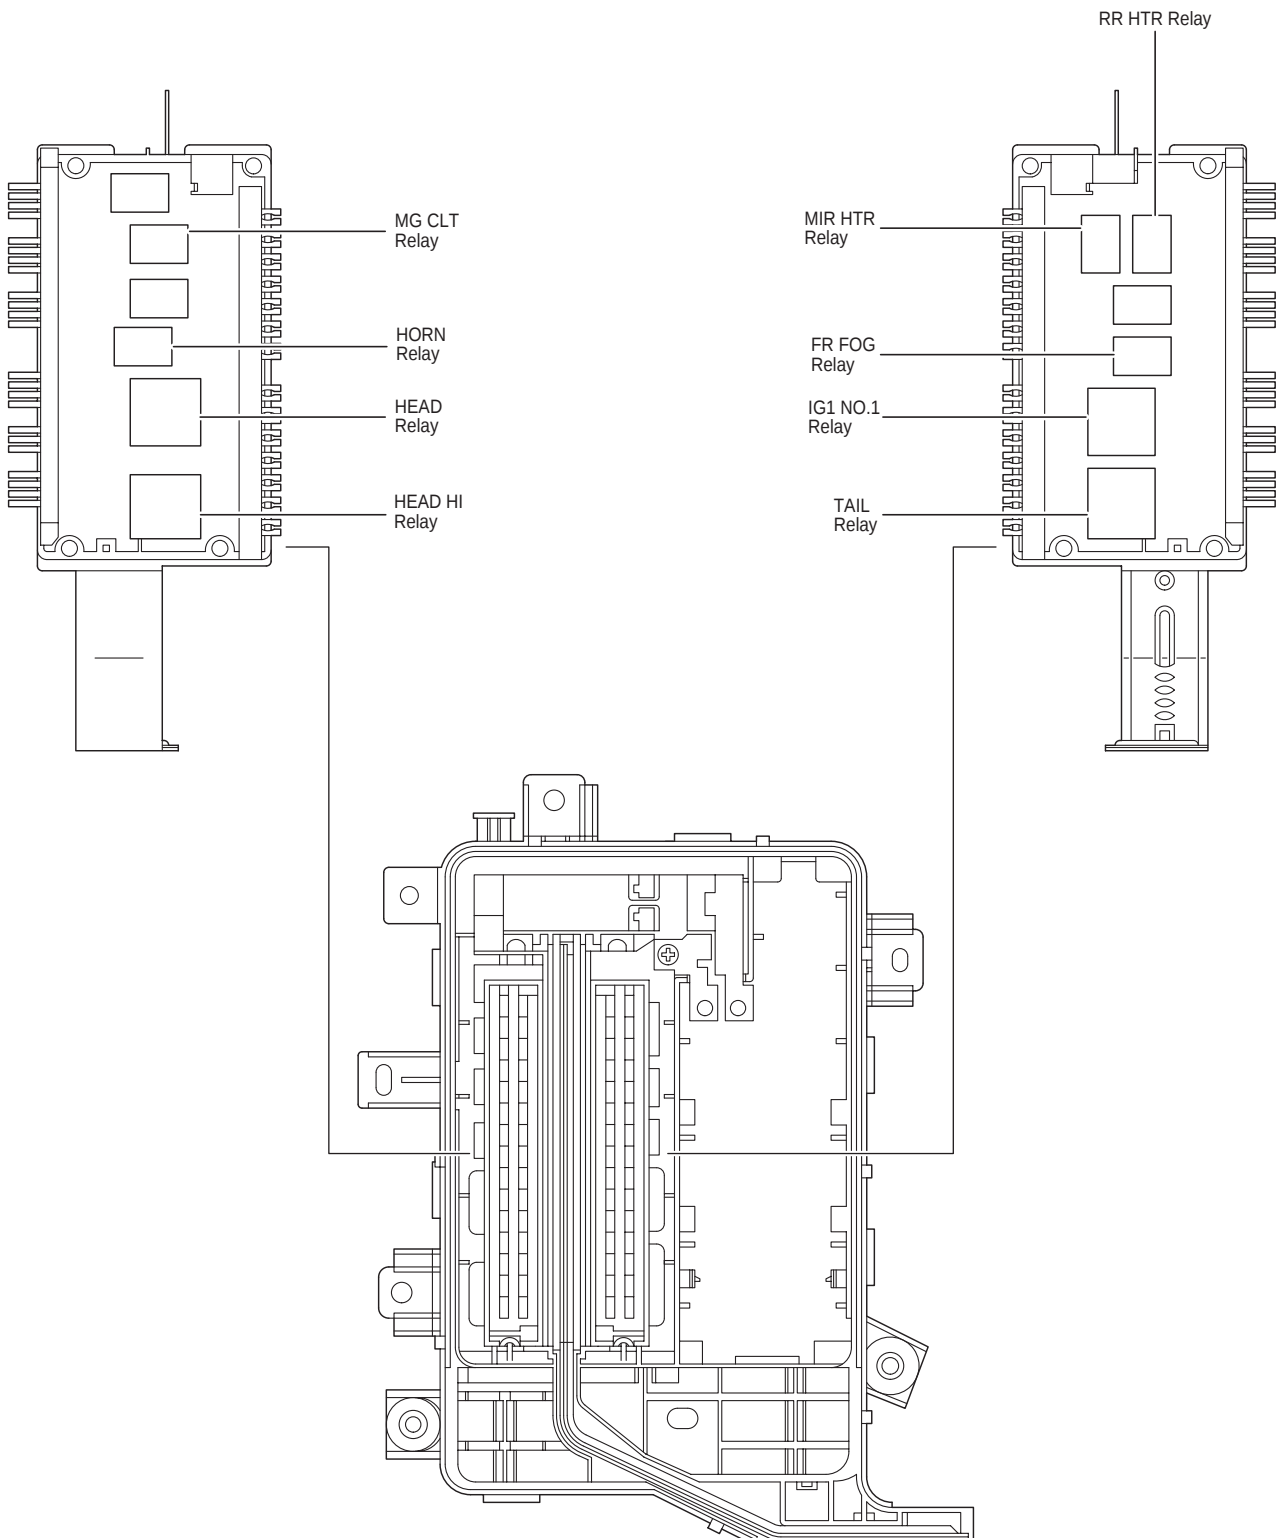






F RELAY LOCATIONS

○ : Engine Room J/B

Engine Compartment Left (See Page 20)


(Inner Circuit : See Page 26)

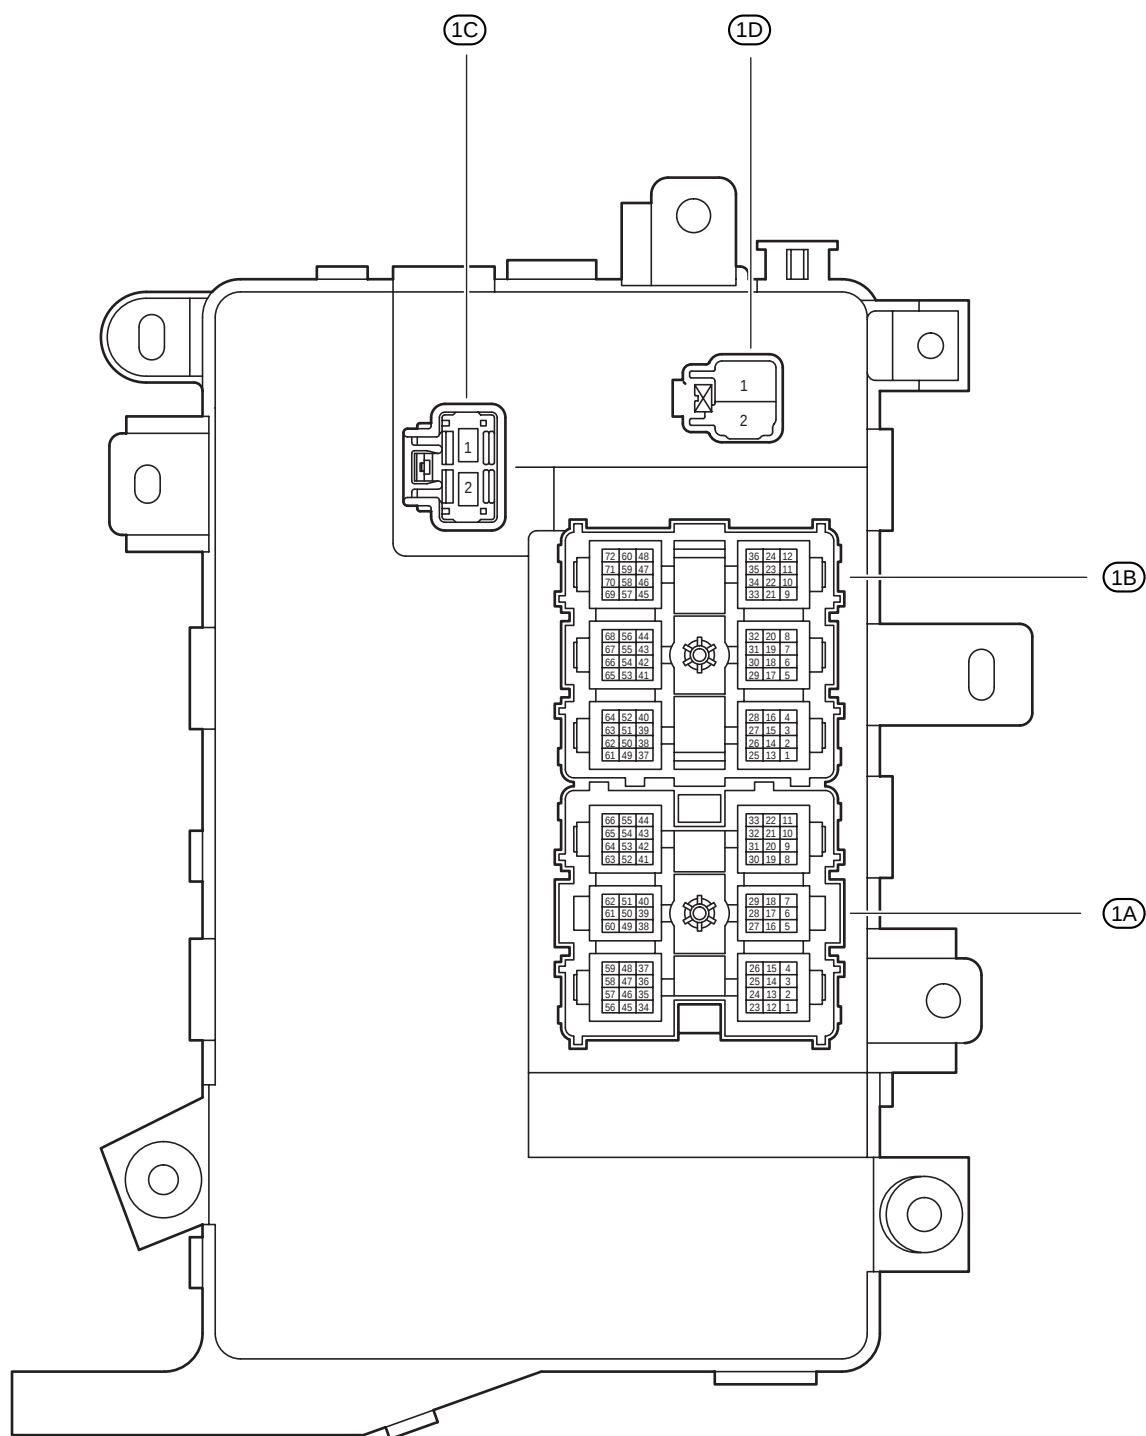

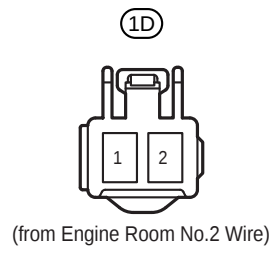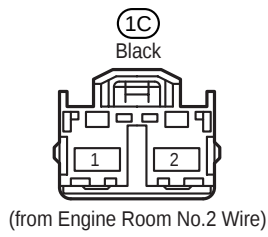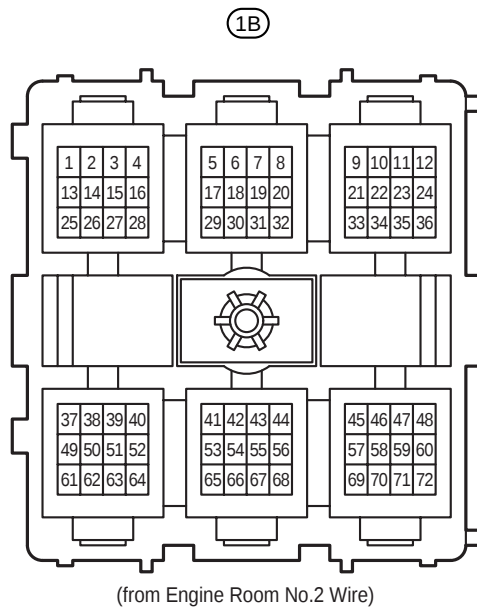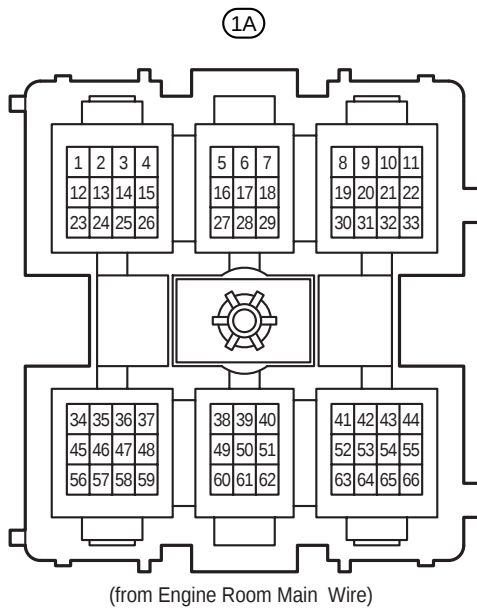


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

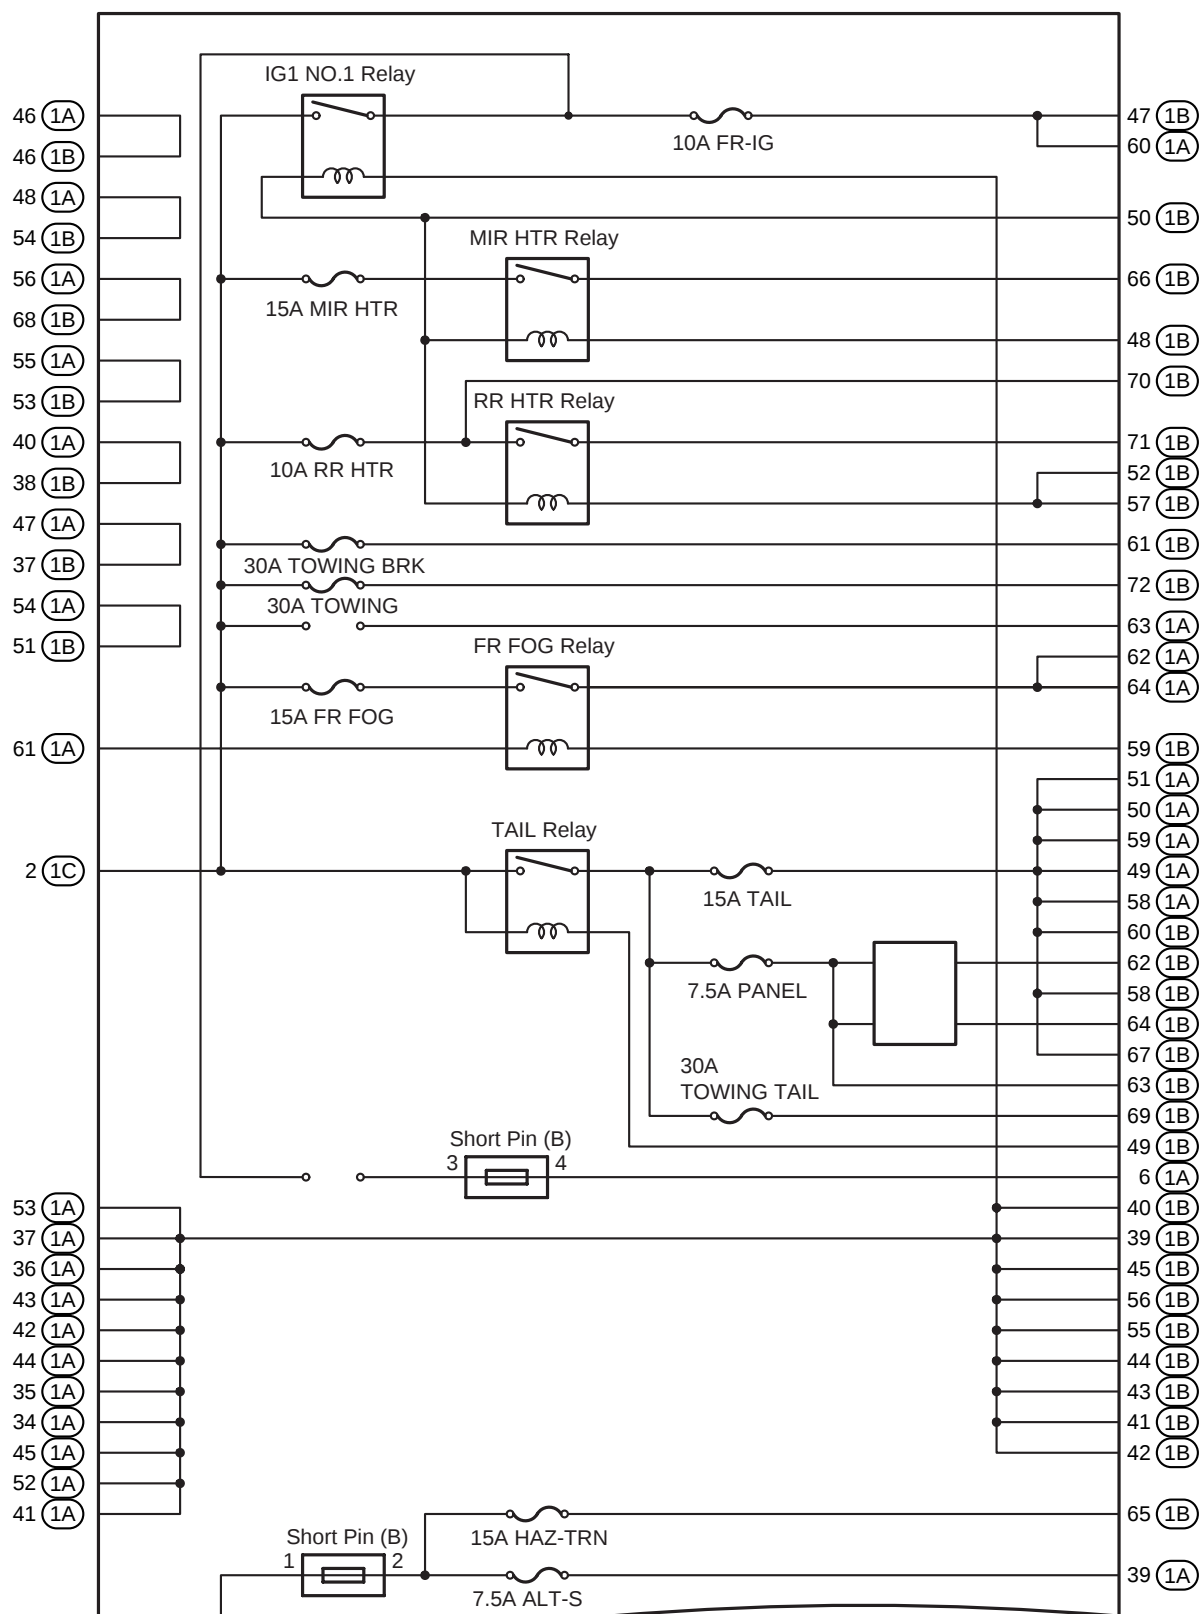

(Cont. next page)

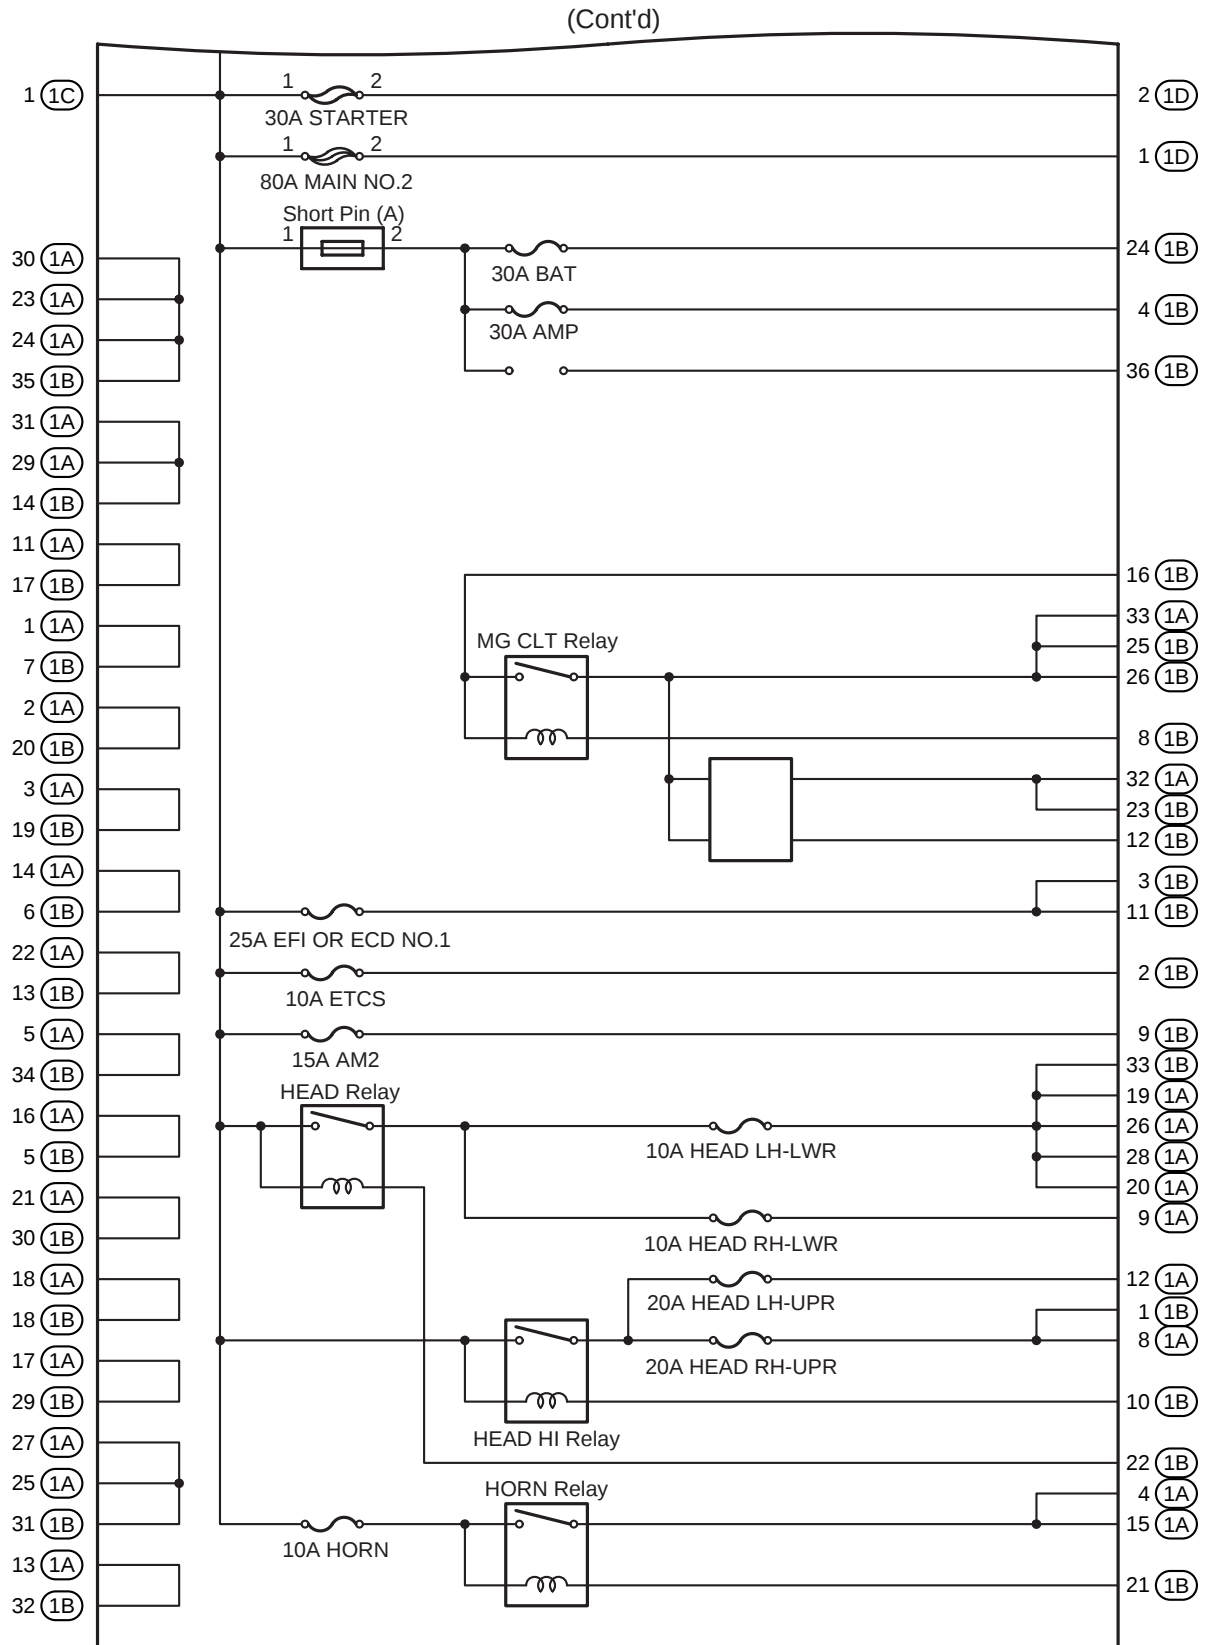



F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

(Inner Circuit : See Page 34)

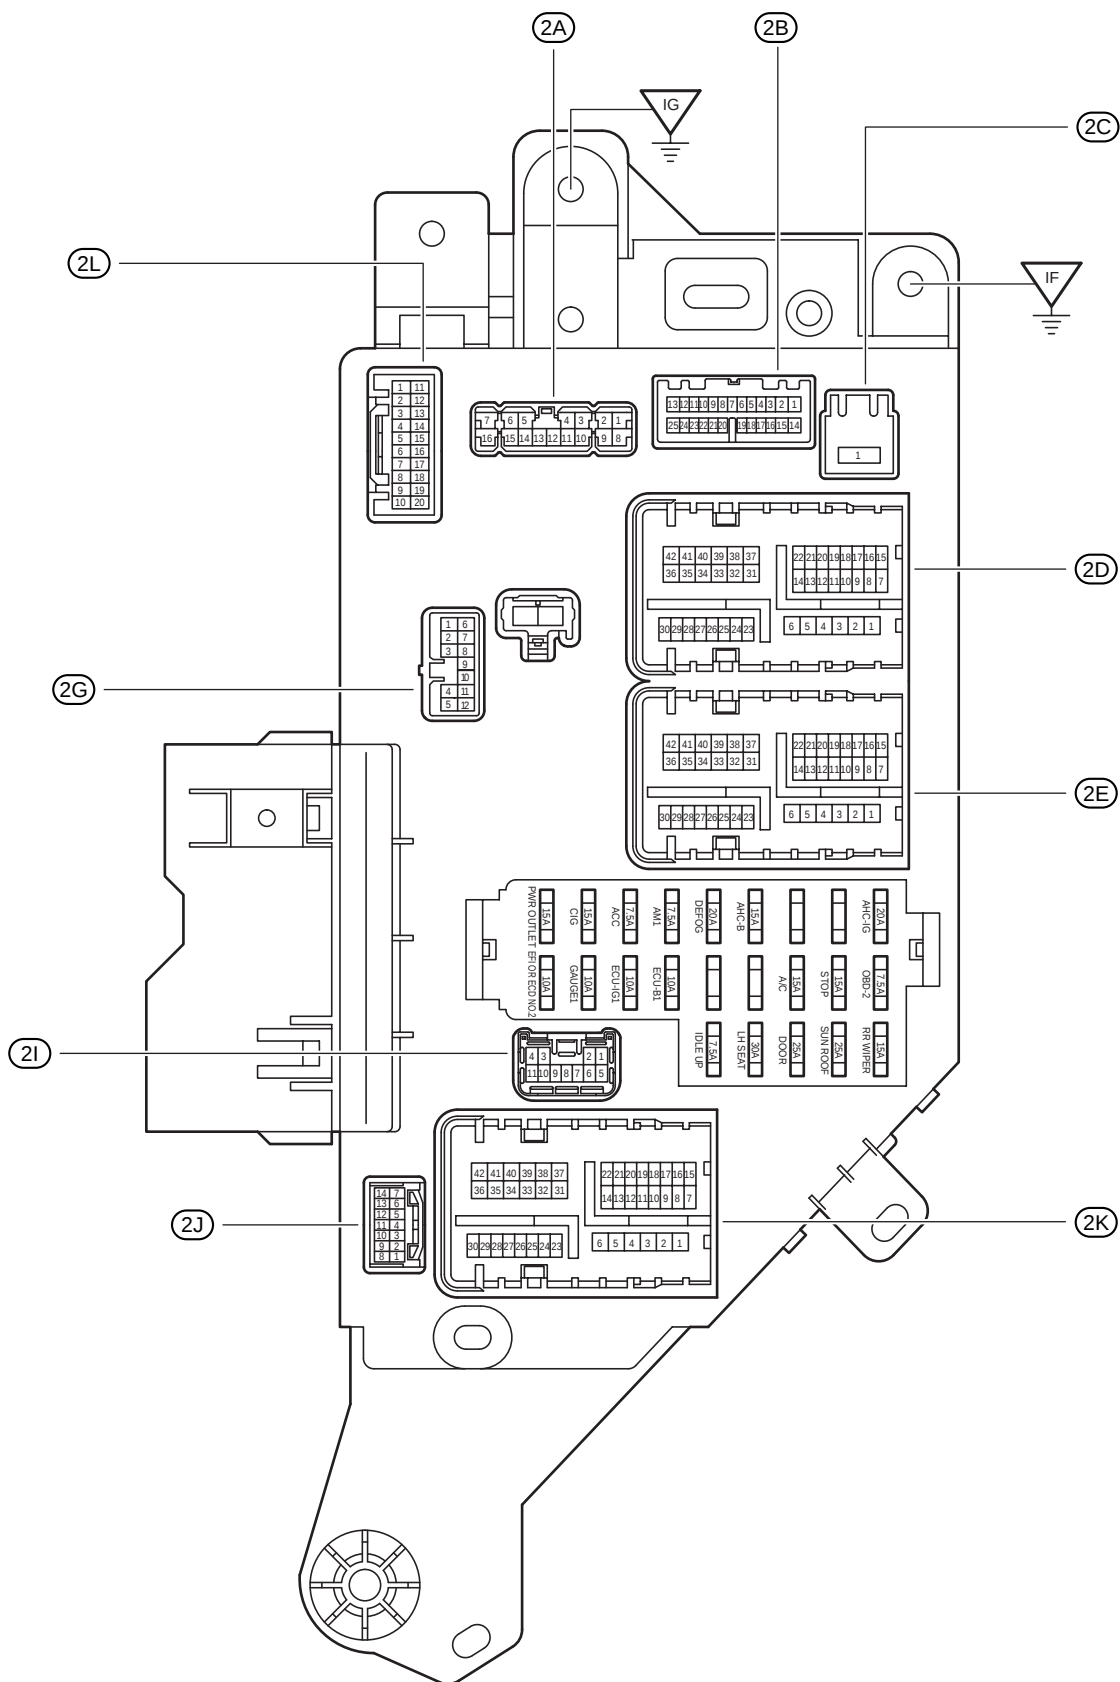


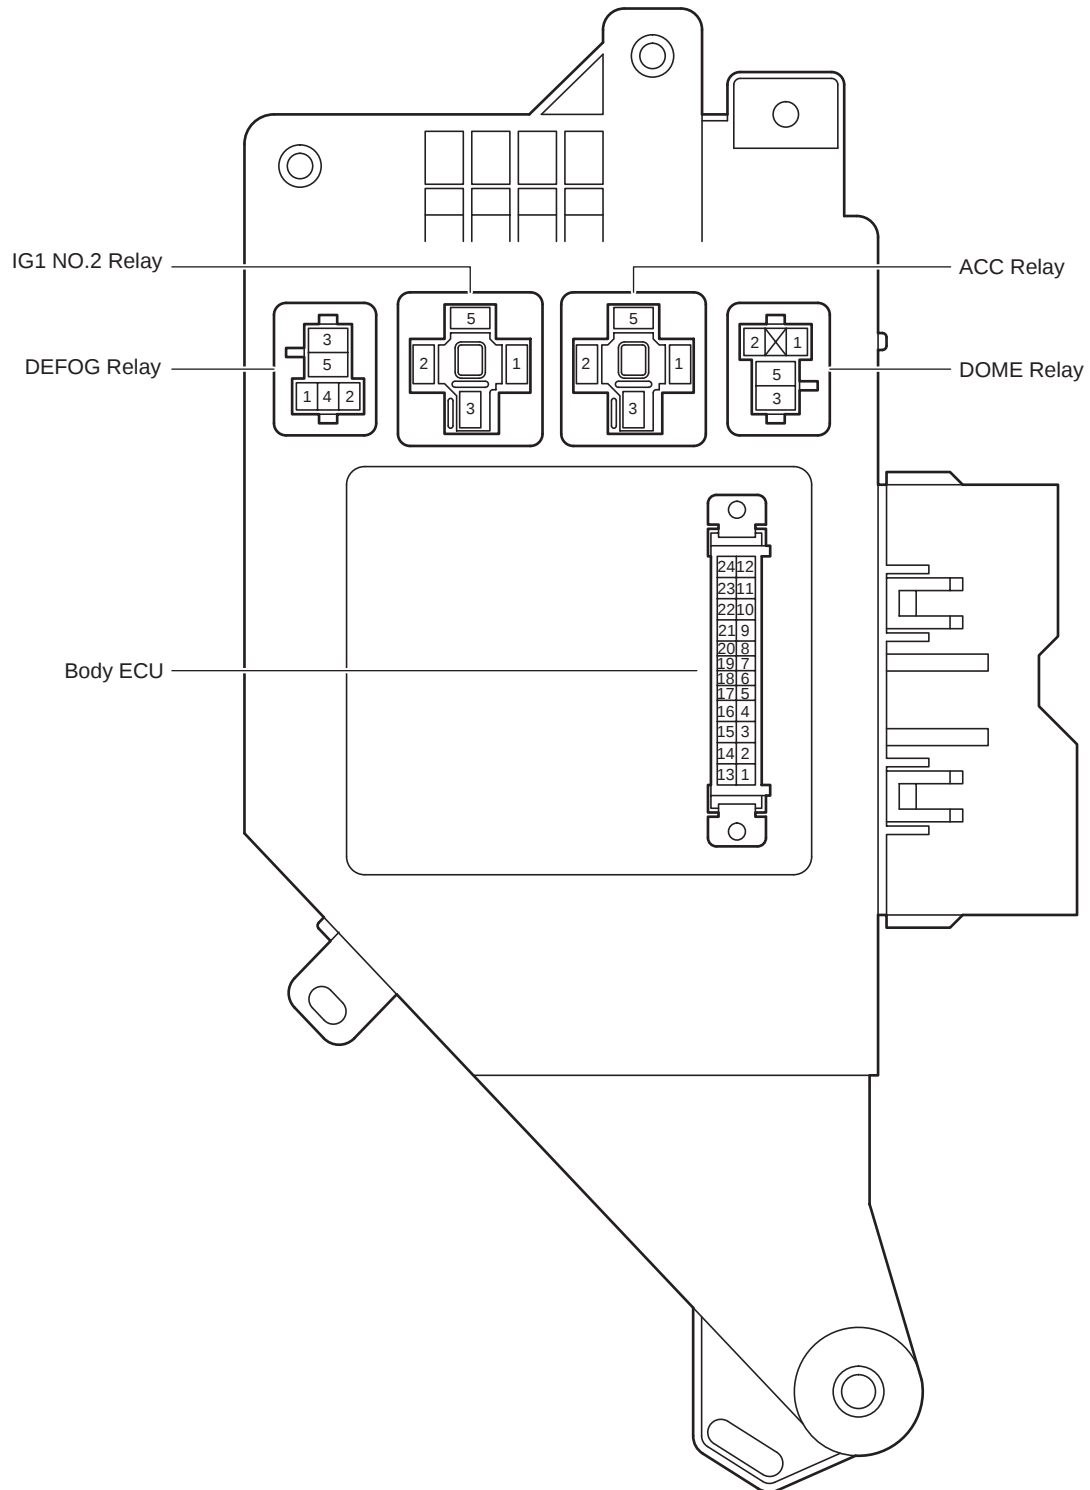

F RELAY LOCATIONS

 : Cowl Side J/B LH	Left Kick Panel (See Page 20)
--	-------------------------------

(Inner Circuit : See Page 34)








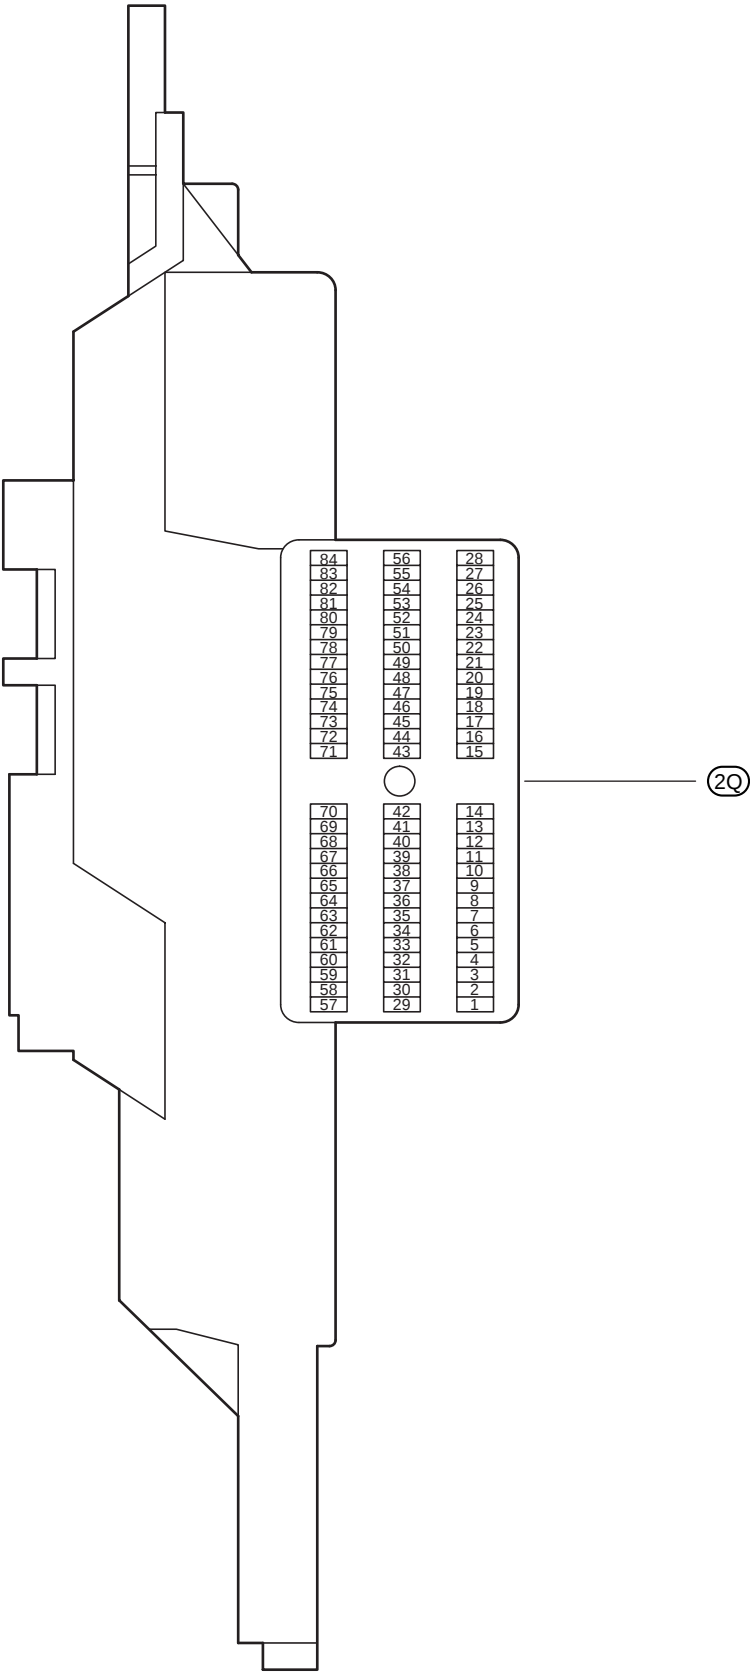





F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)


(Inner Circuit : See Page 34)

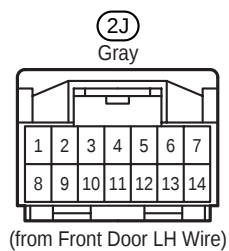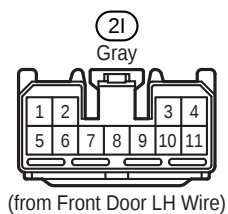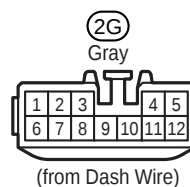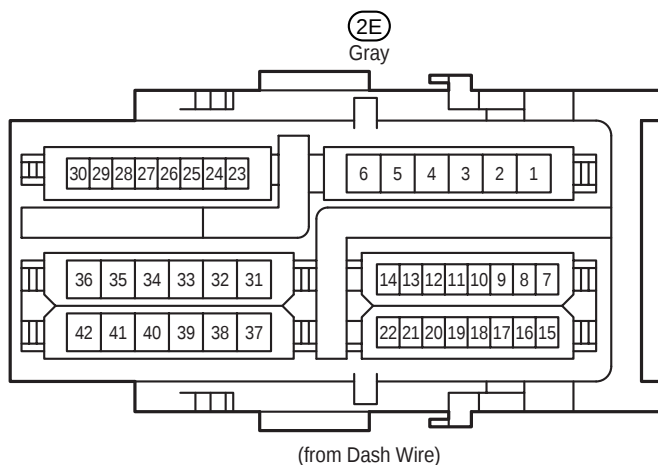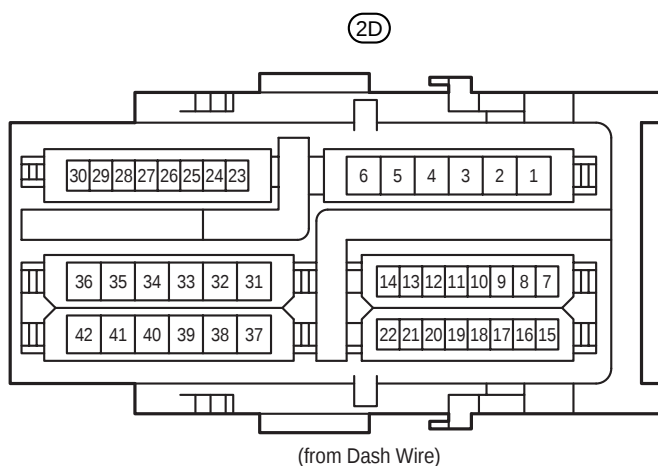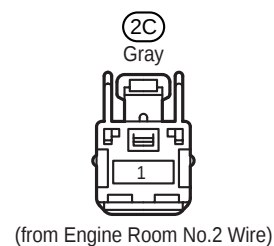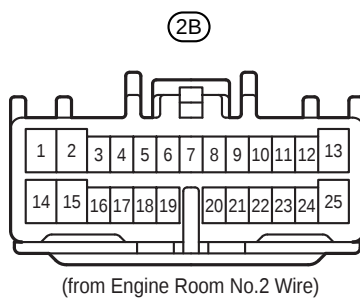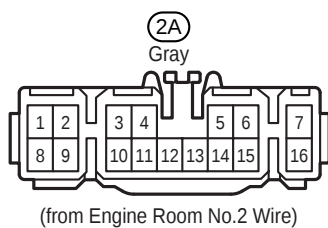

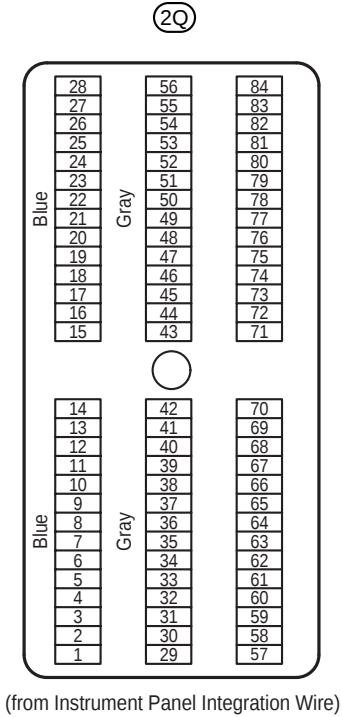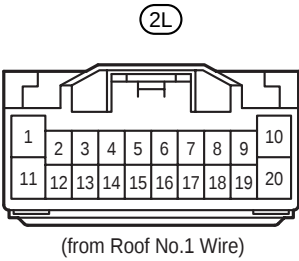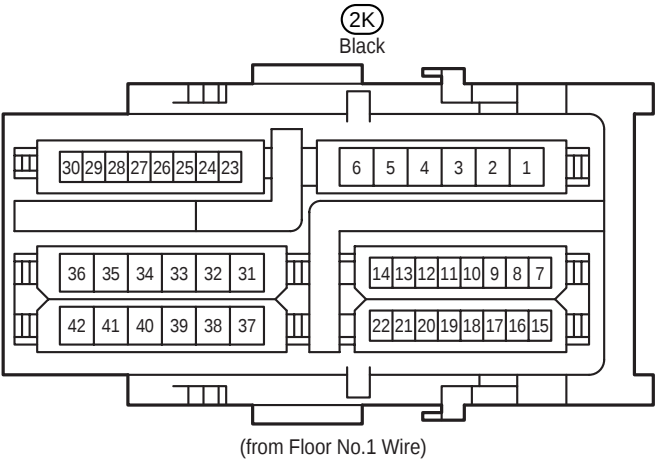

F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

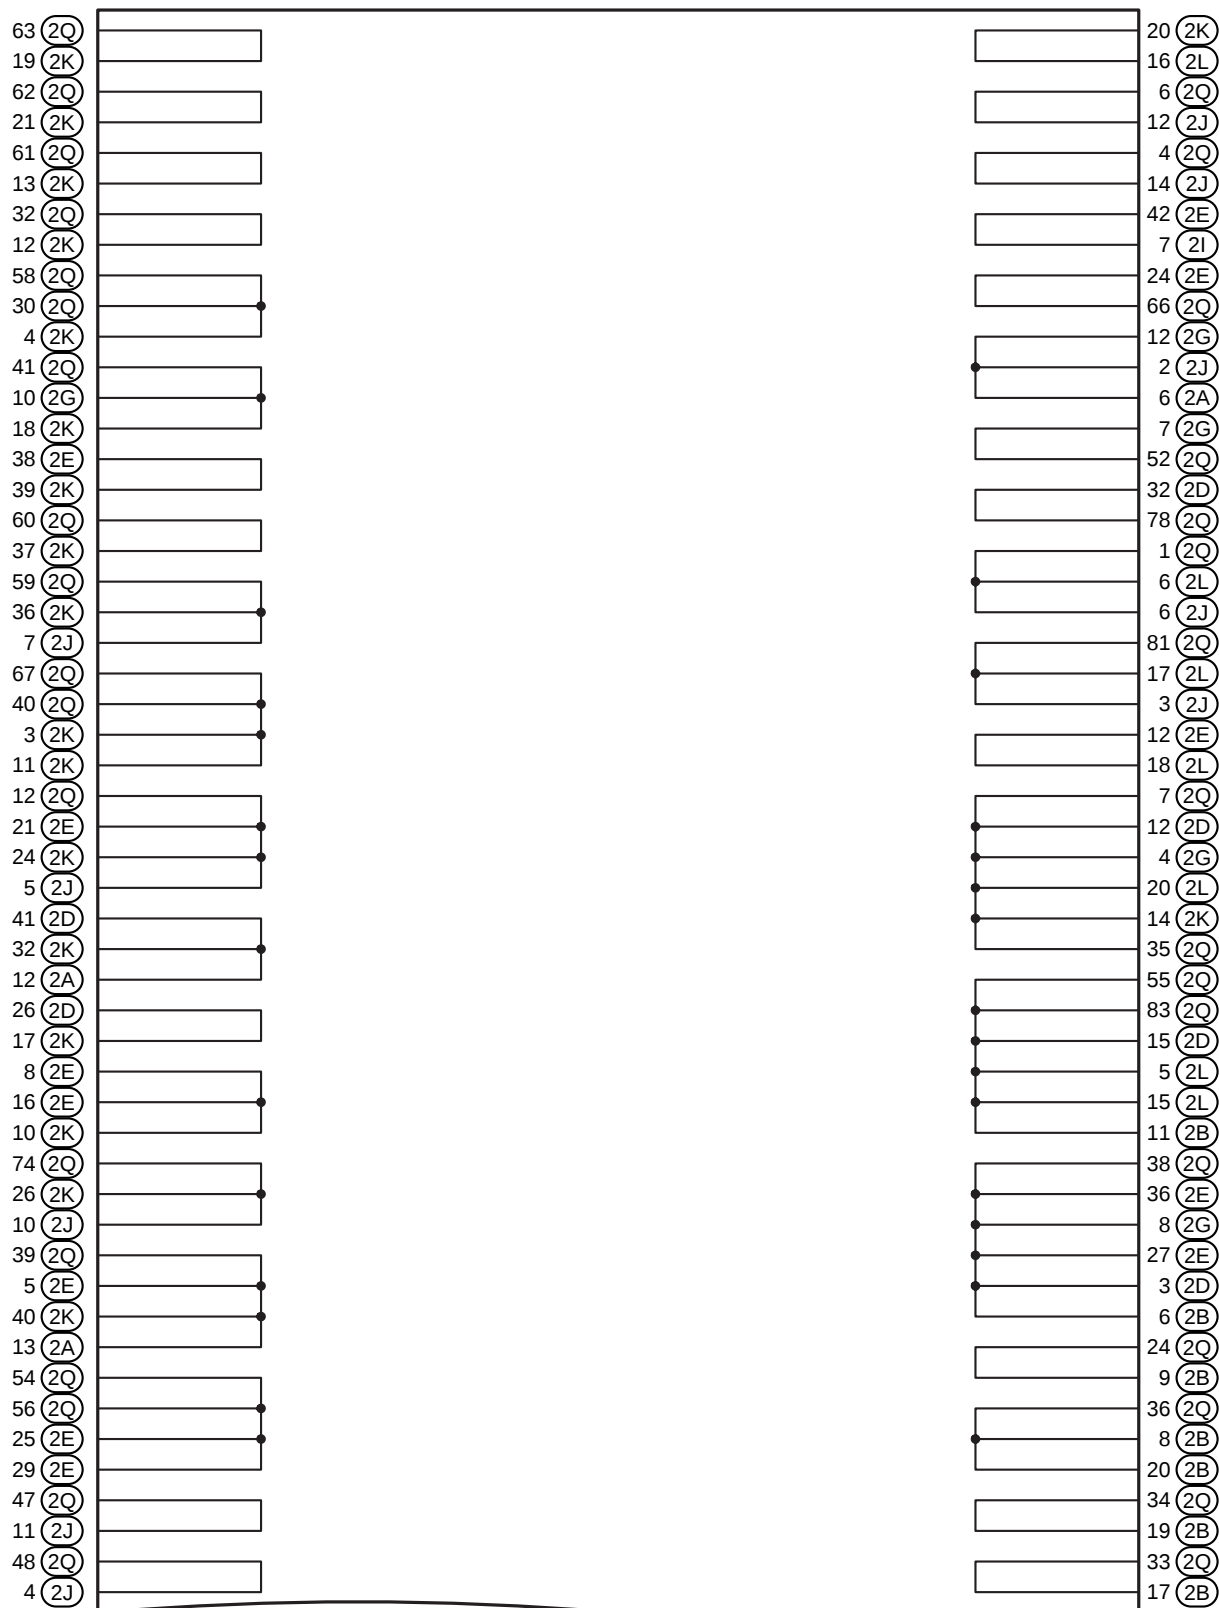

(Cont. next page)


(Cont'd)

53	(2Q)	
16	(2A)	
42	(2Q)	
68	(2Q)	•
2	(2B)	
42	(2D)	
25	(2B)	
40	(2D)	
14	(2B)	
38	(2D)	
1	(2A)	
33	(2E)	
1	(2B)	
8	(2D)	
10	(2D)	•
9	(2A)	
6	(2G)	
16	(2B)	
41	(2E)	
10	(2A)	
9	(2G)	
4	(2D)	•
7	(2B)	
39	(2D)	
14	(2A)	•
34	(2K)	
49	(2Q)	
1	(2E)	•
4	(2A)	
6	(2E)	
8	(2A)	
2	(2E)	
15	(2B)	
4	(2E)	
2	(2A)	
29	(2D)	
33	(2D)	•
15	(2A)	
29	(2Q)	
31	(2Q)	•
4	(2B)	•
27	(2K)	
14	(2E)	
37	(2Q)	
28	(2Q)	
84	(2Q)	•
30	(2K)	•
1	(2J)	
72	(2Q)	
28	(2K)	•
8	(2J)	

(Cont. next page)


F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

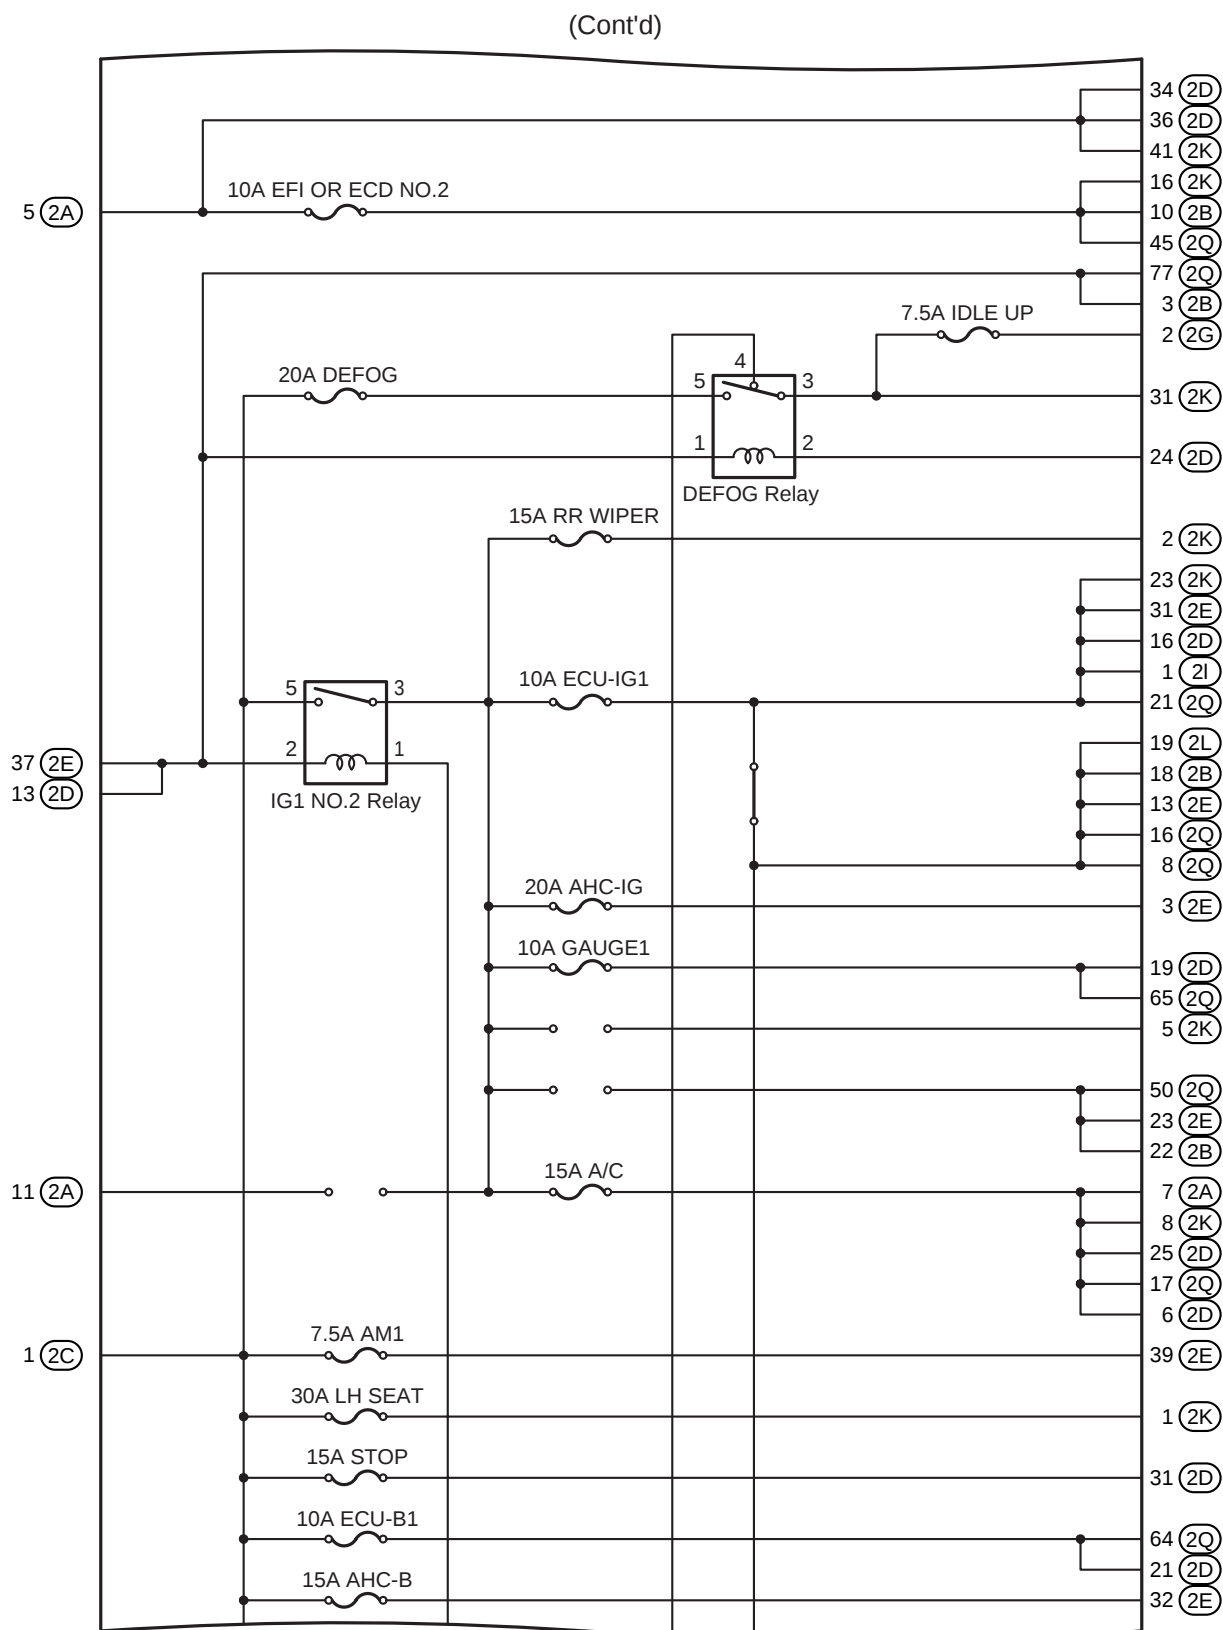

(Cont. next page)


(Cont'd)

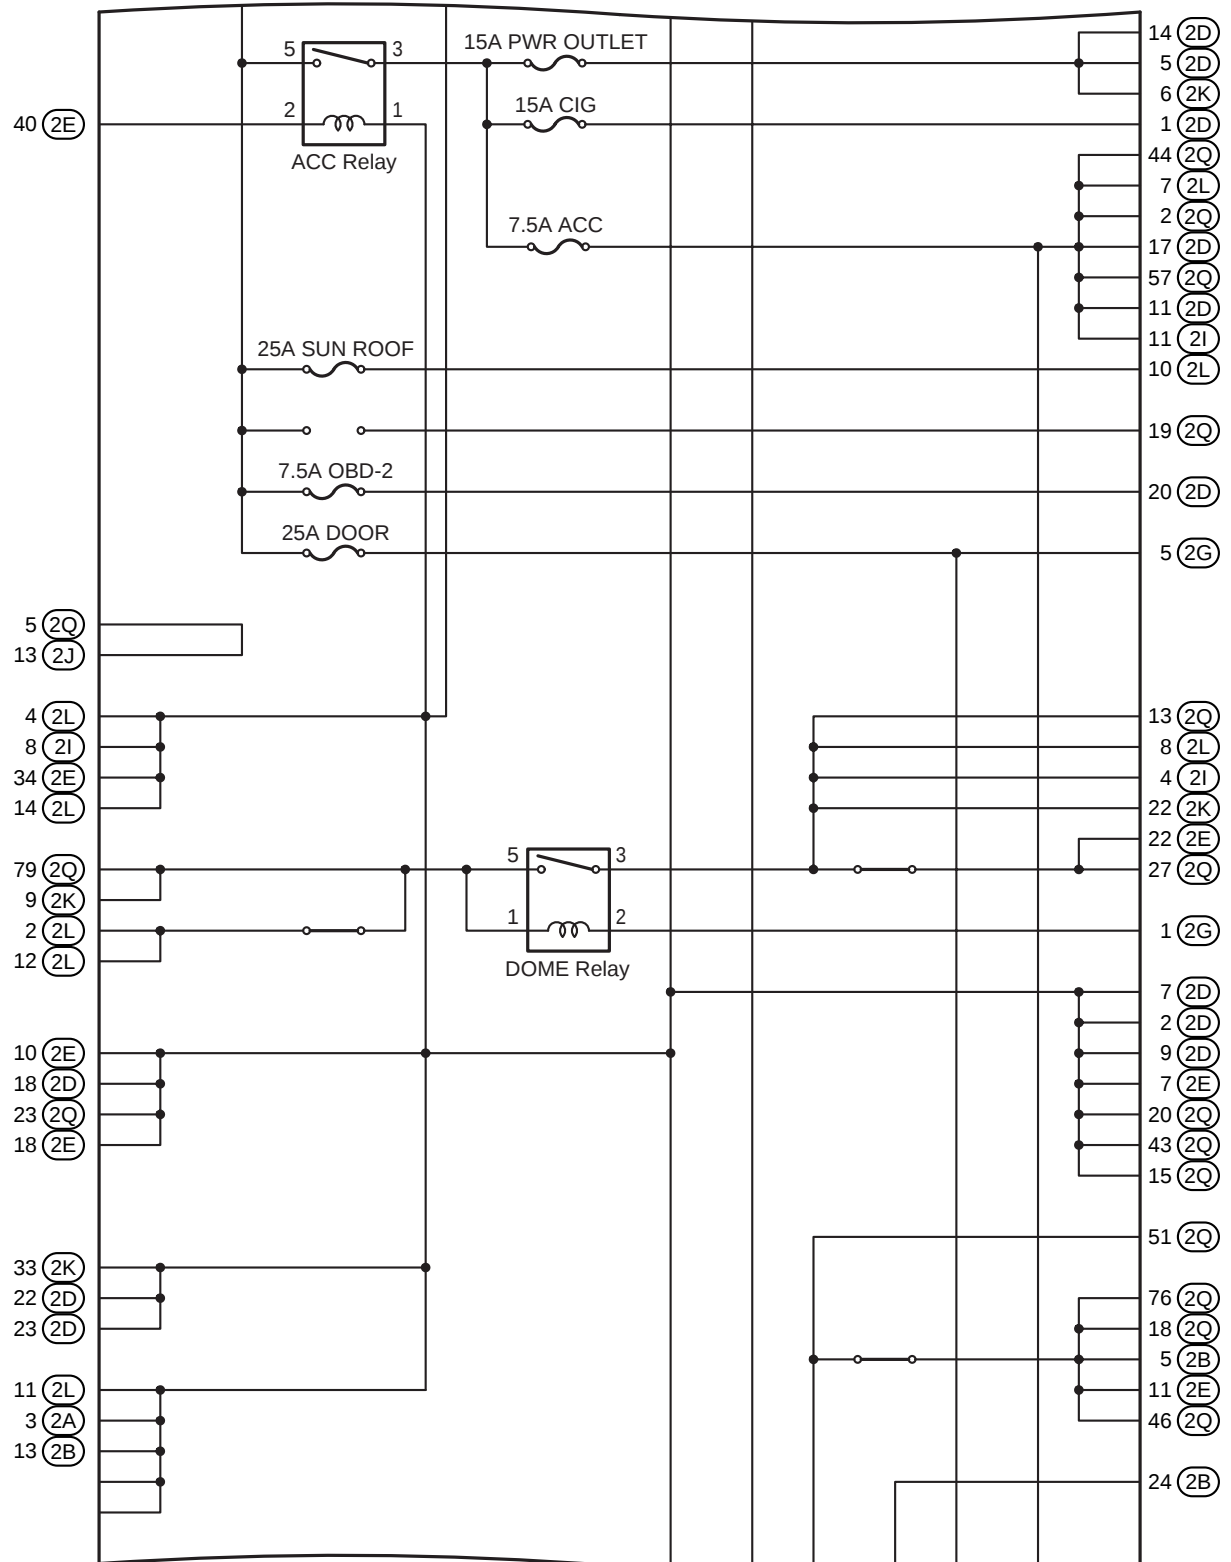

(Cont. next page)

F RELAY LOCATIONS

[Cowl Side J/B LH Inner Circuit]

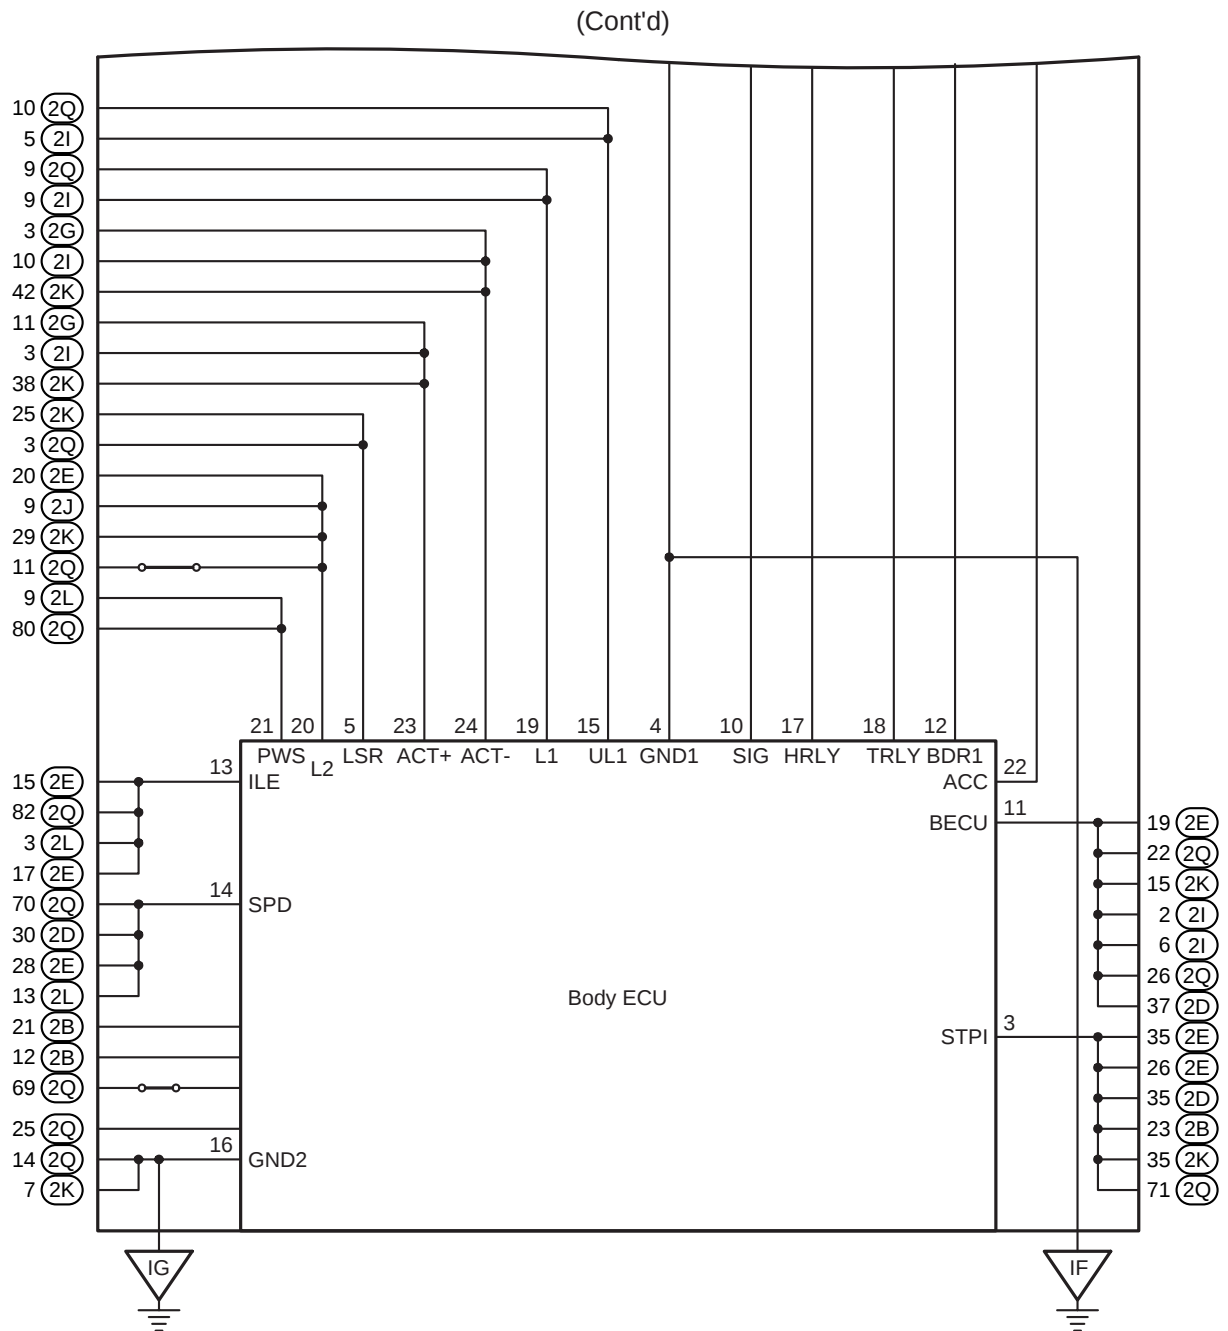



F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)

(Inner Circuit : See Page 46)

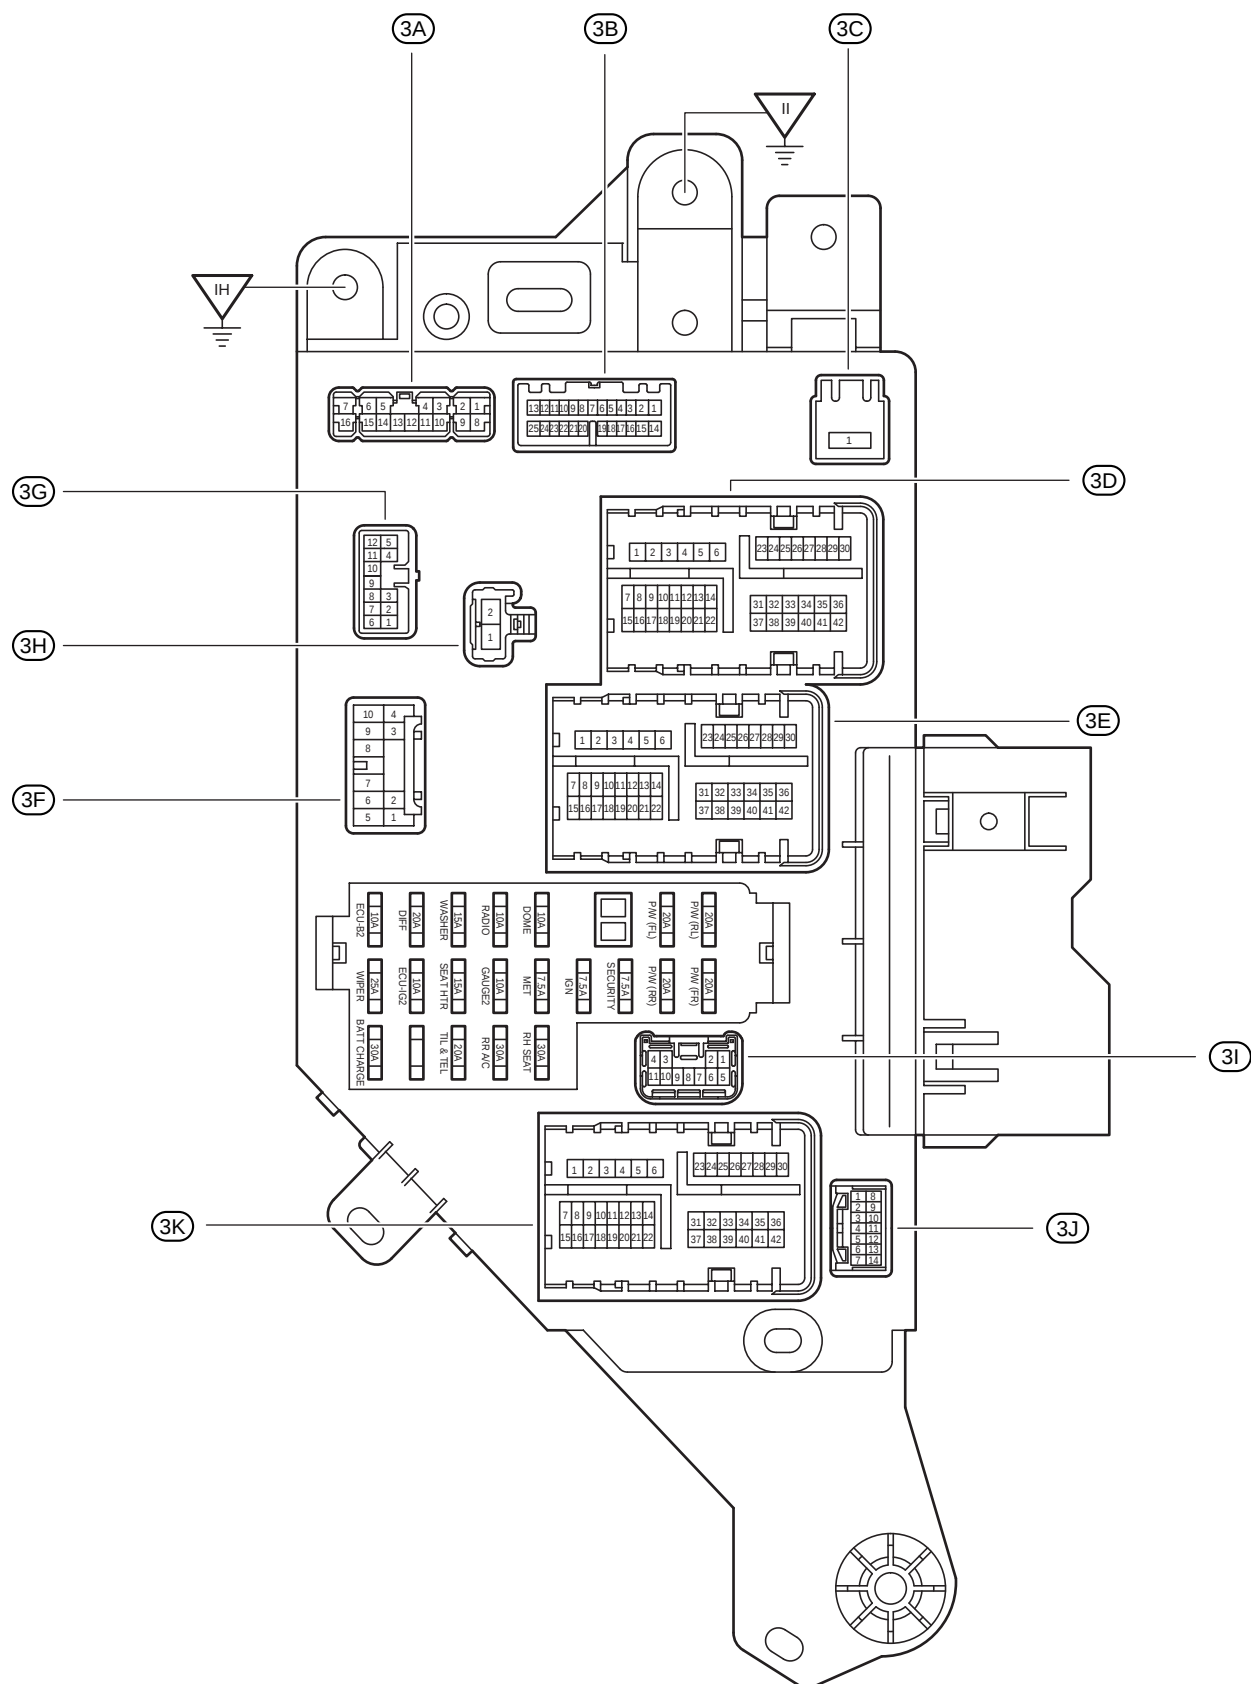

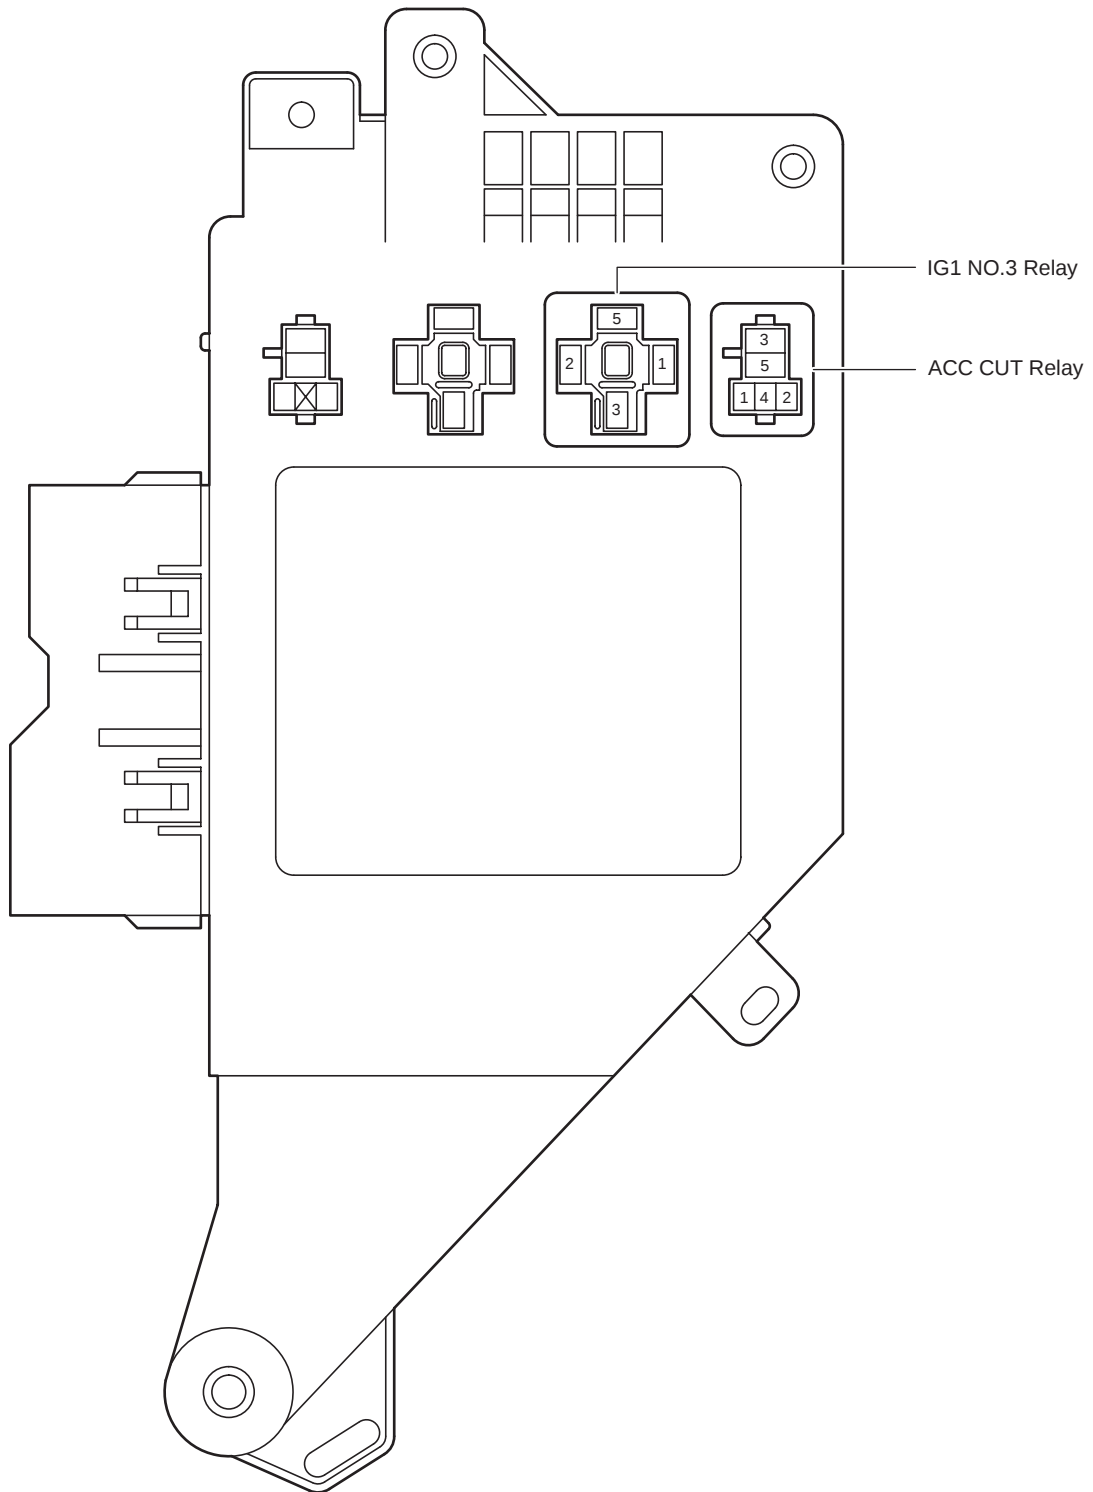



F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)

(Inner Circuit : See Page 46)

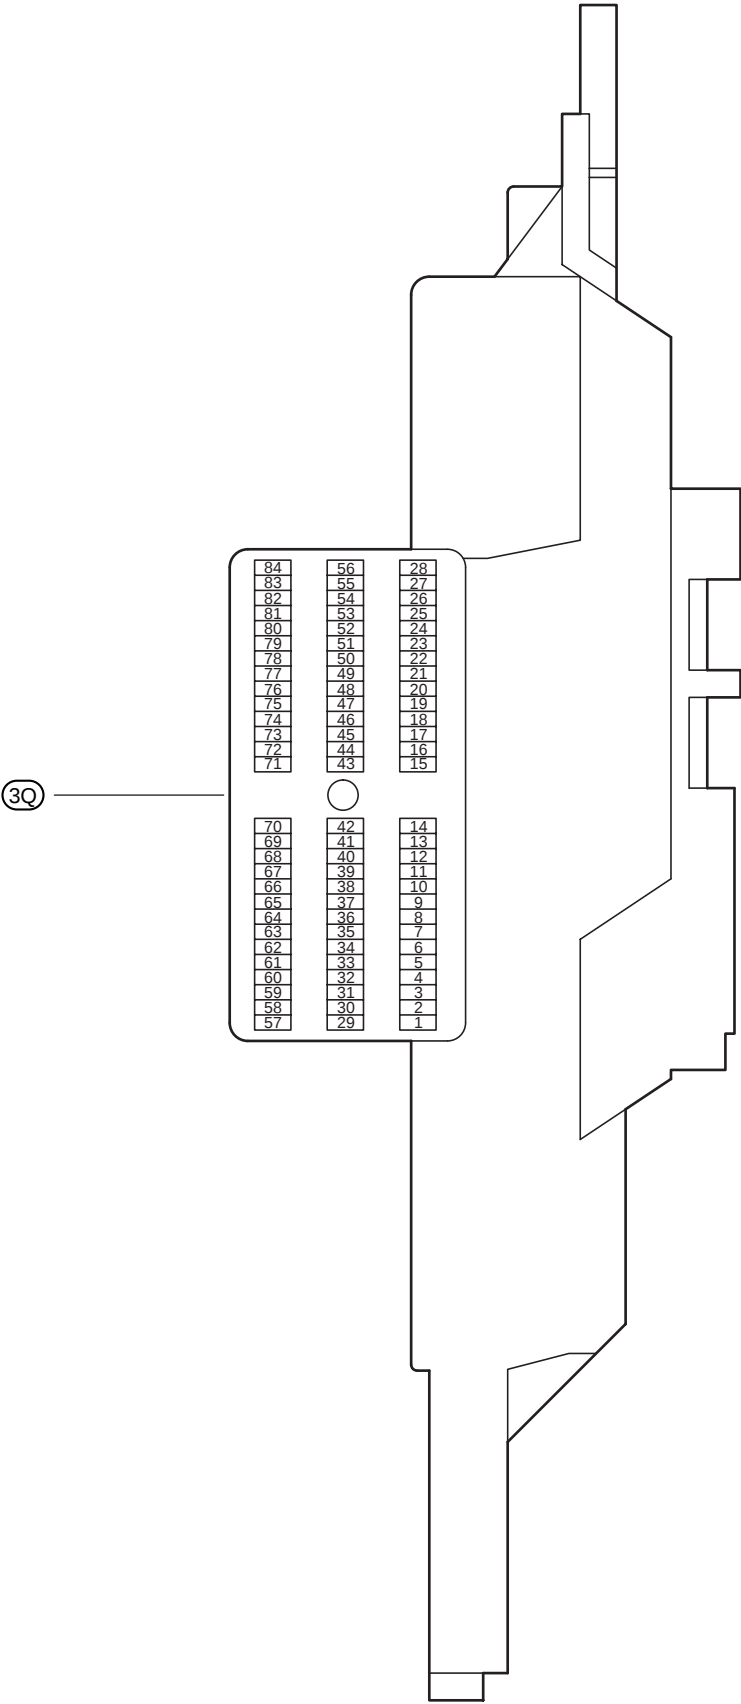










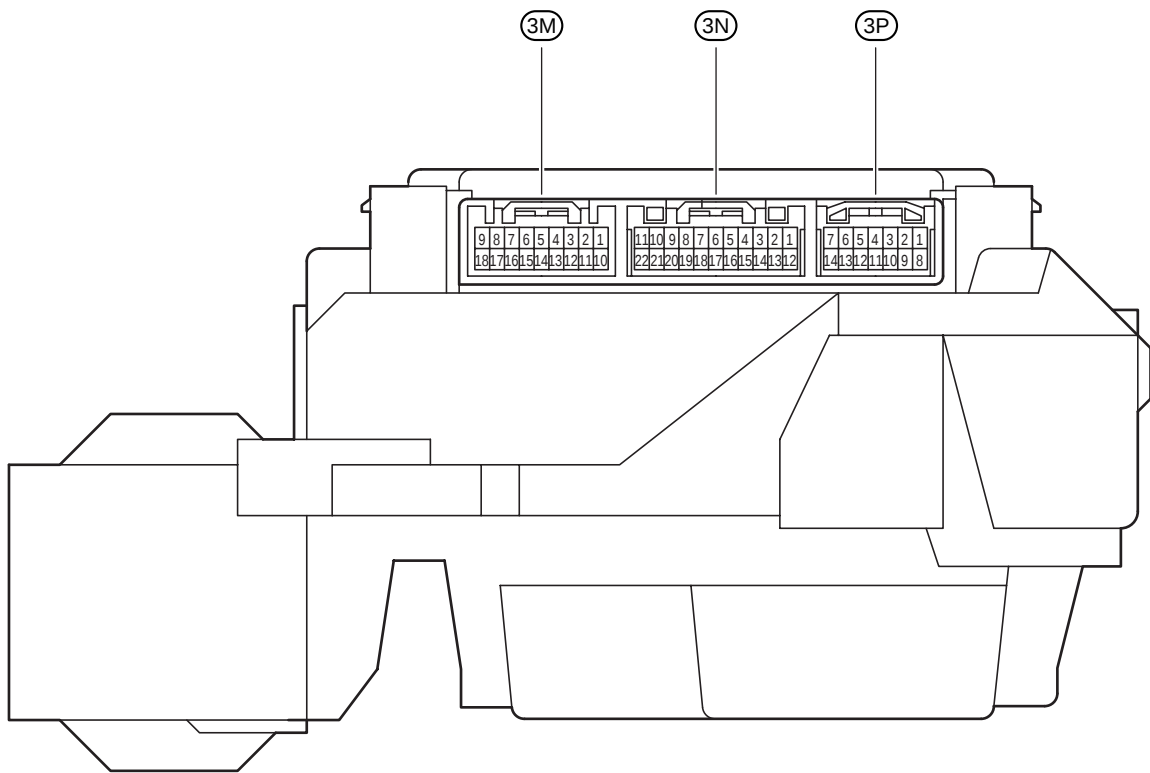







F RELAY LOCATIONS

 : Cowl Side J/B RH

Right Kick Panel (See Page 20)

(Inner Circuit : See Page 46)

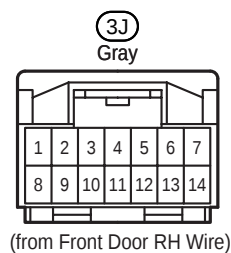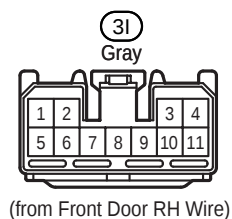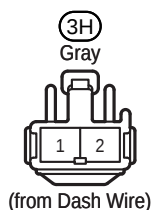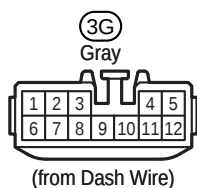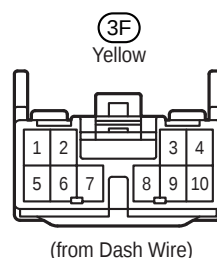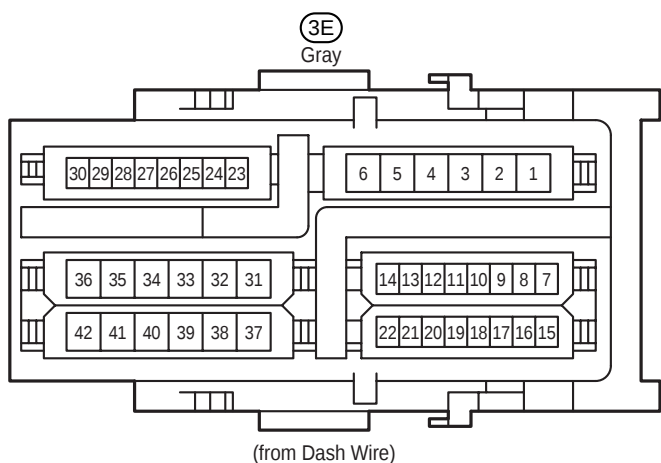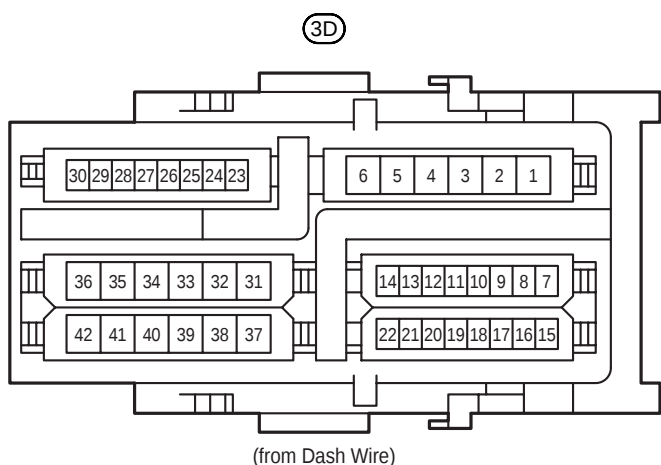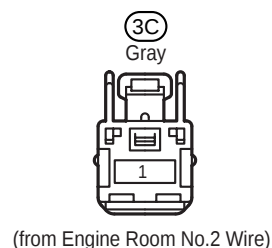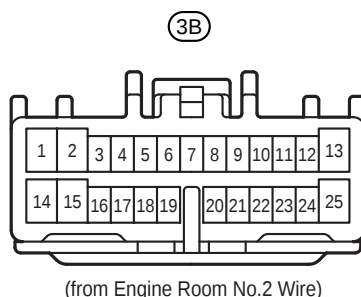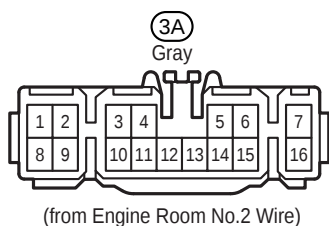


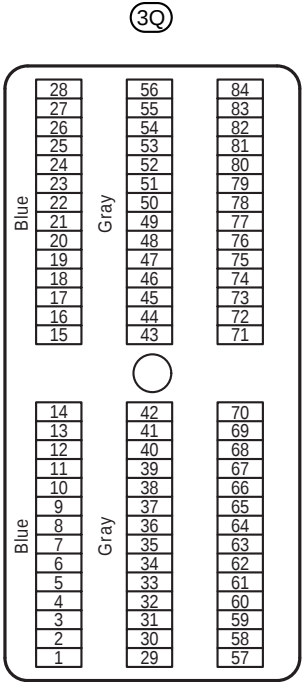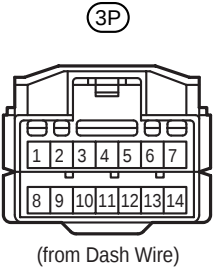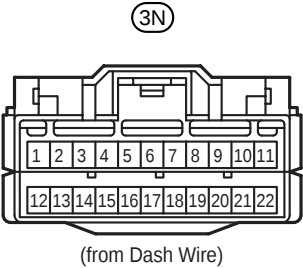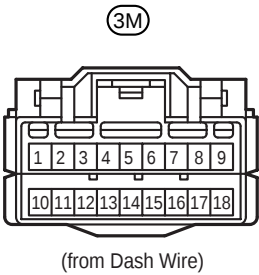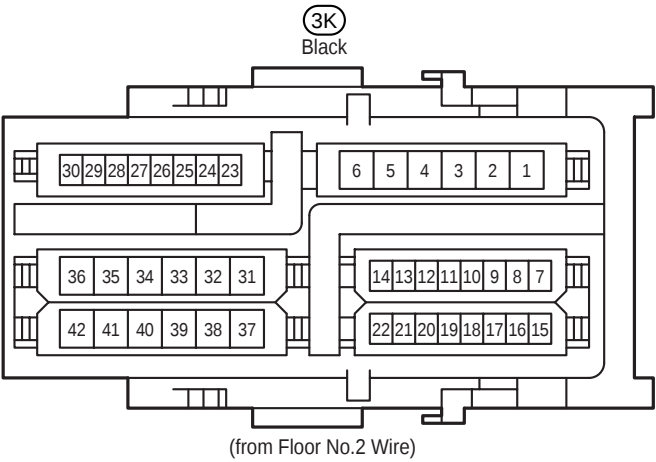


(from Instrument Panel Integration Wire)

F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

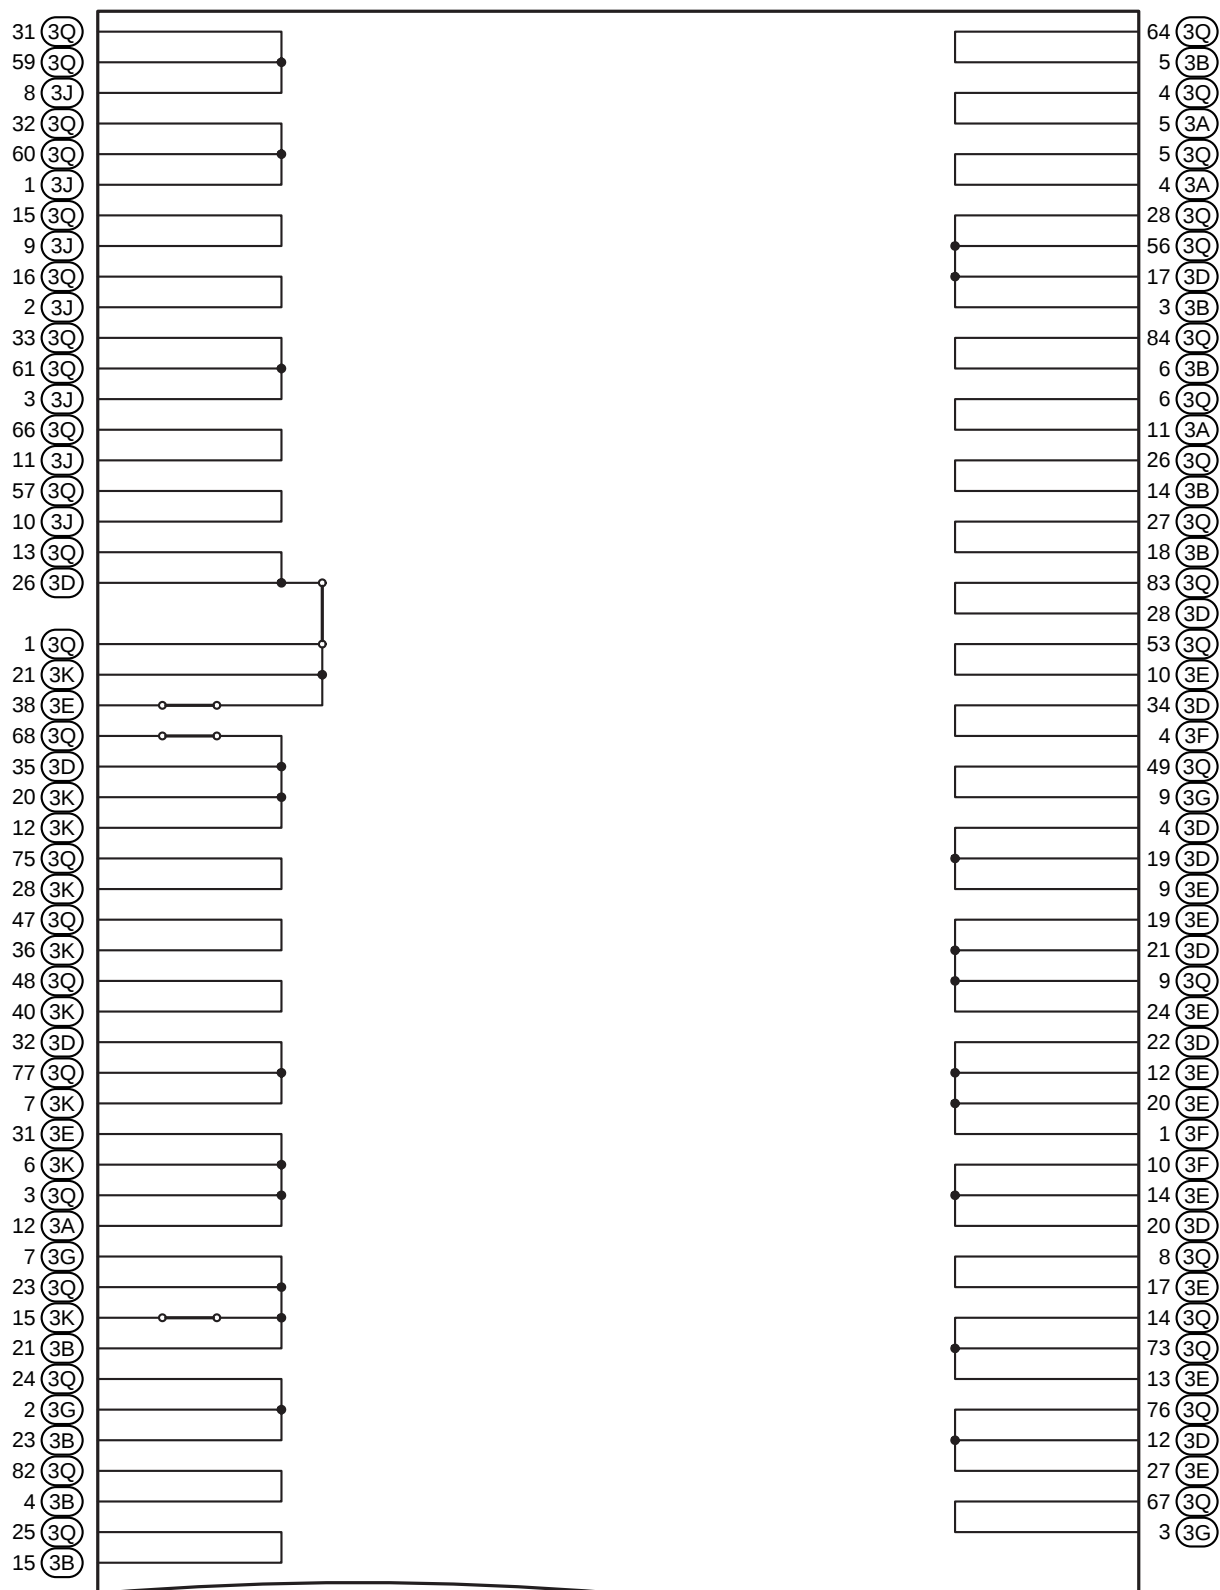


(Cont. next page)

 


(Cont. next page)

F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

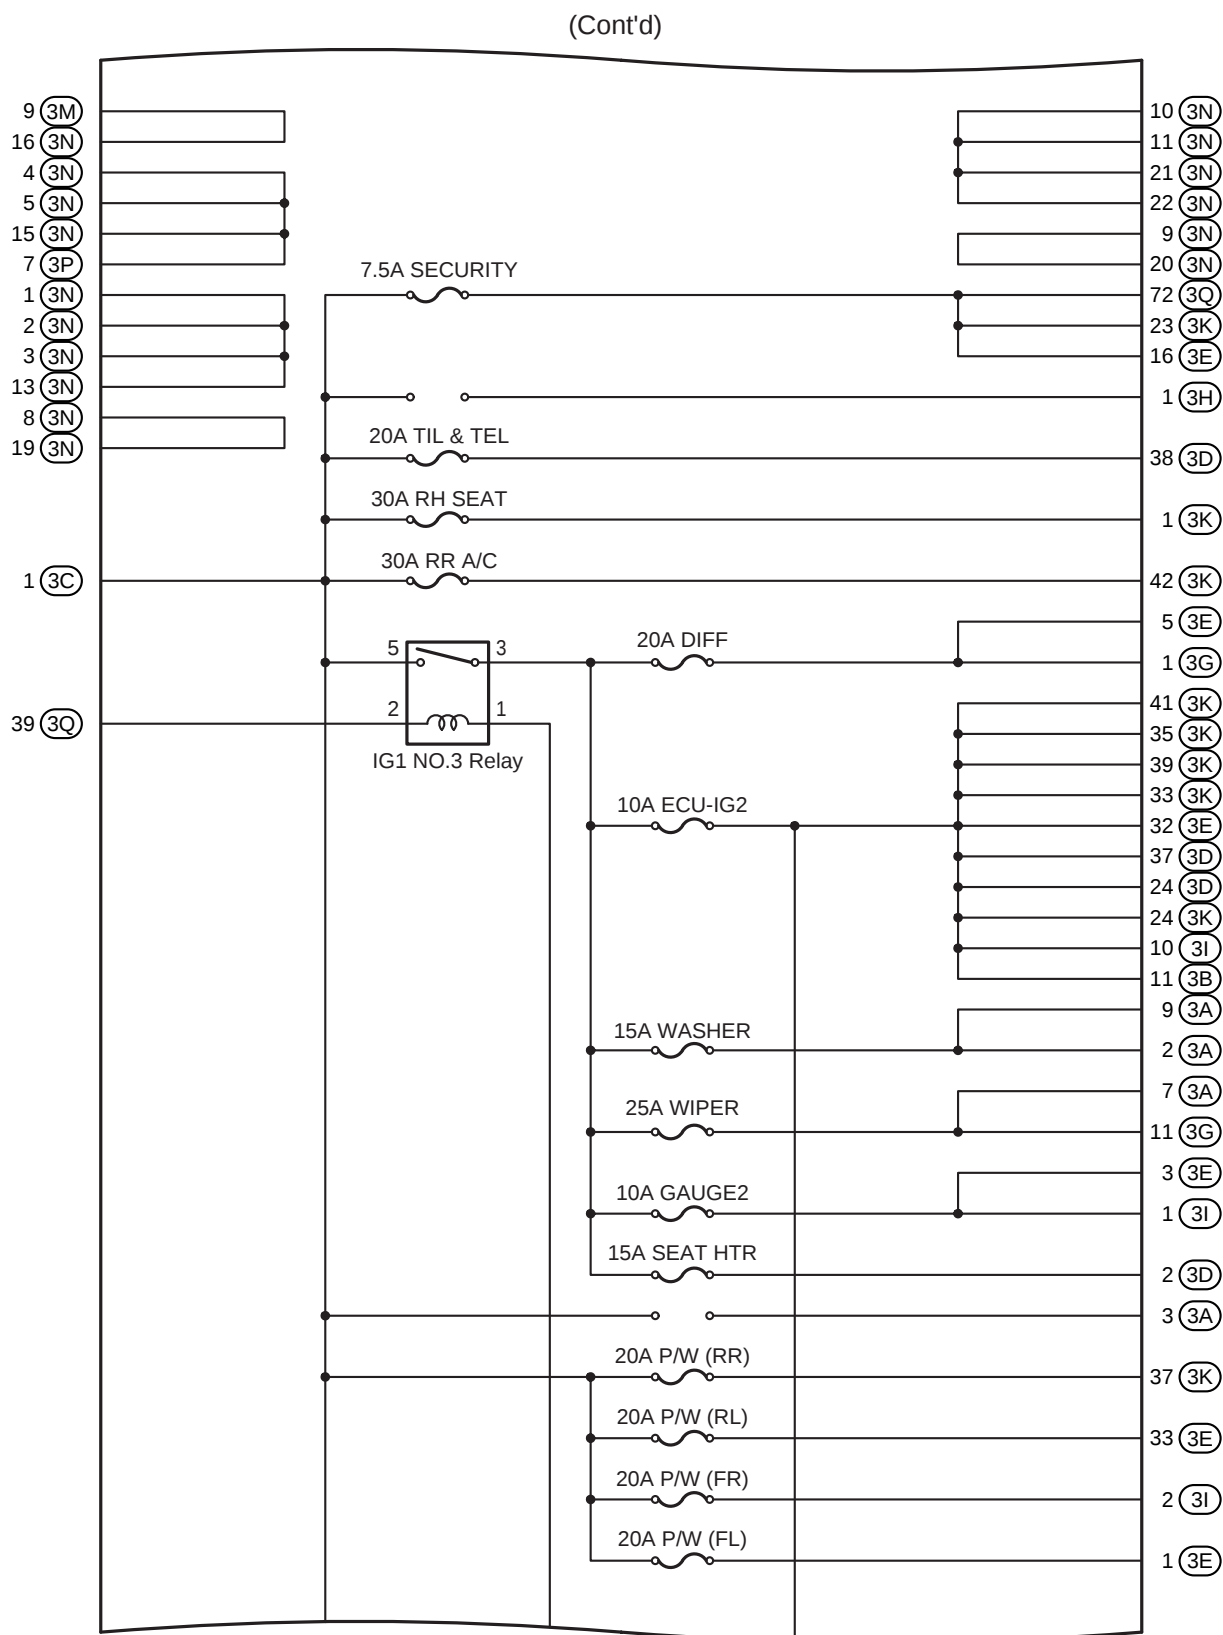


(Cont. next page)

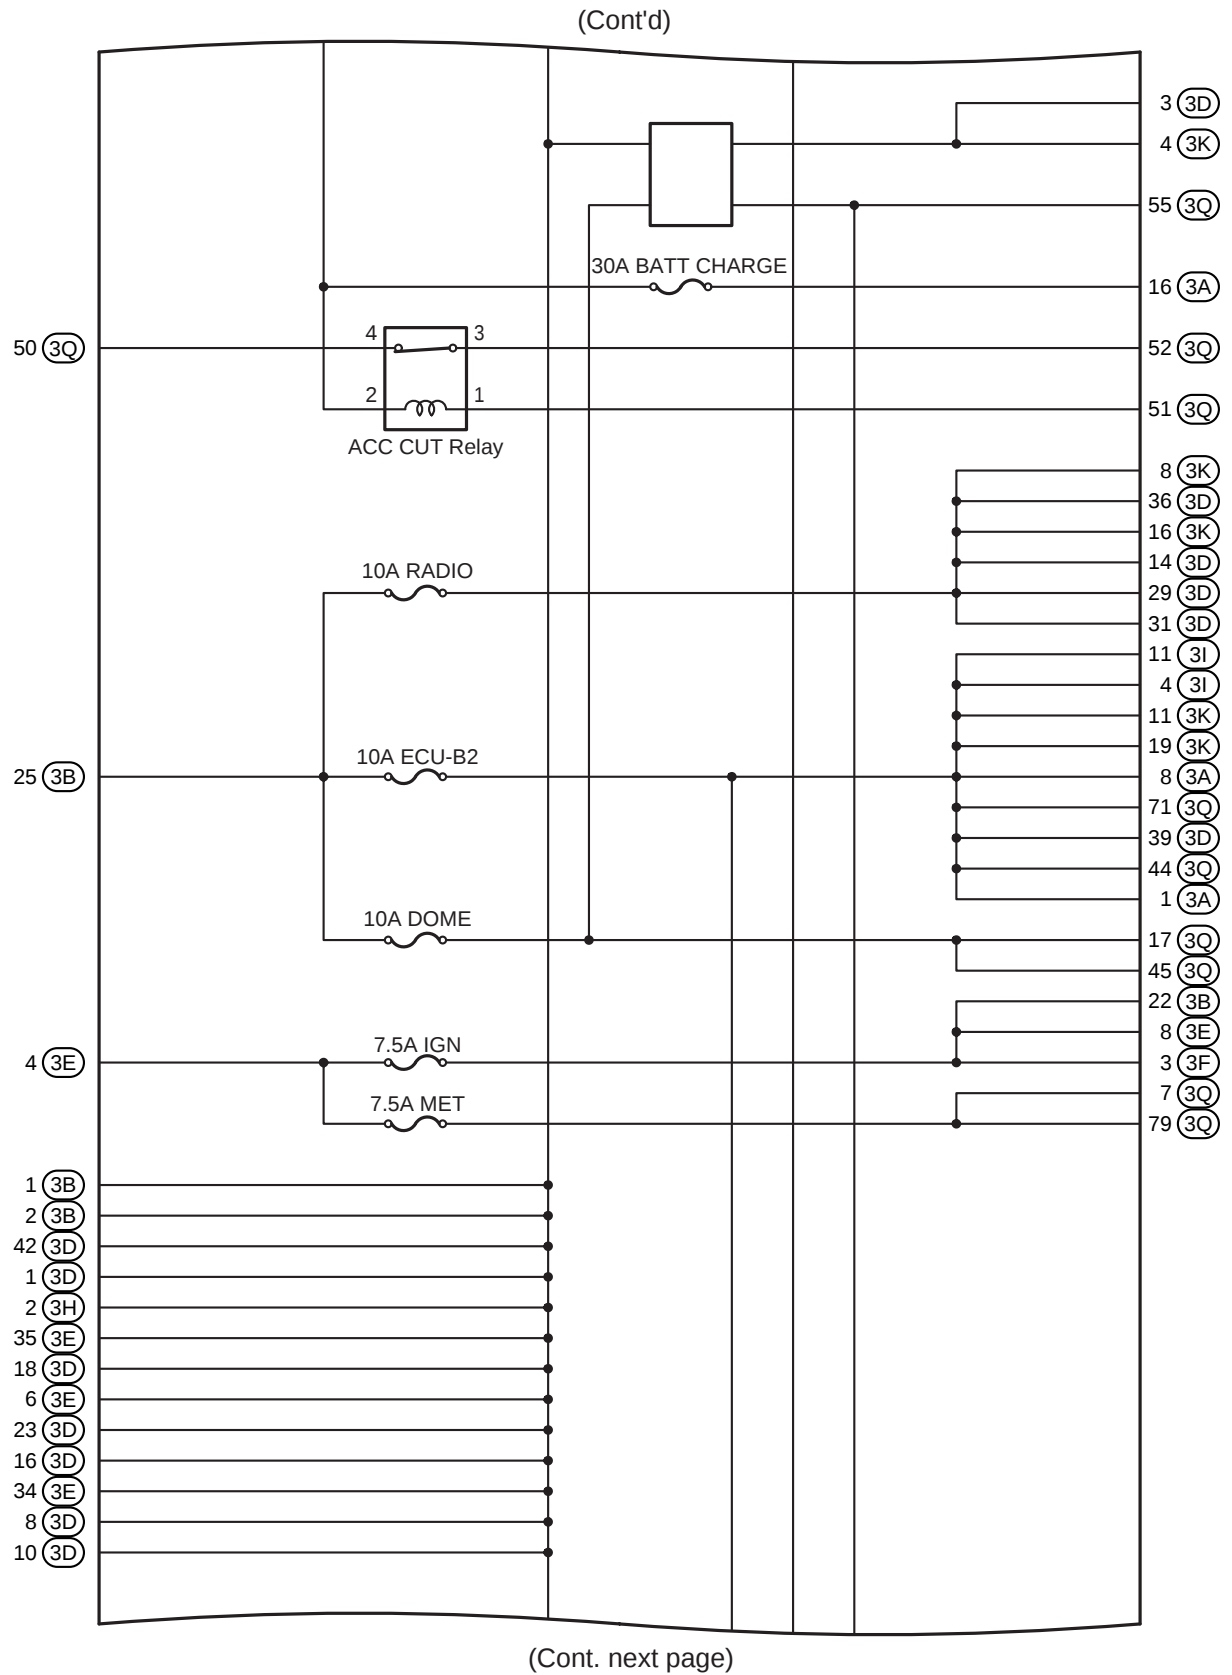

F RELAY LOCATIONS


[Cowl Side J/B RH Inner Circuit]

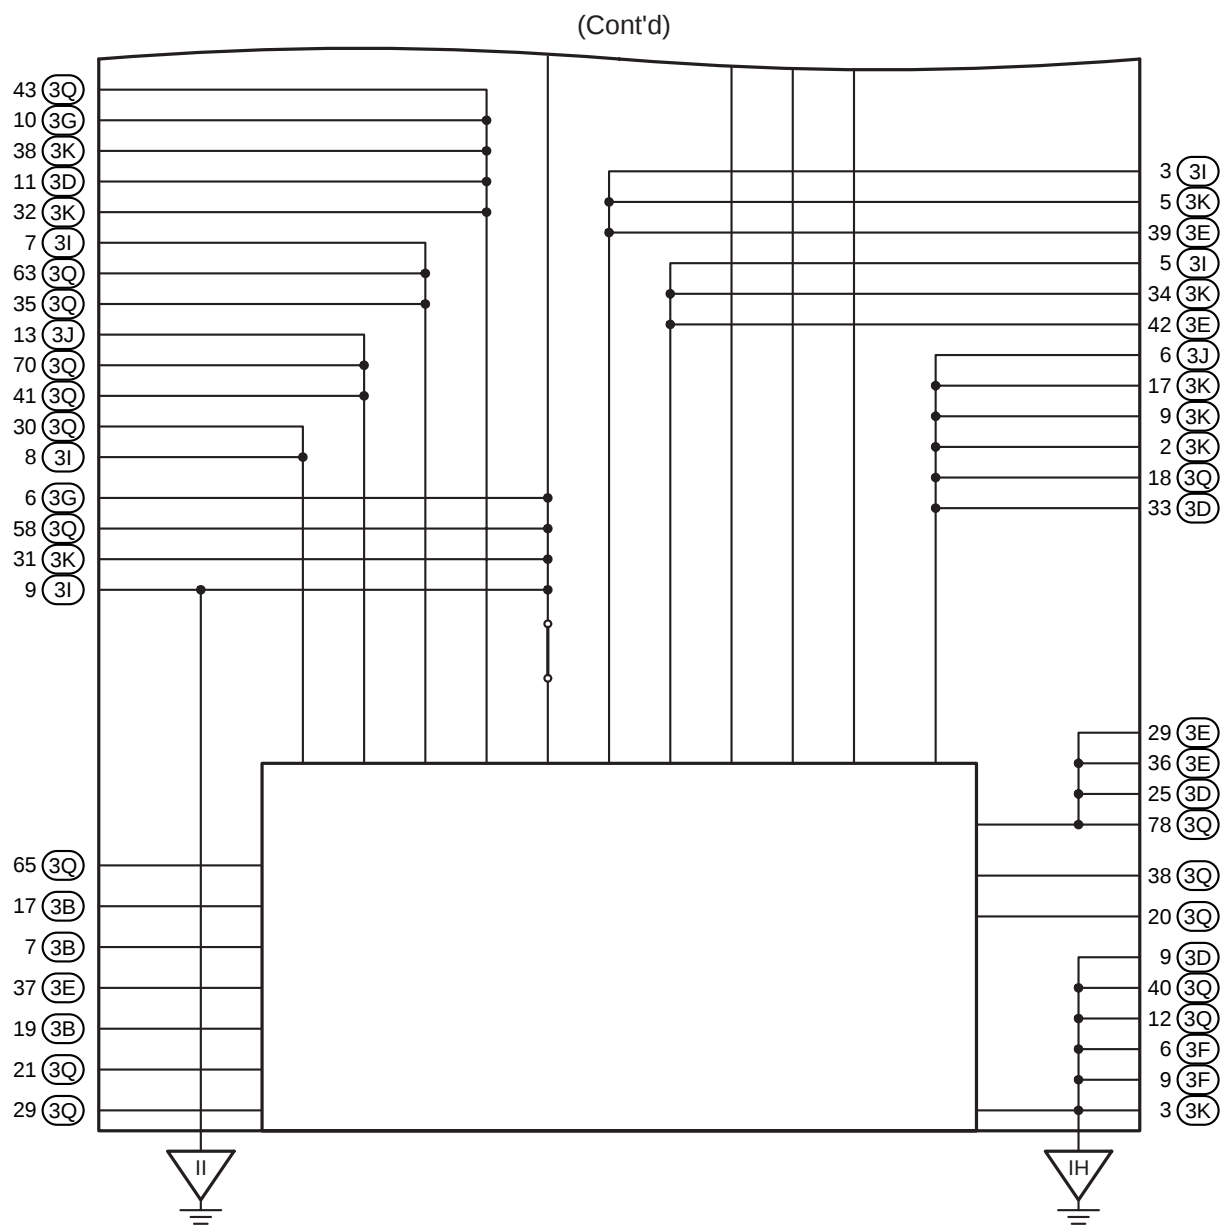

F RELAY LOCATIONS


○ : J/B No.4

Instrument Panel Center (See Page 20)

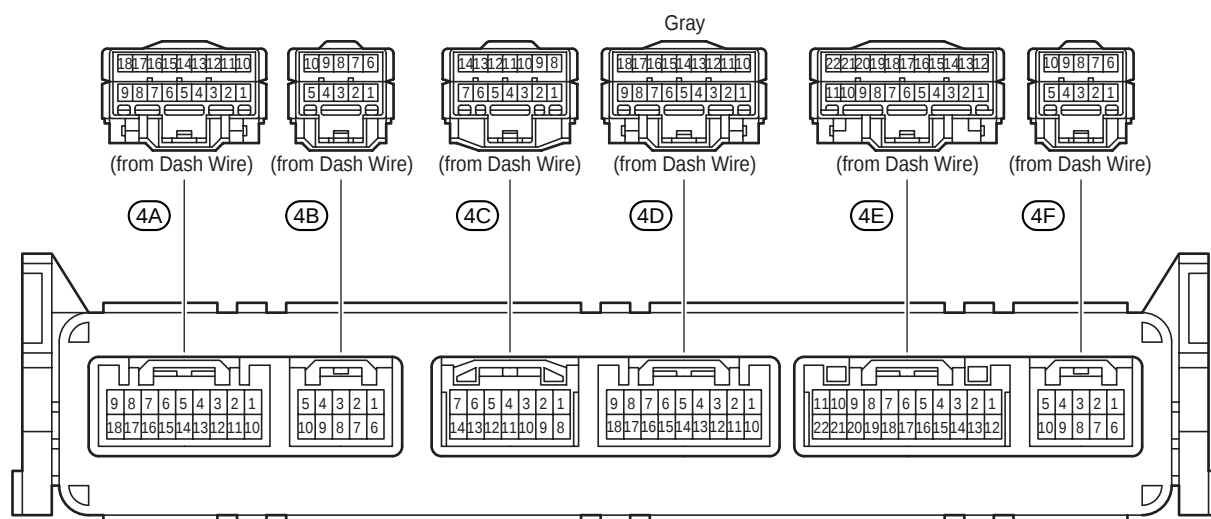


F RELAY LOCATIONS

[J/B No.4 Inner Circuit]

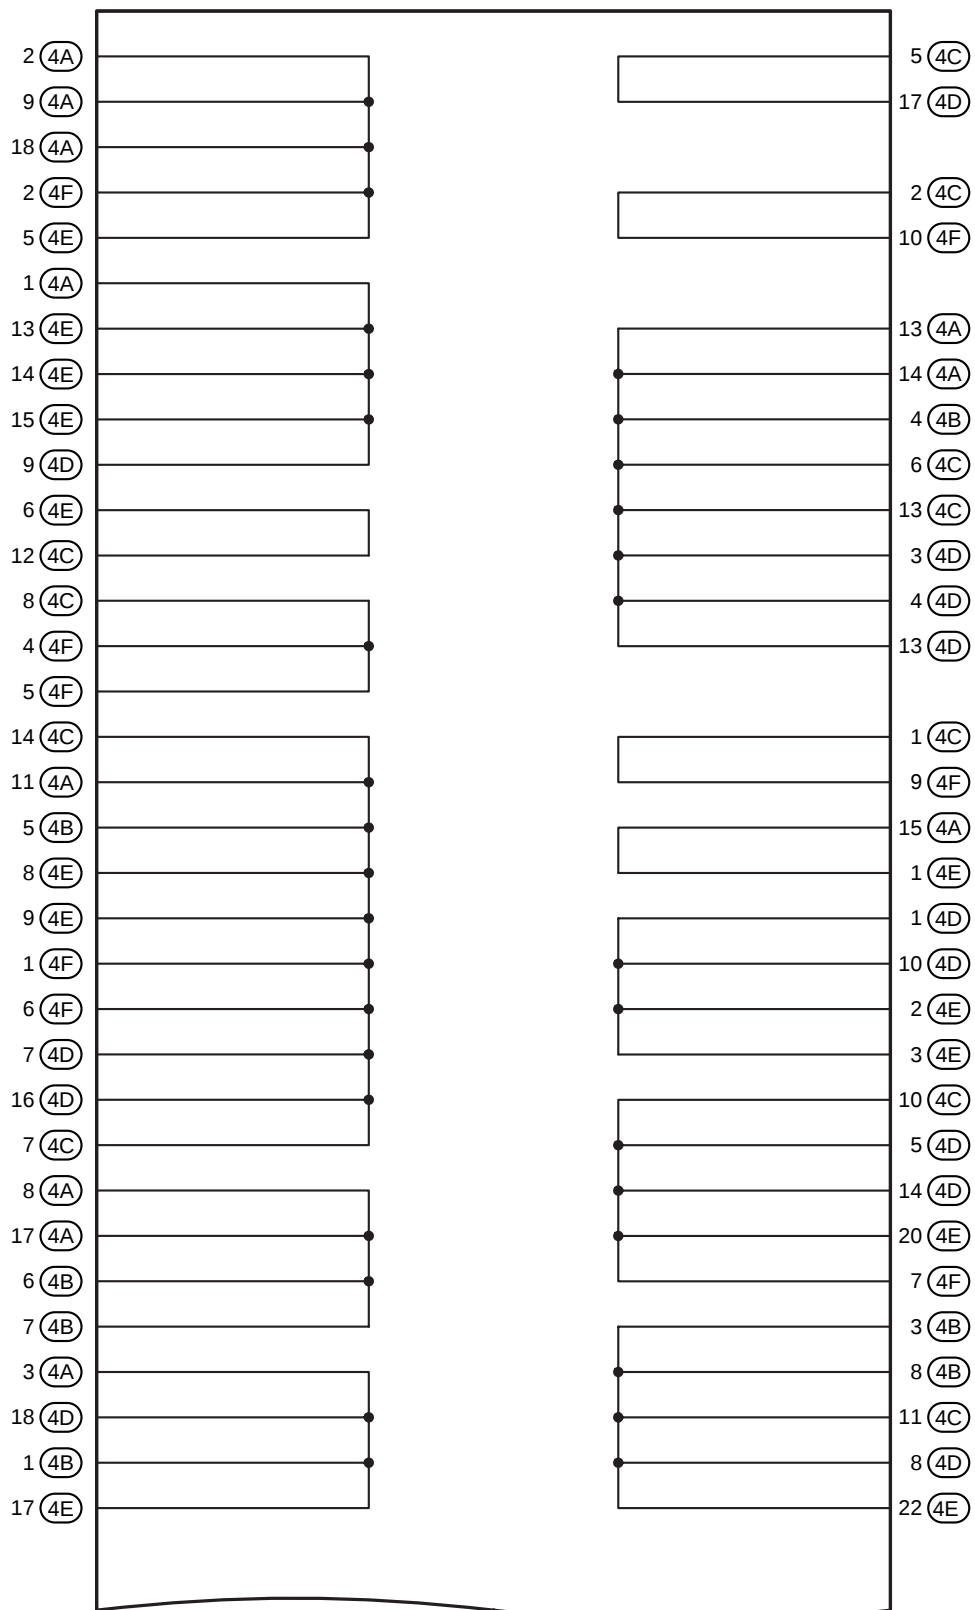

(Cont. next page)


(Cont'd)

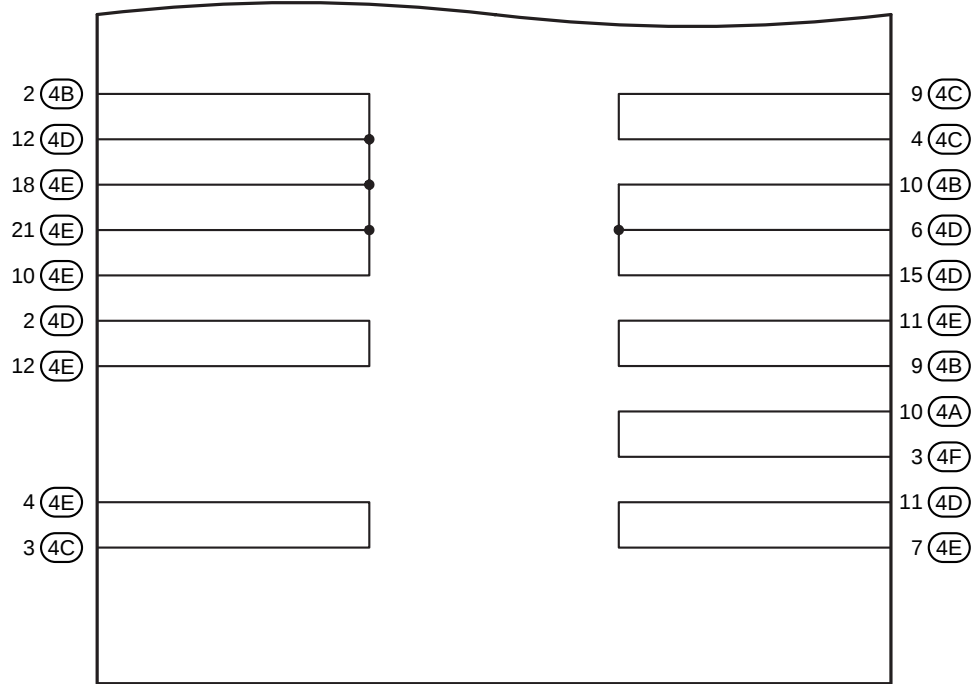

F RELAY LOCATIONS


○ : J/B No.5

Behind the Combination Meter (See Page 20)

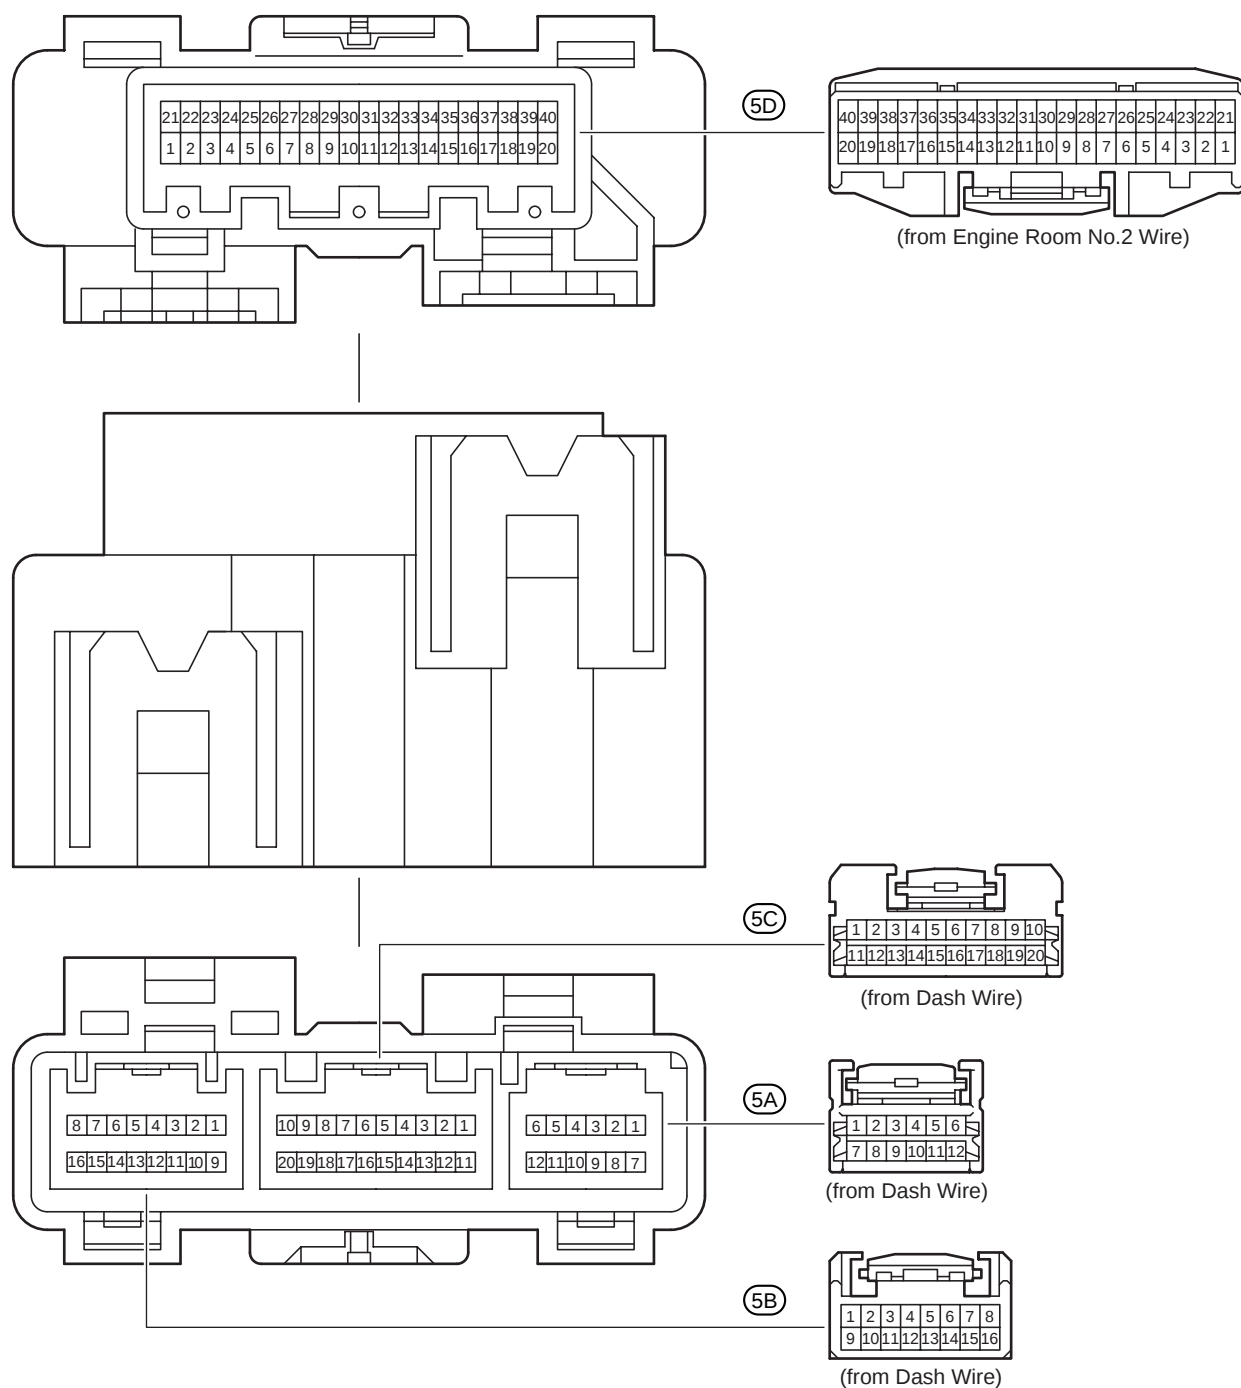

F RELAY LOCATIONS

[J/B No.5 Inner Circuit]

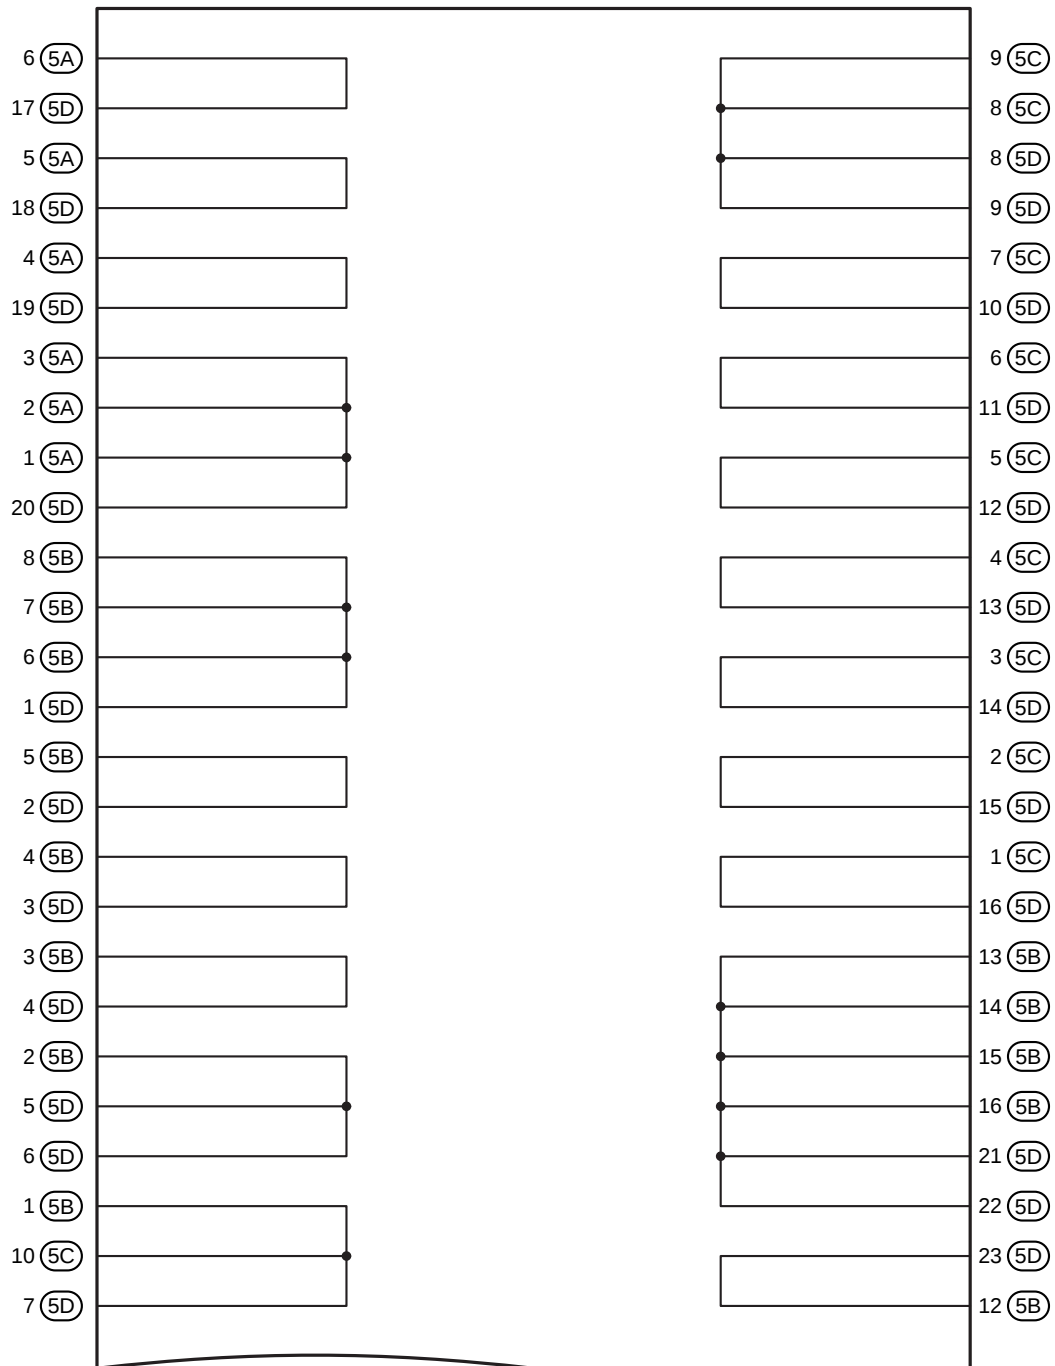


(Cont. next page)

(Cont'd)

24 (5D)			33 (5D)
11 (5B)			14 (5C)
25 (5D)			34 (5D)
10 (5B)			13 (5C)
26 (5D)			35 (5D)
9 (5B)			36 (5D)
27 (5D)			12 (5C)
20 (5C)			11 (5C)
28 (5D)			12 (5A)
19 (5C)			37 (5D)
29 (5D)			38 (5D)
18 (5C)			11 (5A)
30 (5D)			39 (5D)
17 (5C)			10 (5A)
31 (5D)			40 (5D)
16 (5C)			9 (5A)
32 (5D)			8 (5A)
15 (5C)			7 (5A)


F RELAY LOCATIONS

 : J/B No.6	Behind the Glove Box (See Page 20)
--	------------------------------------

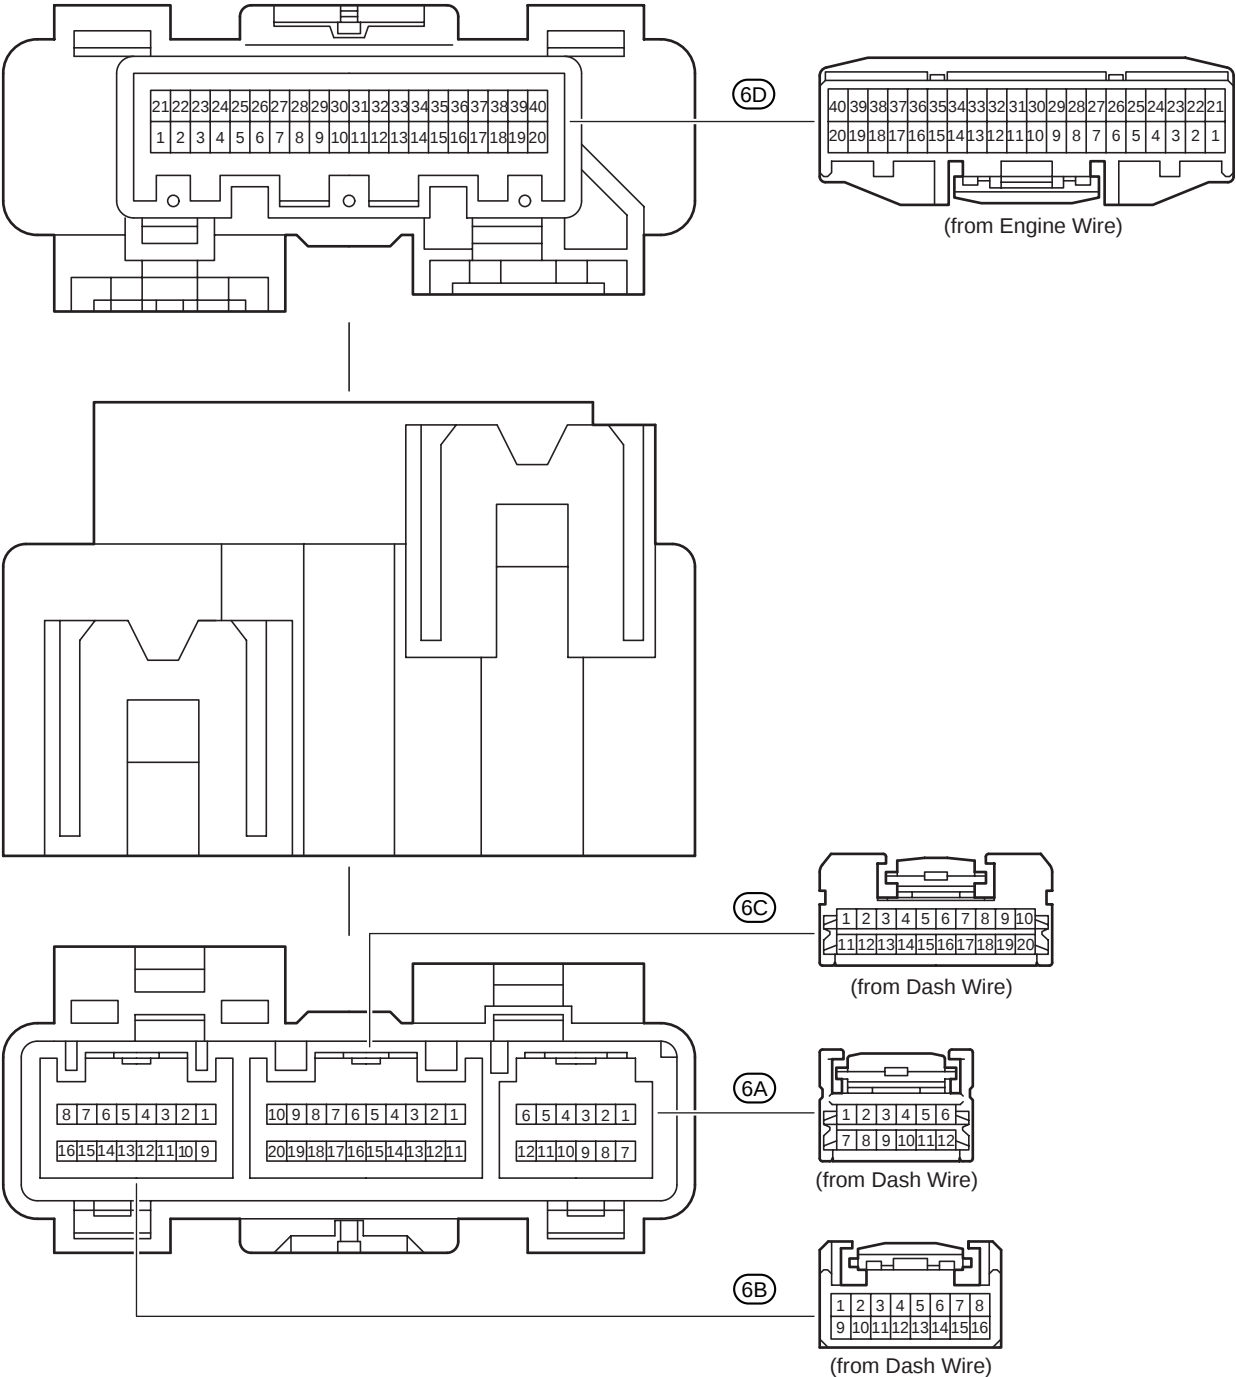


F RELAY LOCATIONS

[J/B No.6 Inner Circuit]

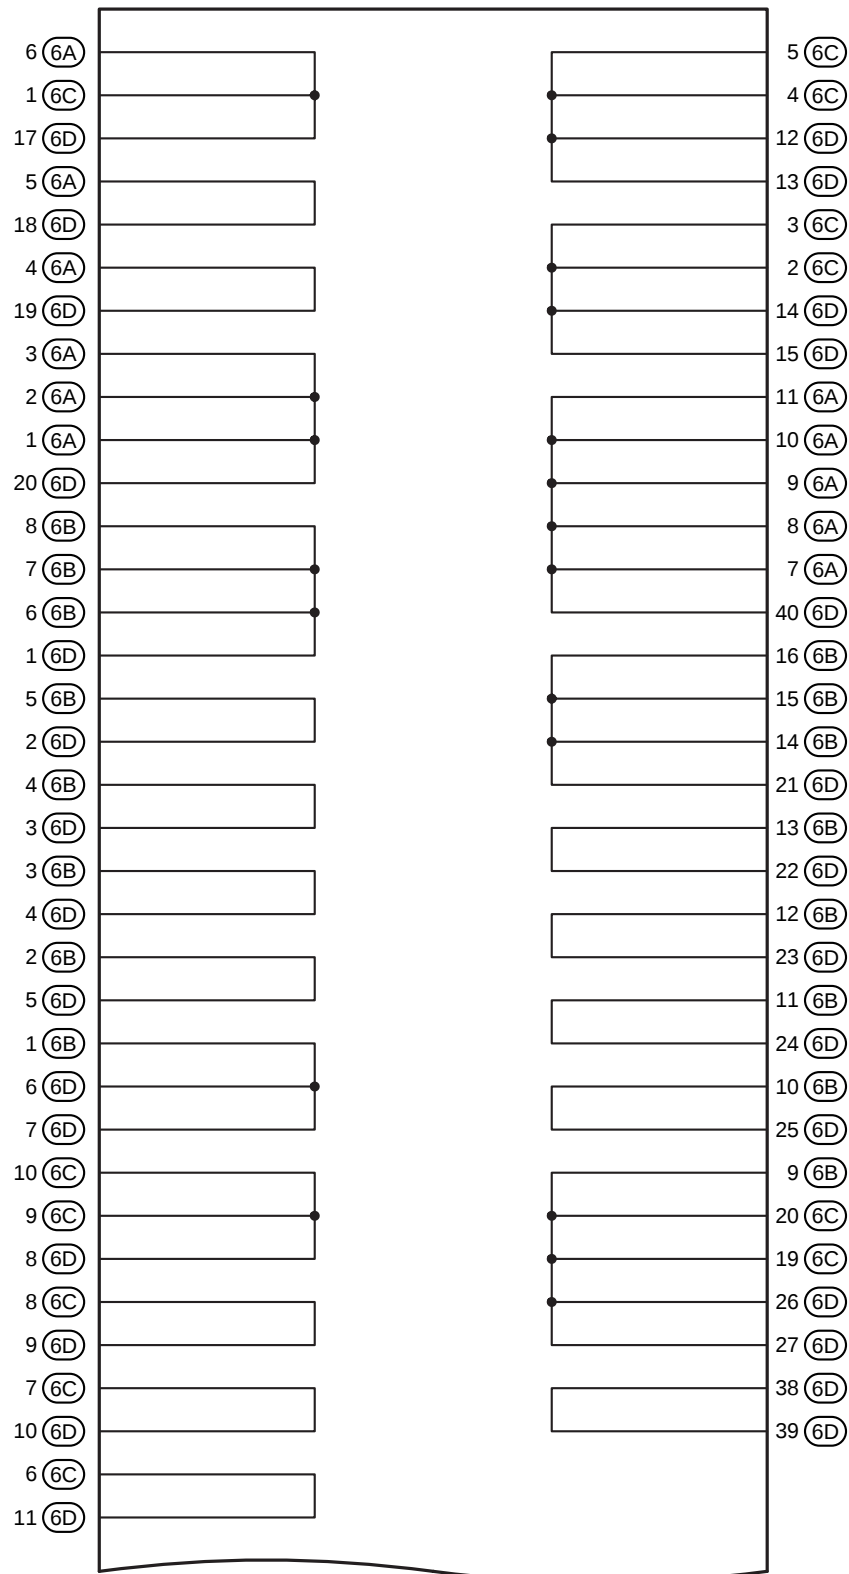

(Cont. next page)


(Cont'd)

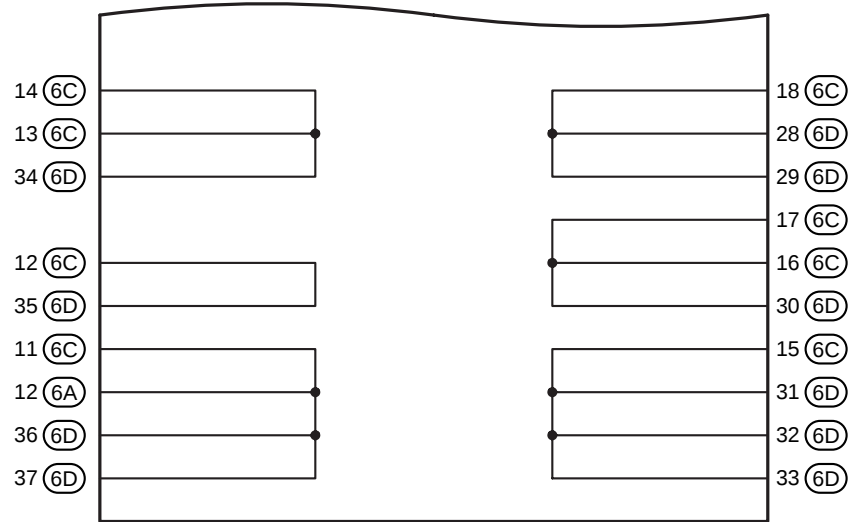

F RELAY LOCATIONS


○ : J/B No.7

Behind the Glove Box (See Page 20)

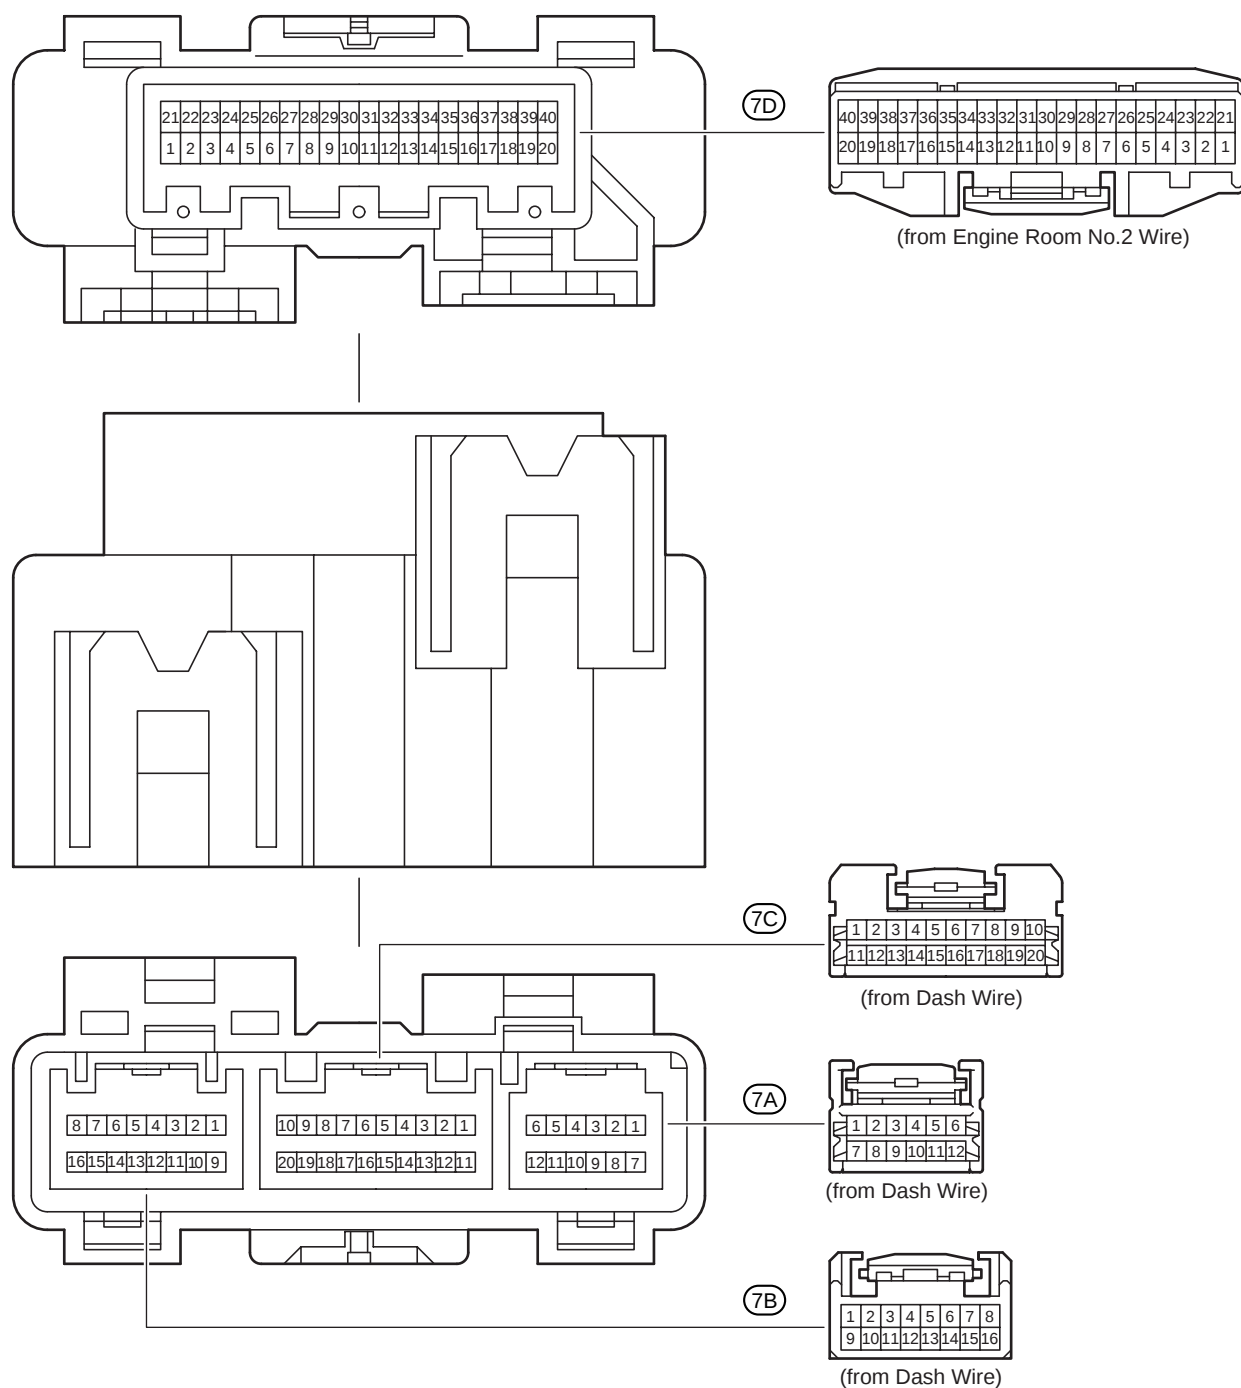

F RELAY LOCATIONS

[J/B No.7 Inner Circuit]

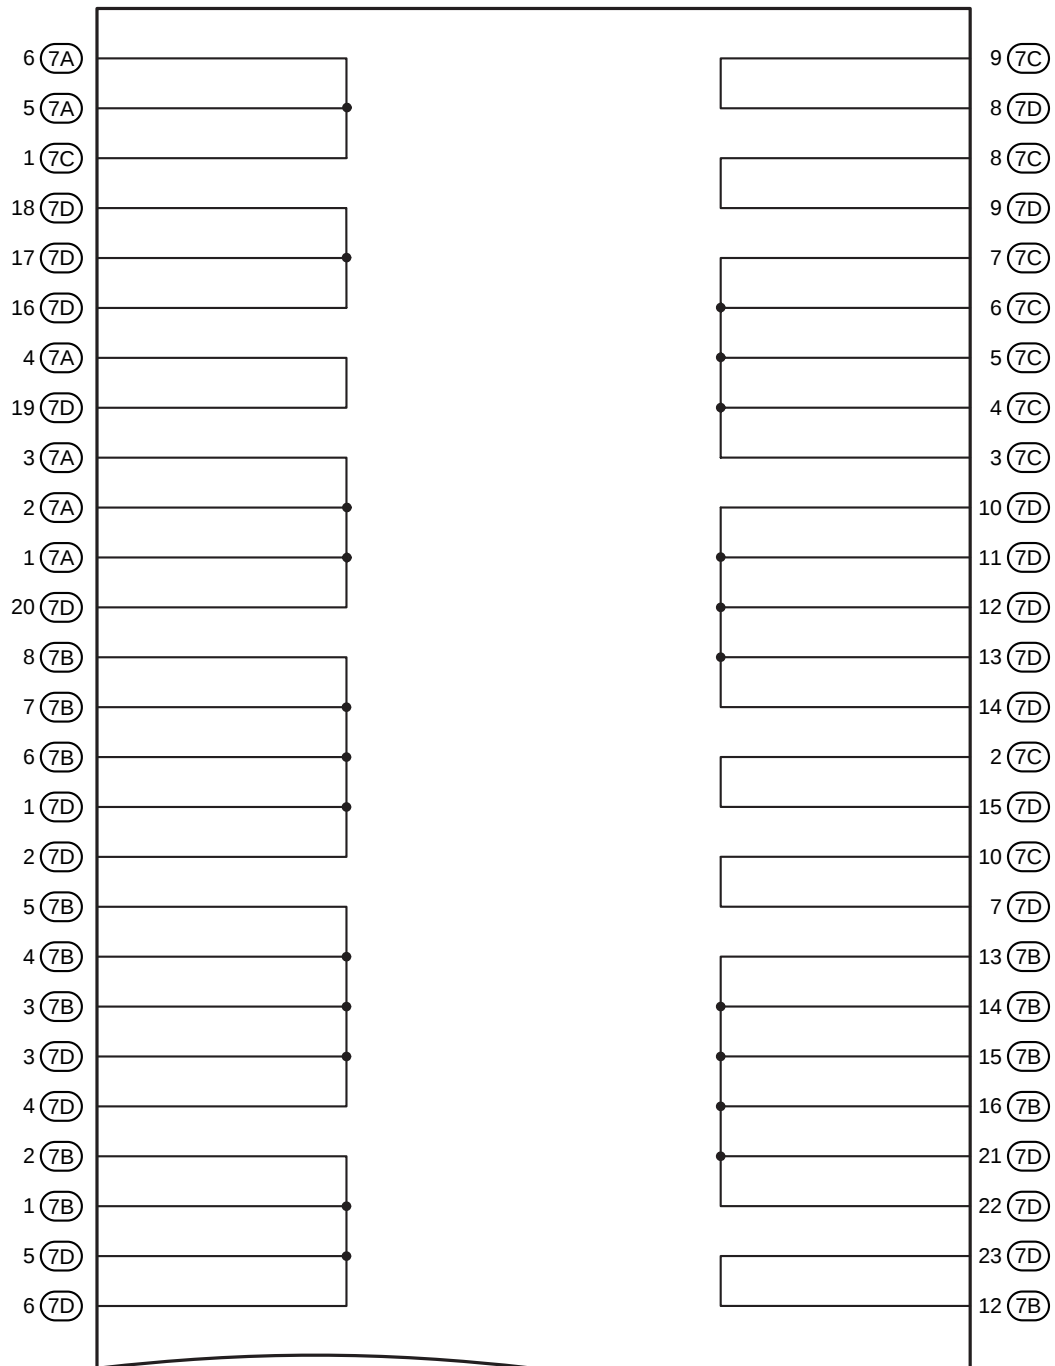


(Cont. next page)

(Cont'd)

24 (7D)			33 (7D)
11 (7B)			14 (7C)
25 (7D)			34 (7D)
10 (7B)			13 (7C)
26 (7D)			35 (7D)
9 (7B)			36 (7D)
27 (7D)			12 (7C)
20 (7C)			37 (7D)
28 (7D)			11 (7C)
19 (7C)			12 (7A)
29 (7D)			38 (7D)
18 (7C)			11 (7A)
30 (7D)			39 (7D)
17 (7C)			10 (7A)
31 (7D)			40 (7D)
16 (7C)			9 (7A)
32 (7D)			8 (7A)
15 (7C)			7 (7A)


F RELAY LOCATIONS

○ : Engine Room J/B No.8	Near the Front Left Suspension Tower (See Page 20)
⑧ : Engine Room R/B No.8	

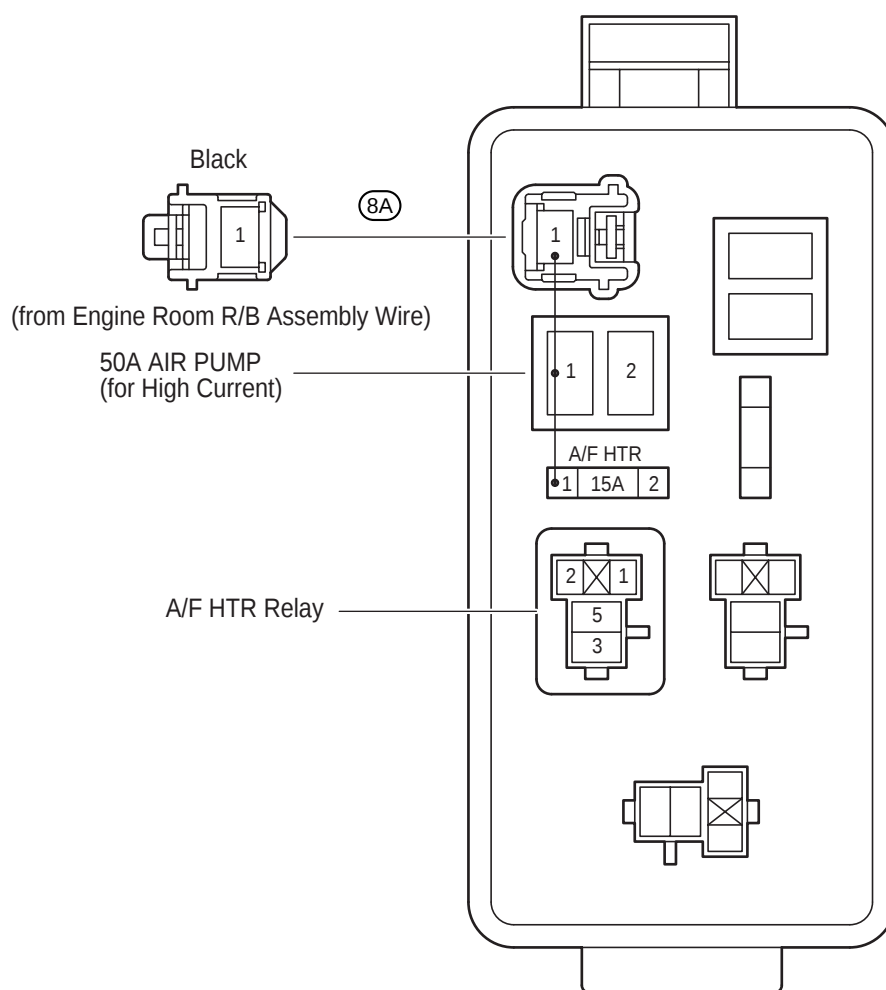

F RELAY LOCATIONS

Junction Connector (CAN)	Right Kick Panel (See Page 20)
-----------------------------	--------------------------------

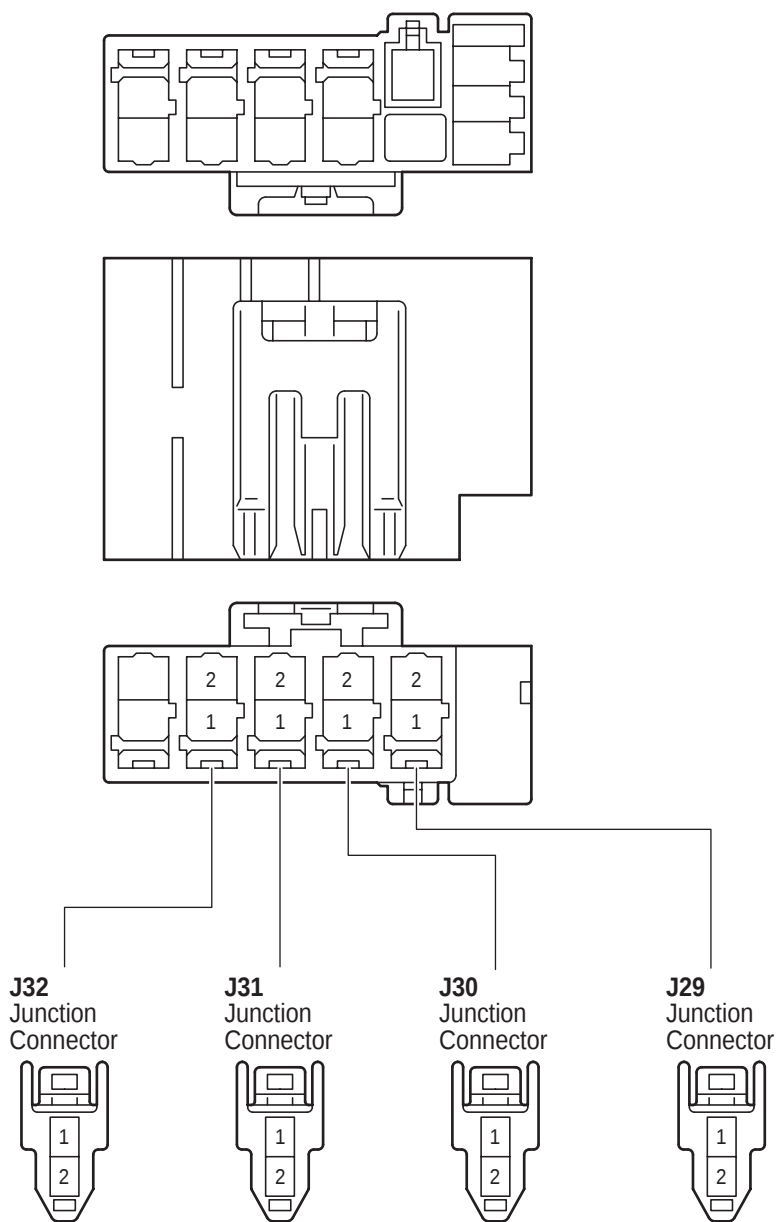

[Junction Connector Inner Circuit] (CAN)

