





# Audio System without Navigation System

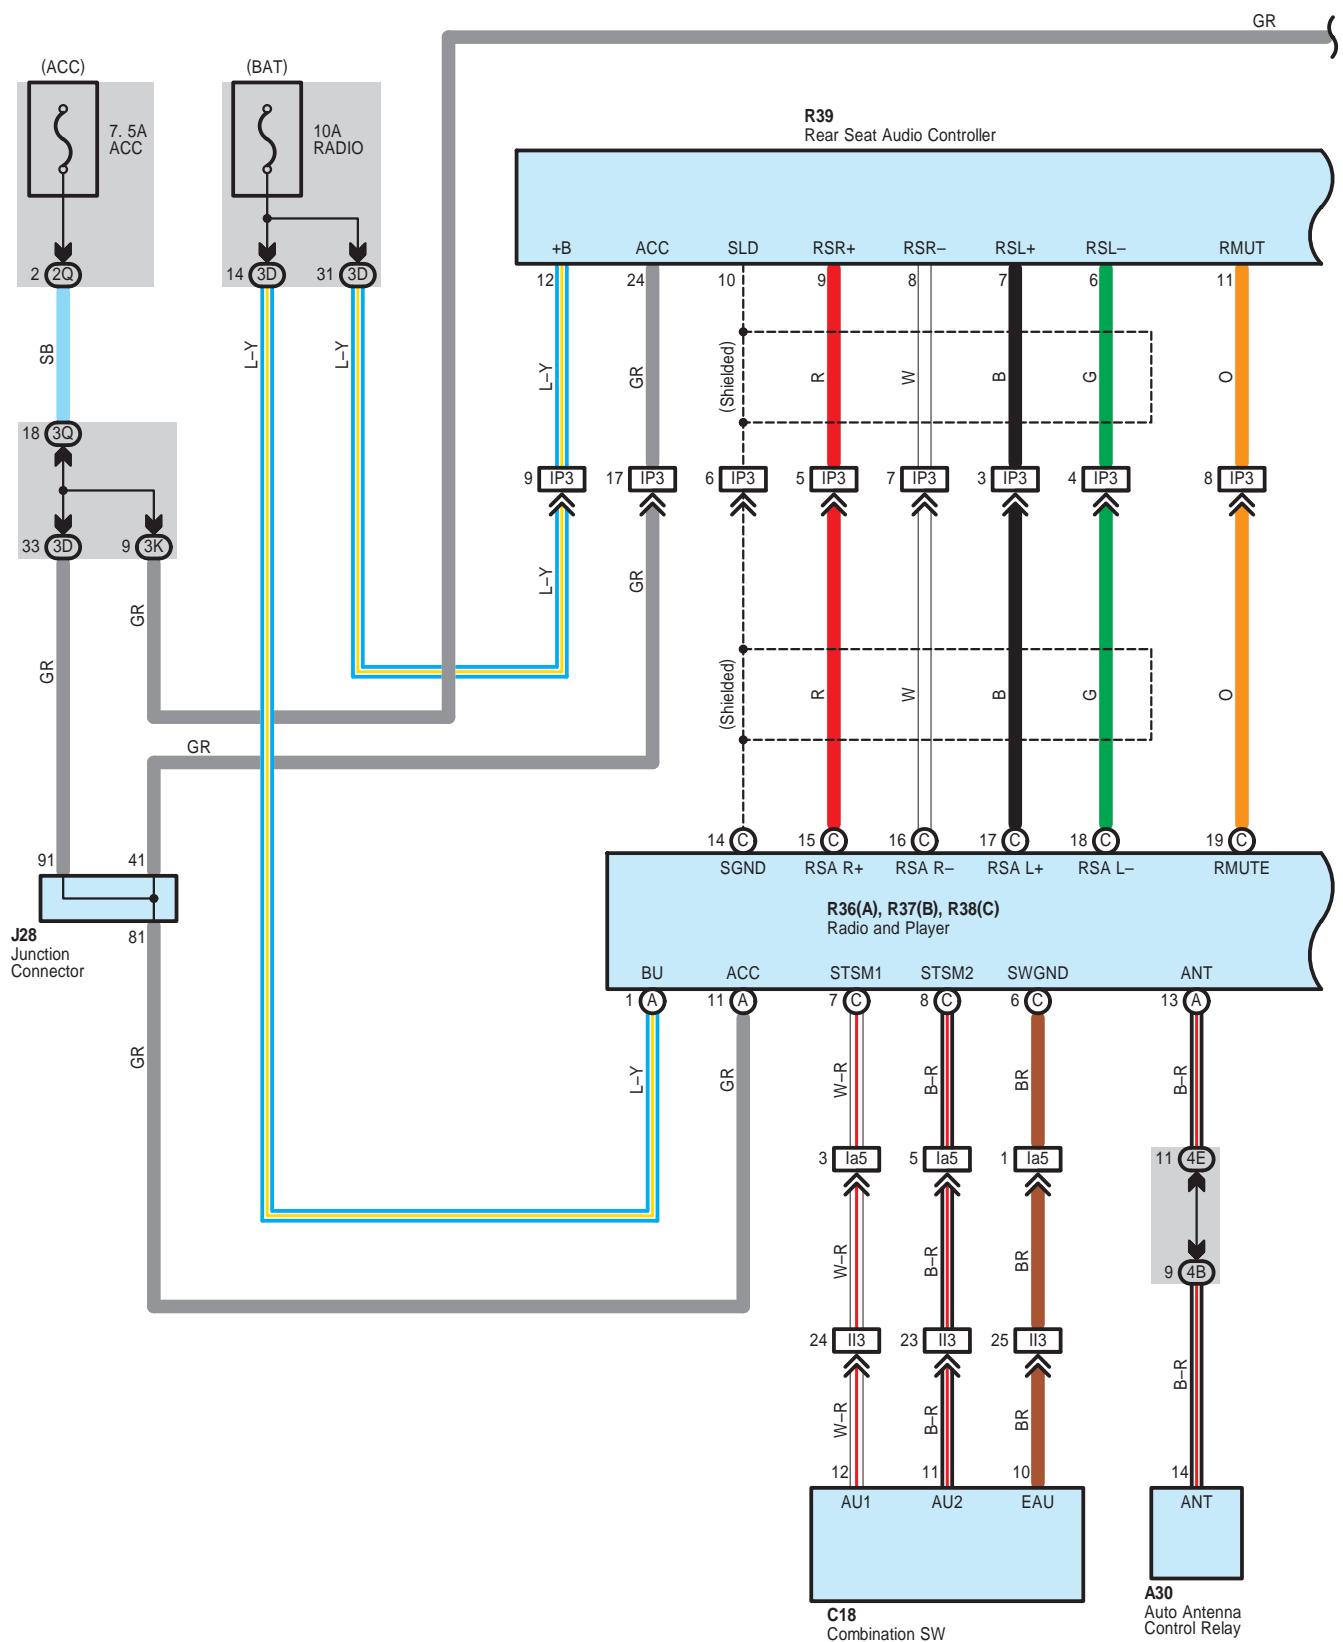

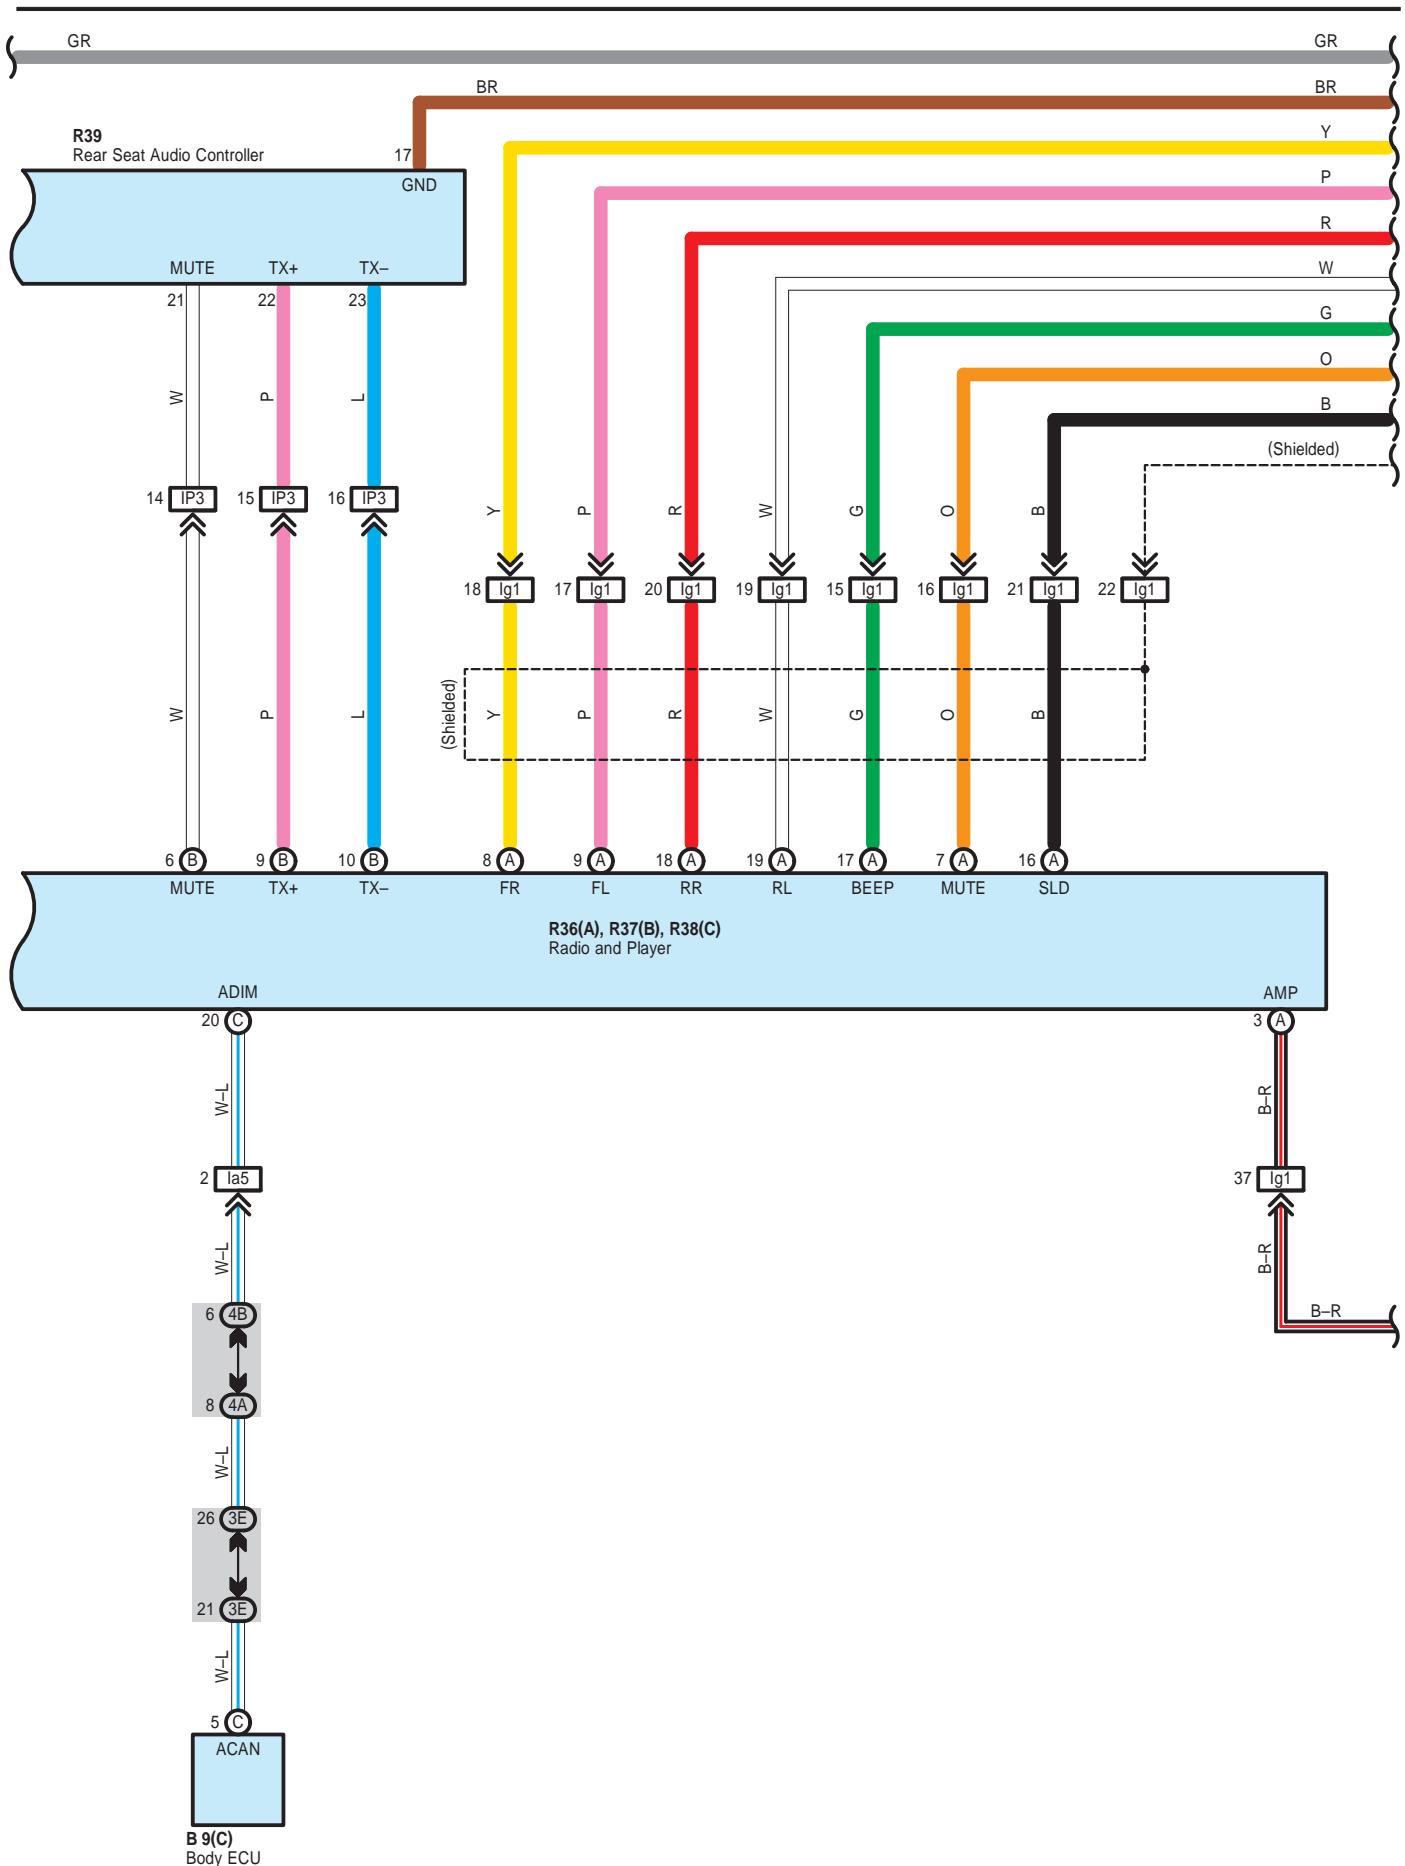

# Audio System without Navigation System

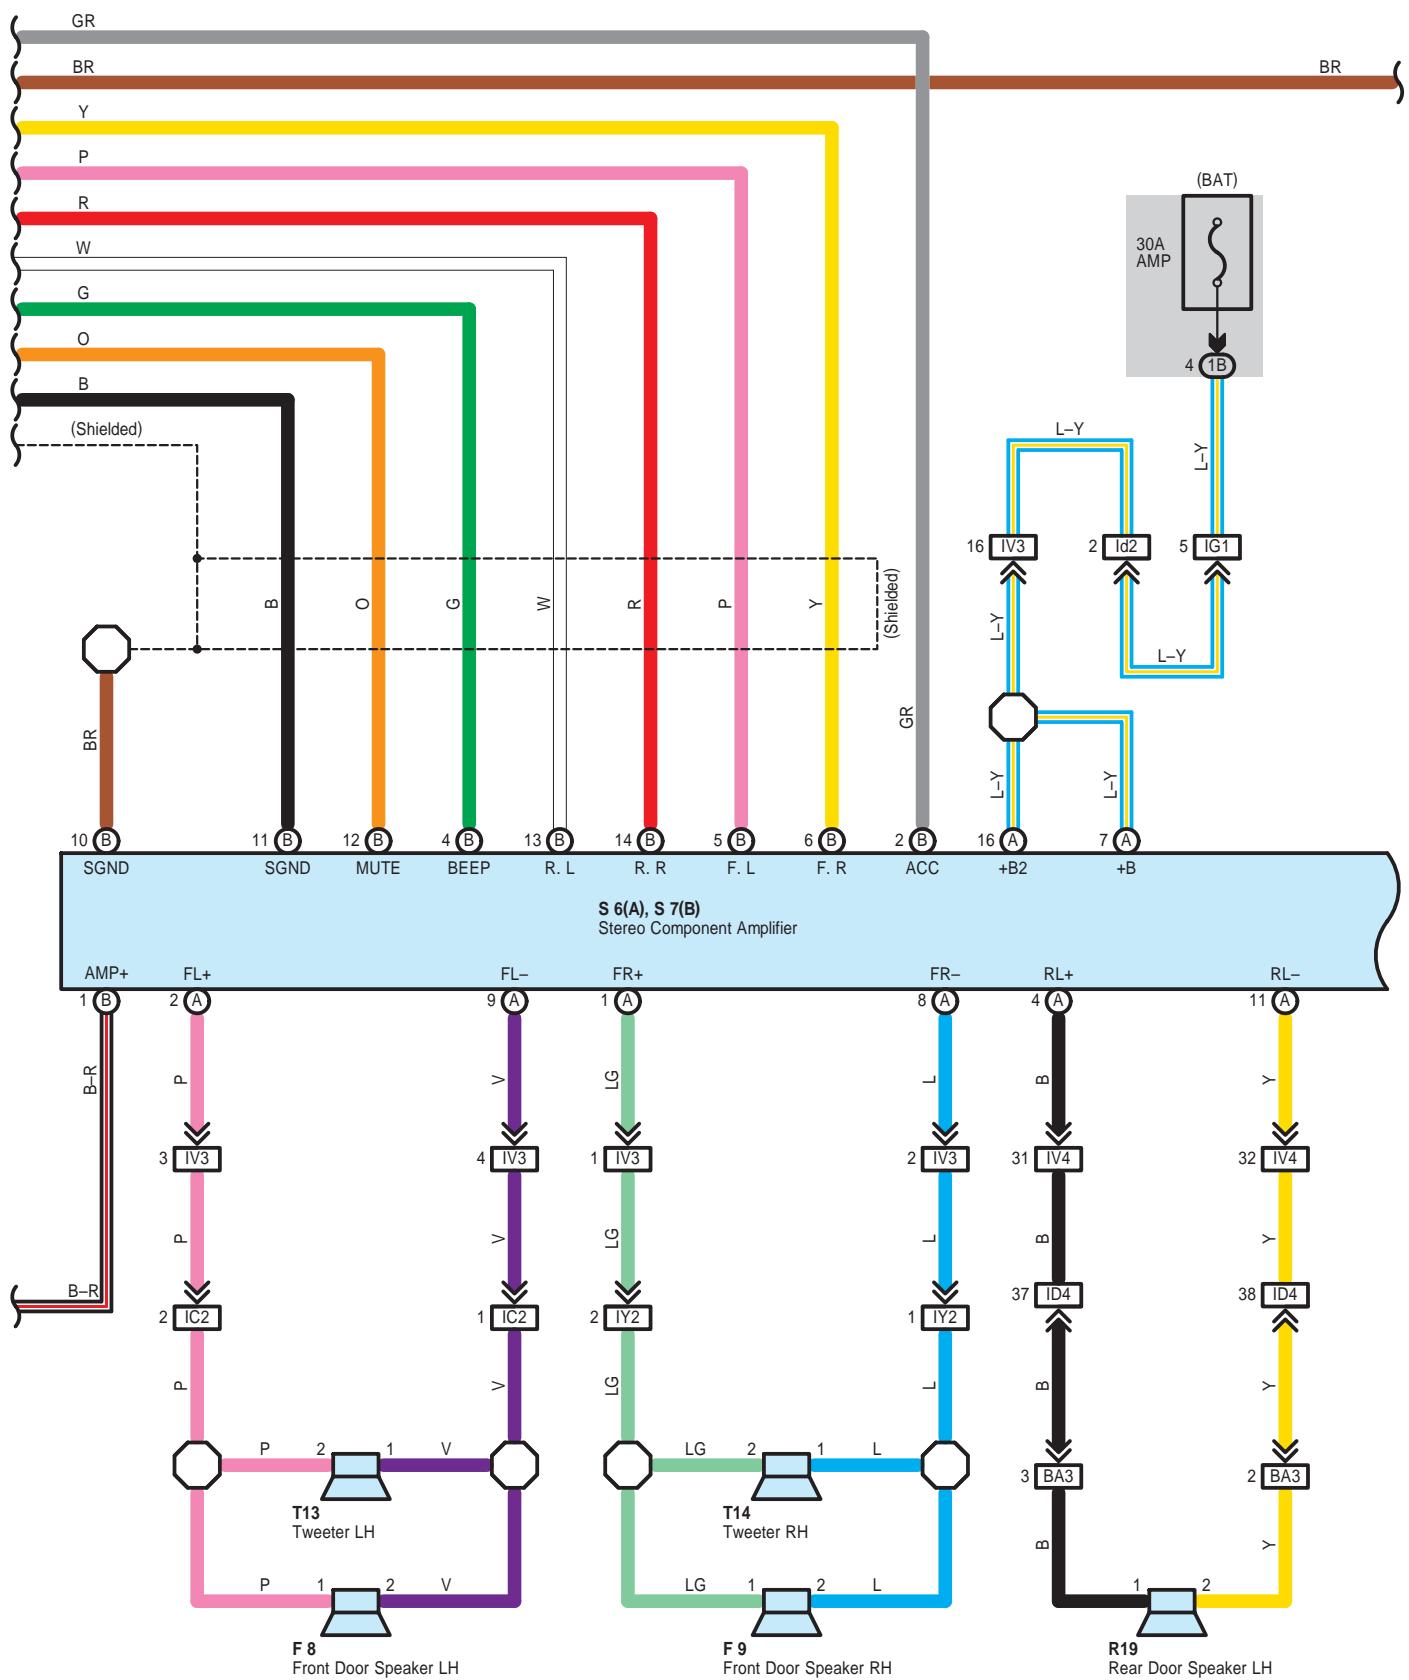

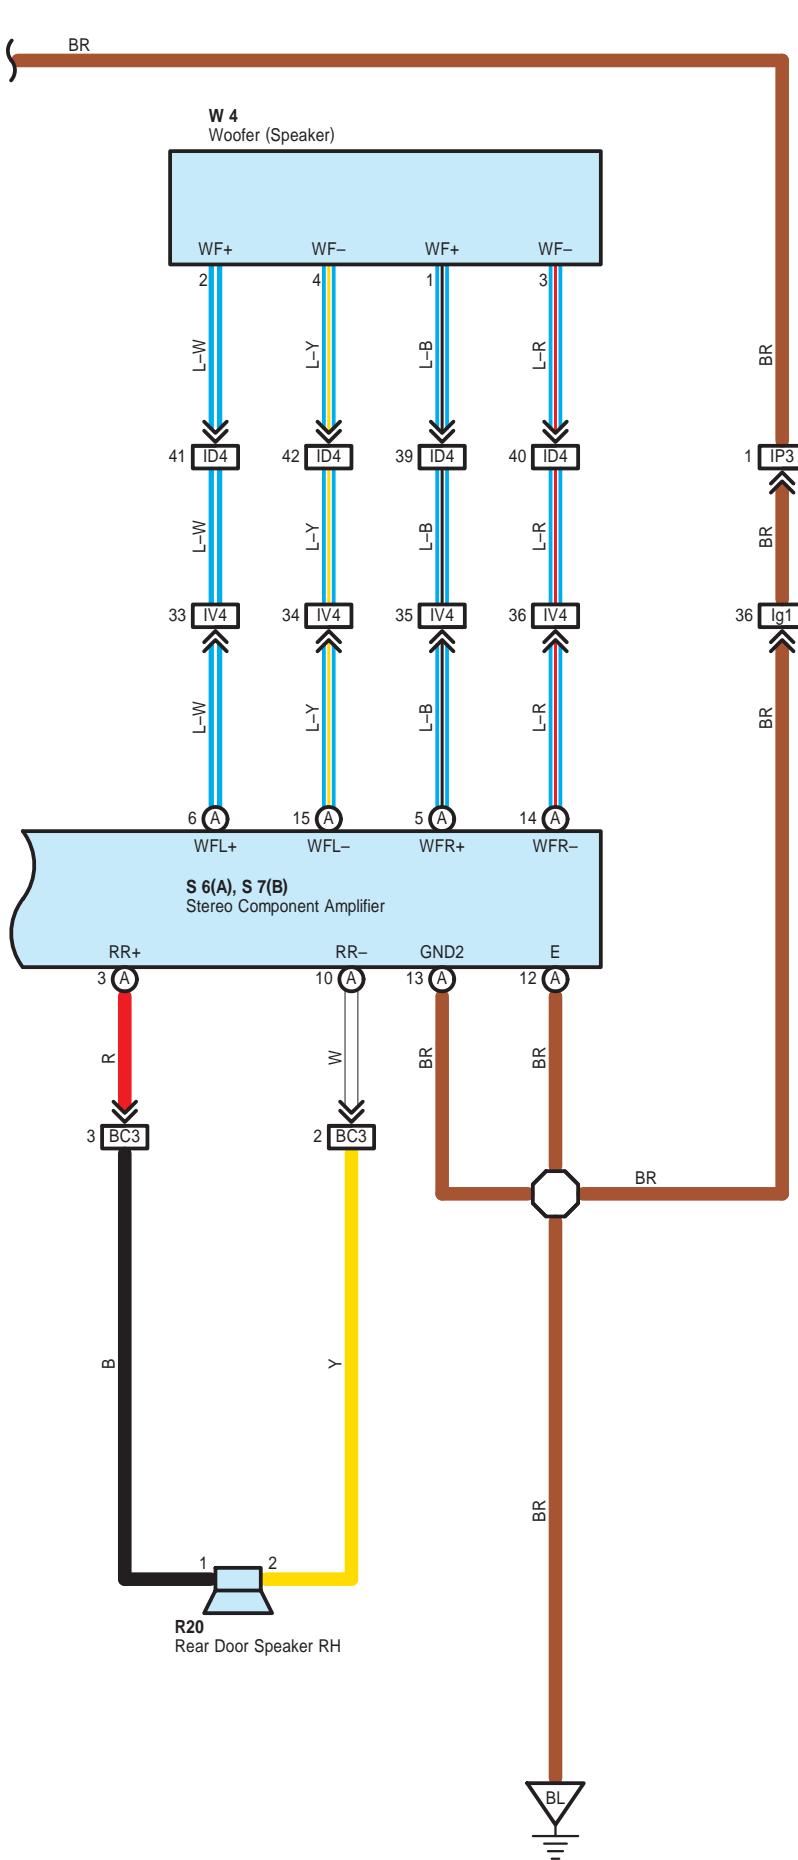

# Audio System without Navigation System

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A30	74	R19	79	S6	A 79
B9 C	74	R20	79	S7	B 79
C18	75	R36 A	77	T13	79
F8	78	R37 B	77	T14	79
F9	78	R38 C	77	W4	79
J28	76	R39	77		

## □ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A		
4B	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4E		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	84	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID4	84	Dash Wire and Floor No.1 Wire (Left Kick Panel)
IG1	84	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
II3	84	Dash Wire and Column Wire (Near the Ignition SW)
IP3	84	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IV3	85	Dash Wire and Floor No.2 Wire (Right Kick Panel)
IV4		
IY2	85	Front Door RH Wire and Dash Wire (Right Kick Panel)
la5	85	Dash Wire and Dash Wire (Instrument Panel LH)
Id2	85	Dash Wire and Dash Wire (Instrument Panel RH)
lg1	85	Dash Wire and Floor No.2 Wire (Right Side of Front Console)
BA3	86	Rear Door LH Wire and Floor No.1 Wire (Left Side of Center Pillar)
BC3	86	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)

## ▽ : Ground Points

Code	See Page	Ground Points Location
BL	86	Rear Side Under the Front Passenger's Seat

