


Multi-Display without Navigation System

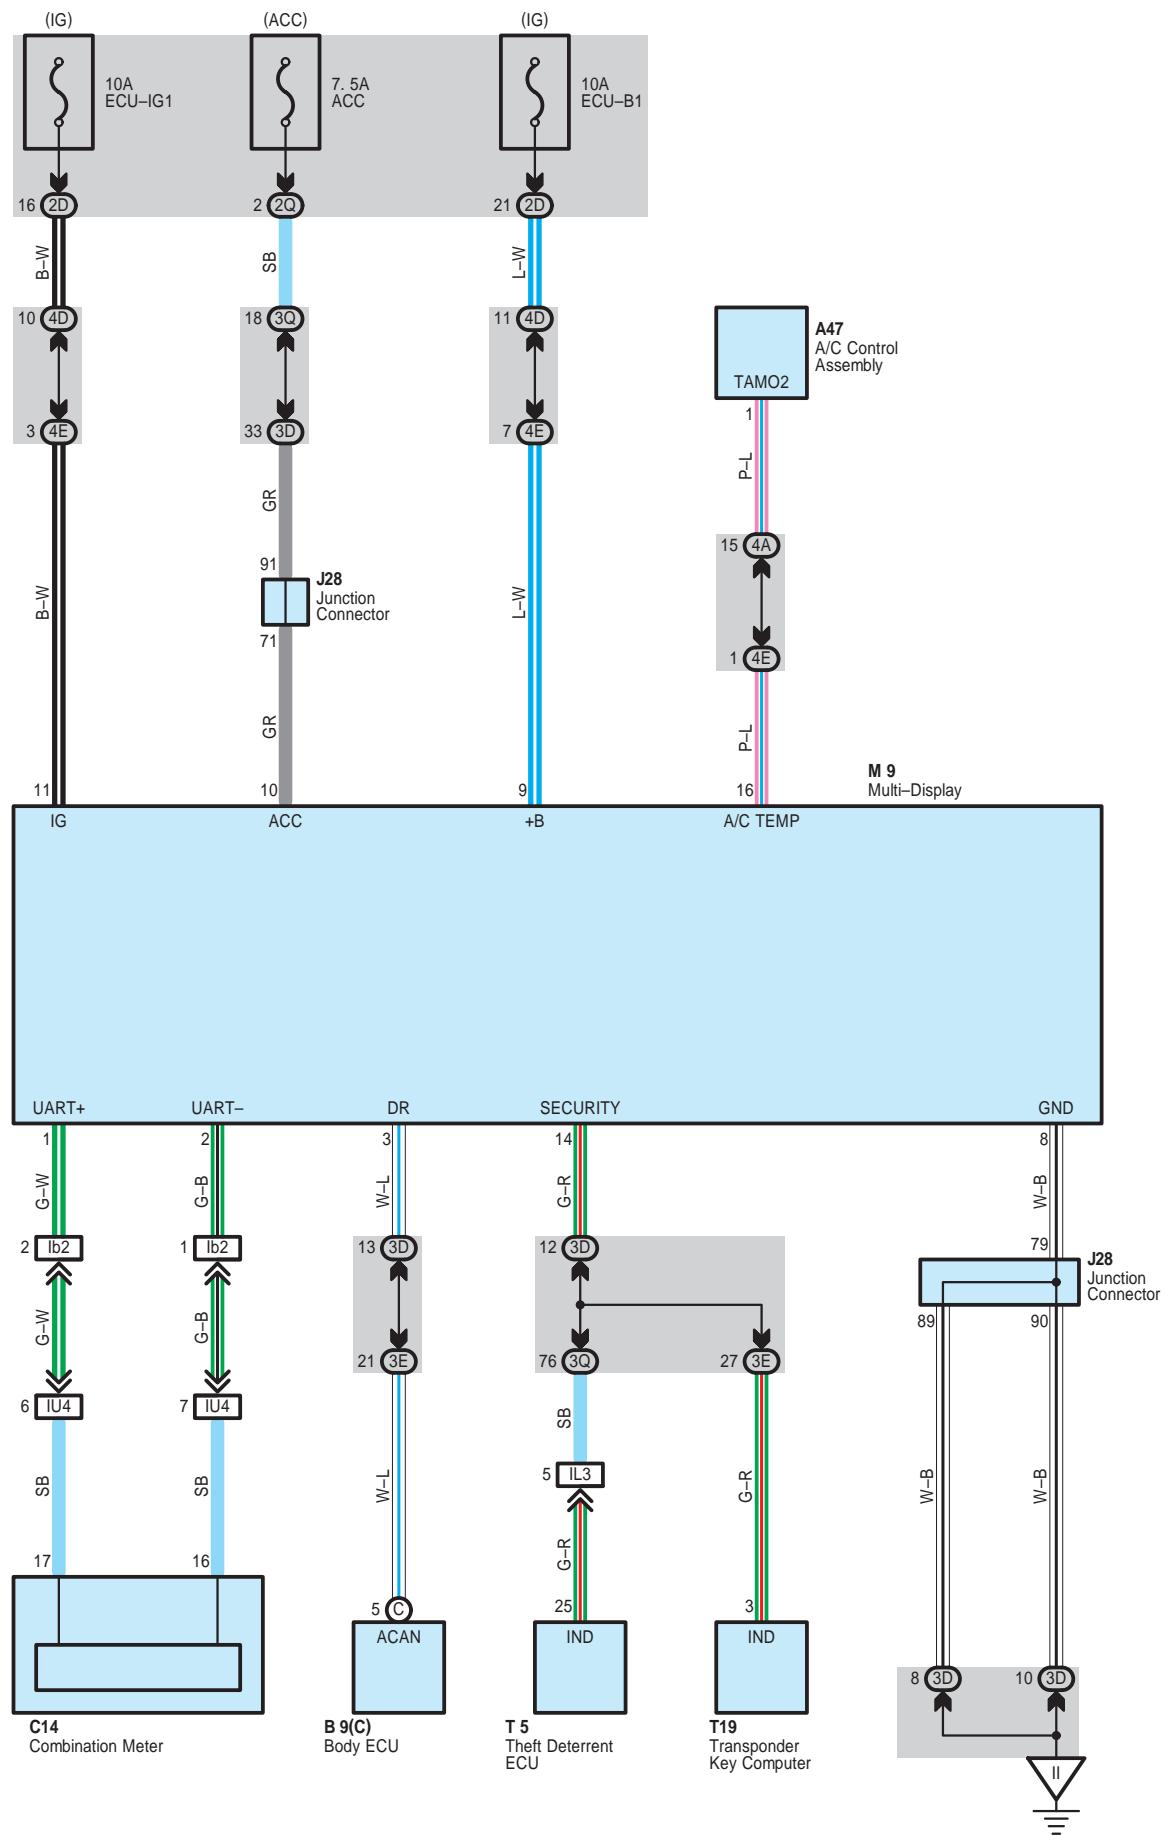

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A47	74	J28	76	T19	77
B9 C	74	M9	76		
C14	75	T5	77		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)
4A		
4D	52	Dash Wire and J/B No.4 (Instrument Panel Center)
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL3	84	Instrument Panel Integration Wire and Computer Wire (Instrument Panel RH)
IU4	85	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
Ib2	85	Dash Wire and Dash Wire (Instrument Panel Center)

▽ : Ground Points

Code	See Page	Ground Points Location
II	84	Set Bolt of Cowl Side J/B RH