


M OVERALL ELECTRICAL WIRING DIAGRAM

* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

HOW TO READ THIS SECTION

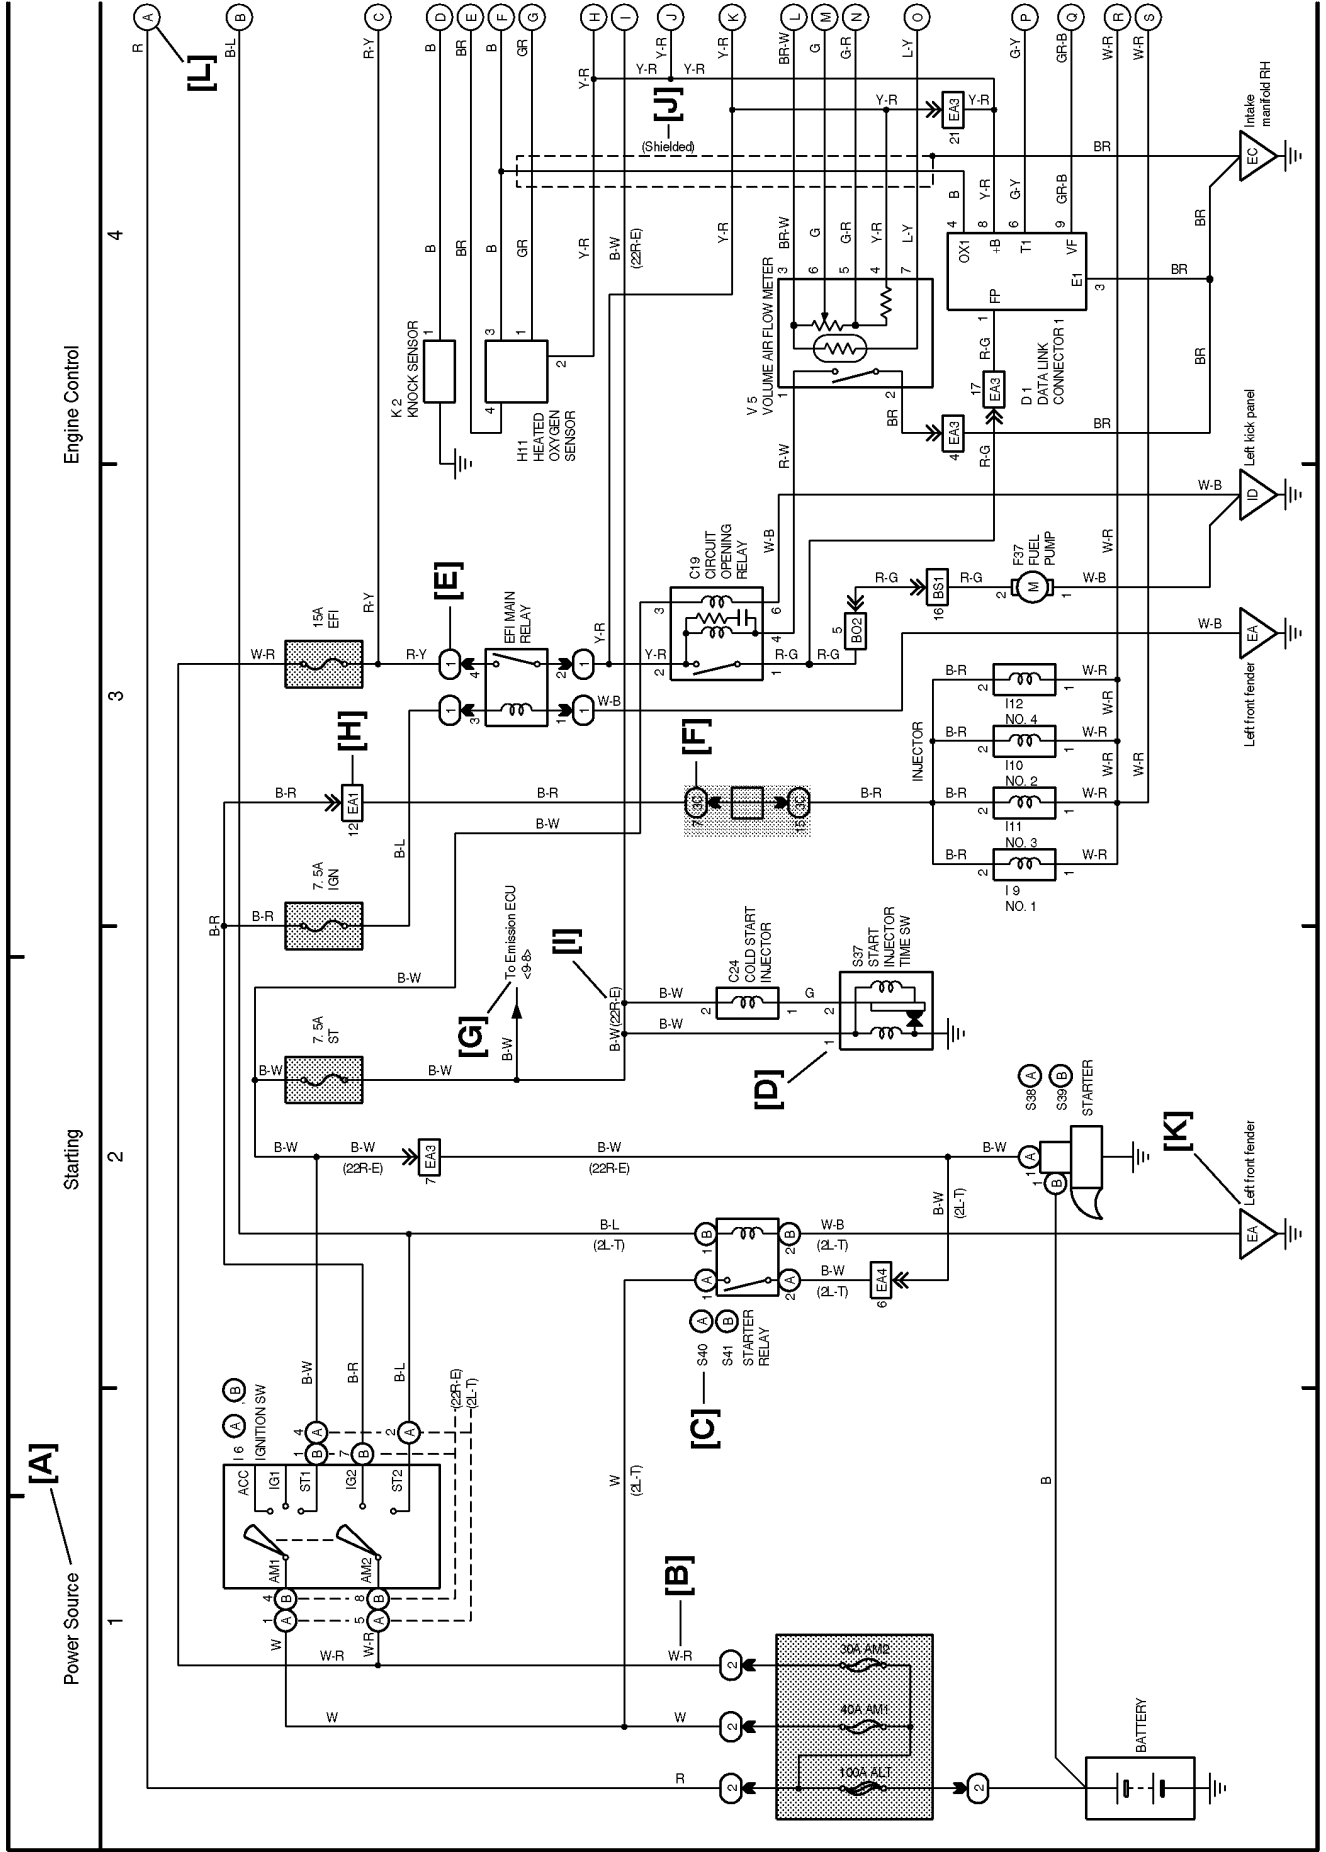

[A] : System Title


[B] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black W = White BR = Brown
L = Blue V = Violet SB = Sky Blue
R = Red O = Orange LG = Light Green
P = Pink Y = Yellow GR = Gray
G = Green

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L – Y

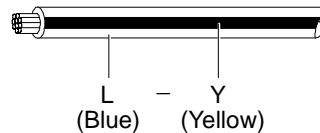


[C] : The position of the parts is the same as shown in the wiring diagram and wire routing.


[D] : Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example : Numbered in order from upper left to lower right

 Numbered in order from upper right to lower left



Female

 

Male


The numbering system for the overall wiring diagram is the same as above

[E] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example : ① Indicates Relay Block No.1


[F] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

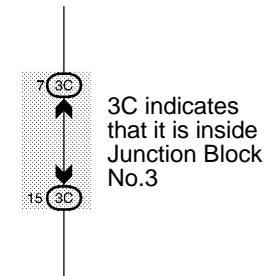

[G] : Indicates related system.

[H] : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗). Outside numerals are pin numbers.

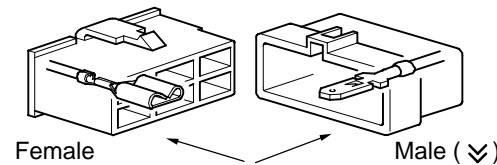

[I] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

[J] : Indicates a shielded cable.



[K] : Indicates and located on ground point.

[L] : The same code occurring on the next page indicates that the wire harness is continuous.

SYSTEM INDEX

SYSTEMS	LOCATION	SYSTEMS	LOCATION
ABS	24-2	Ignition (3RZ-FE Except California)	7-2
Air Conditioning	33-2	Ignition (5VZ-FE)	1-4
A/T Indicator (2RZ-FE)	21-2	Ignition (California 2RZ-FE and 3RZ-FE)	3-2
Auto Antenna	30-2	Interior Light	13-3
Back-Up Light	25-4	Key Reminder and Belt Warning	13-2
Charging	2-4	Light Reminder	16-4
Cigarette Lighter and Clock	30-4	Power Outlet	28-4
Combination Meter (w/ Tachometer)	31-2	Power Source	1~33-1
Combination Meter (w/o Tachometer)	32-2	Power Window	29-4
Cruise Control (5VZ-FE)	22-2	Radio and Player	30-3
Cruise Control (Except 5VZ-FE)	23-2	Rear Differential Lock	27-2
Door Lock Control	29-2	Remote Control Mirror	16-3
Electronically Controlled Transmission (3RZ-FE Except California)	20-2	Shift Lock (Column A/T)	28-2
Electronically Controlled Transmission (5VZ-FE Except California)	18-2	Shift Lock (Floor A/T)	28-3
Electronically Controlled Transmission (California 3RZ-FE)	19-2	SRS	25-2
Electronically Controlled Transmission and A/T Indicator (California 5VZ-FE)	17-2	Starting (3RZ-FE, 2RZ-FE)	2-2
Engine Control (2RZ-FE Except California)	9-2	Starting (5VZ-FE)	1-2
Engine Control (3RZ-FE Except California)	7-2	Stop Light (5VZ-FE)	22-4
Engine Control (5VZ-FE Except California)	5-2	Stop Light (Except 5VZ-FE)	23-4
Engine Control (California 2RZ-FE)	8-2	Taillight and Illumination	14-2
Engine Control (California 3RZ-FE)	6-2	Turn Signal and Hazard Warning Light	15-2
Engine Control (California 5VZ-FE)	4-2	Wiper and Washer	16-2
Headlight (w/ Daytime Running Light)	12-2	4WD (California A/T w/o 2-4 Select SW)	11-2
Headlight (w/o Daytime Running Light)	10-2	4WD (California M/T w/o 2-4 Select SW)	3-3
Horn	15-4	4WD (w/ 2-4 Select SW)	26-2
Ignition (2RZ-FE Except California)	9-2	4WD (w/o 2-4 Select SW Except California)	10-2