
 


# Power Source (Access/Standard Cab)

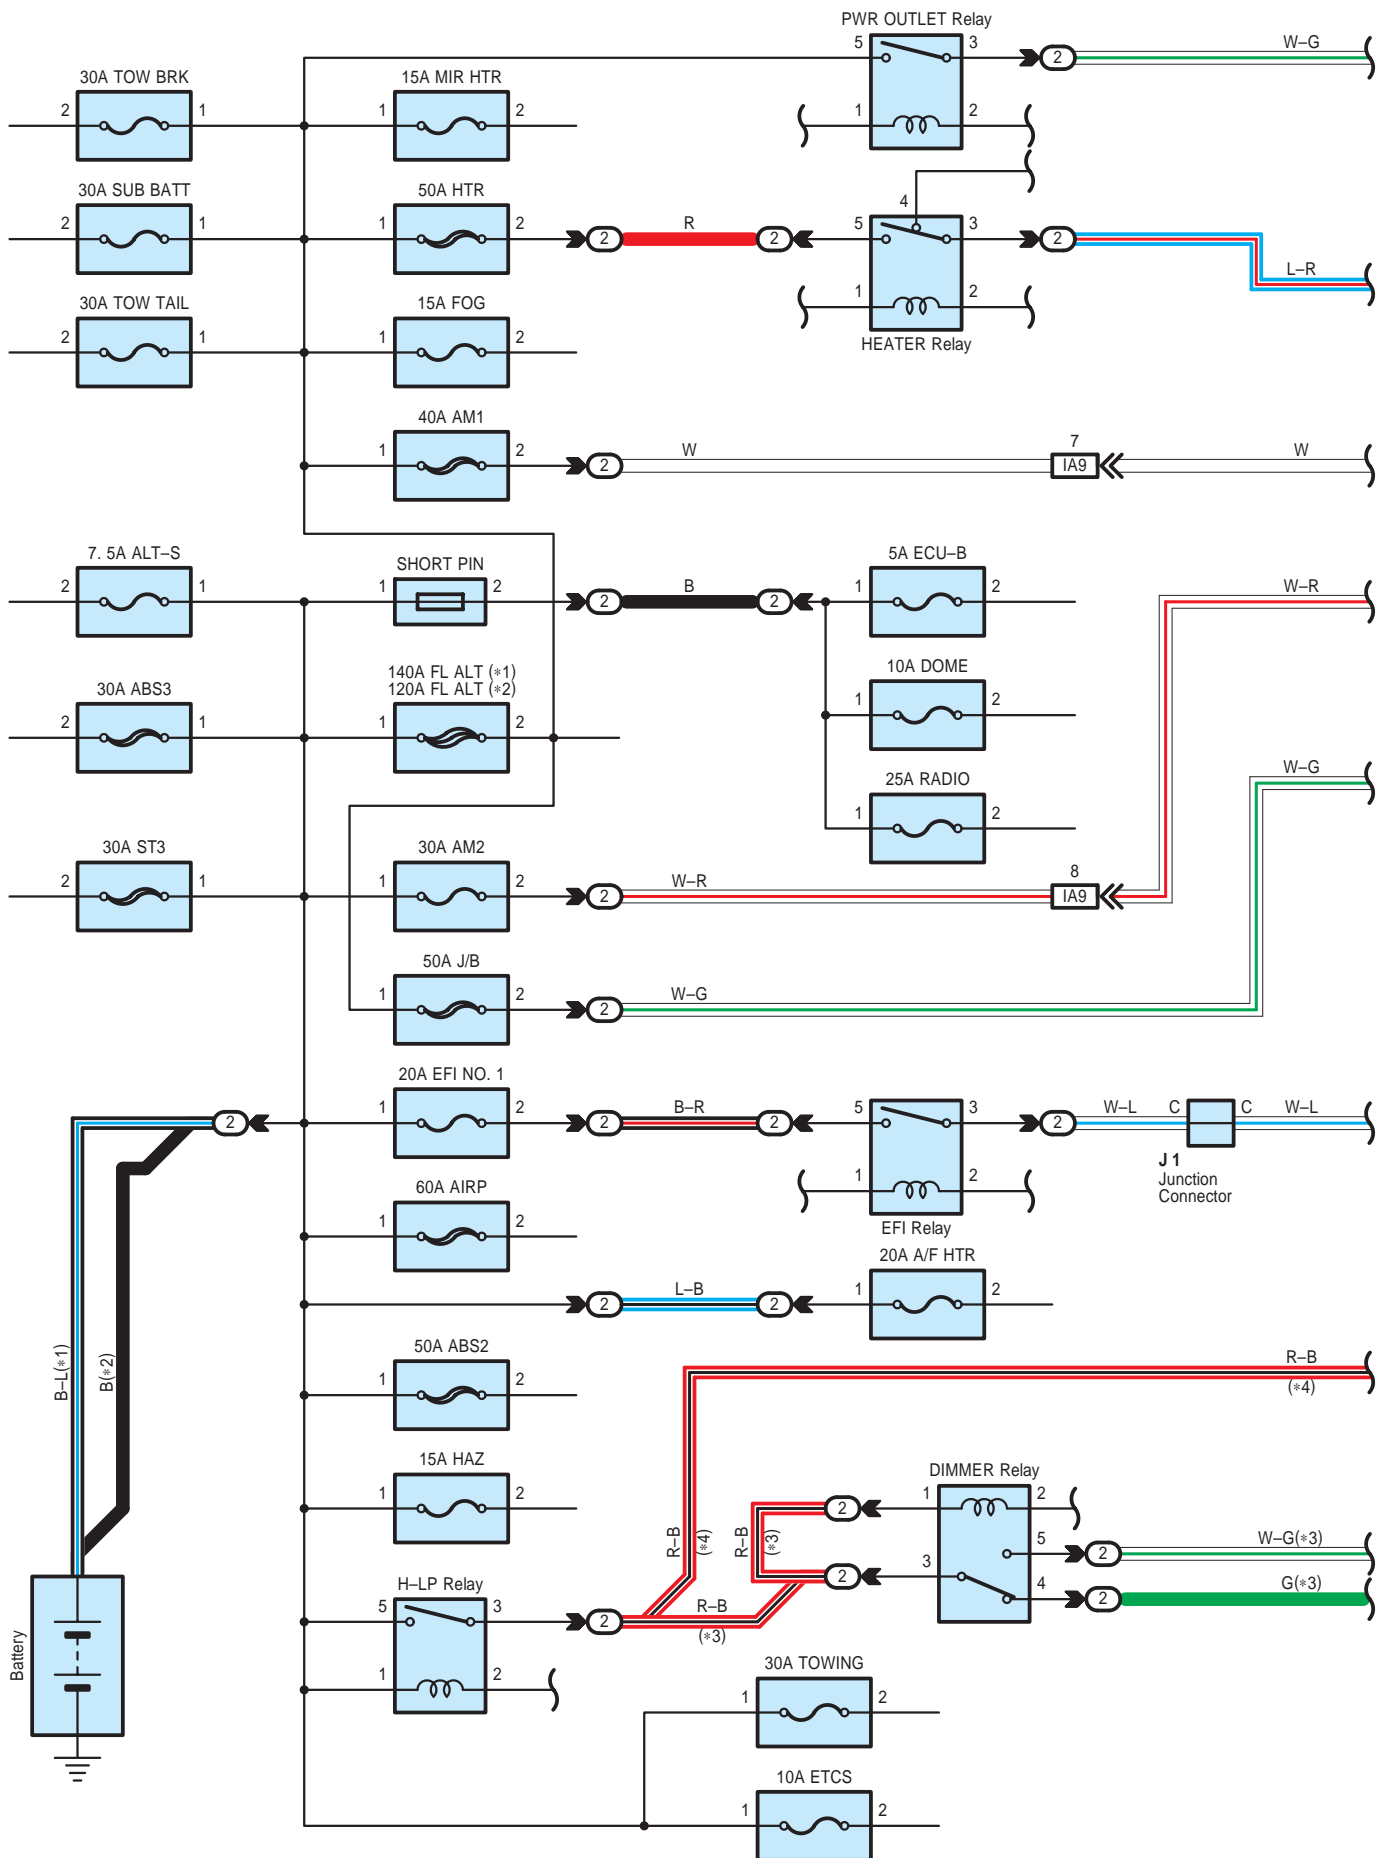



## Power Source (Access/Standard Cab)

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
A22	60	J1	57 (2UZ-FE)	J26	A 62
I23	A 61		59 (1GR-FE)	J27	B 62

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1I	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1K	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA9	82	Engine Room Main Wire and Cowl Wire (Left Kick Panel)

\* 1 : w/o Daytime Running Light    \* 2 : w/ Daytime Running Light    \* 3 : Access Cab    \* 4 : Standard Cab    \* 5 : Access Cab Captain Seat  
 \* 6 : Access Cab Separate Seat    \* 7 : Standard Cab Bench Seat

