



# Ignition for 2UZ-FE (Access/Standard Cab)

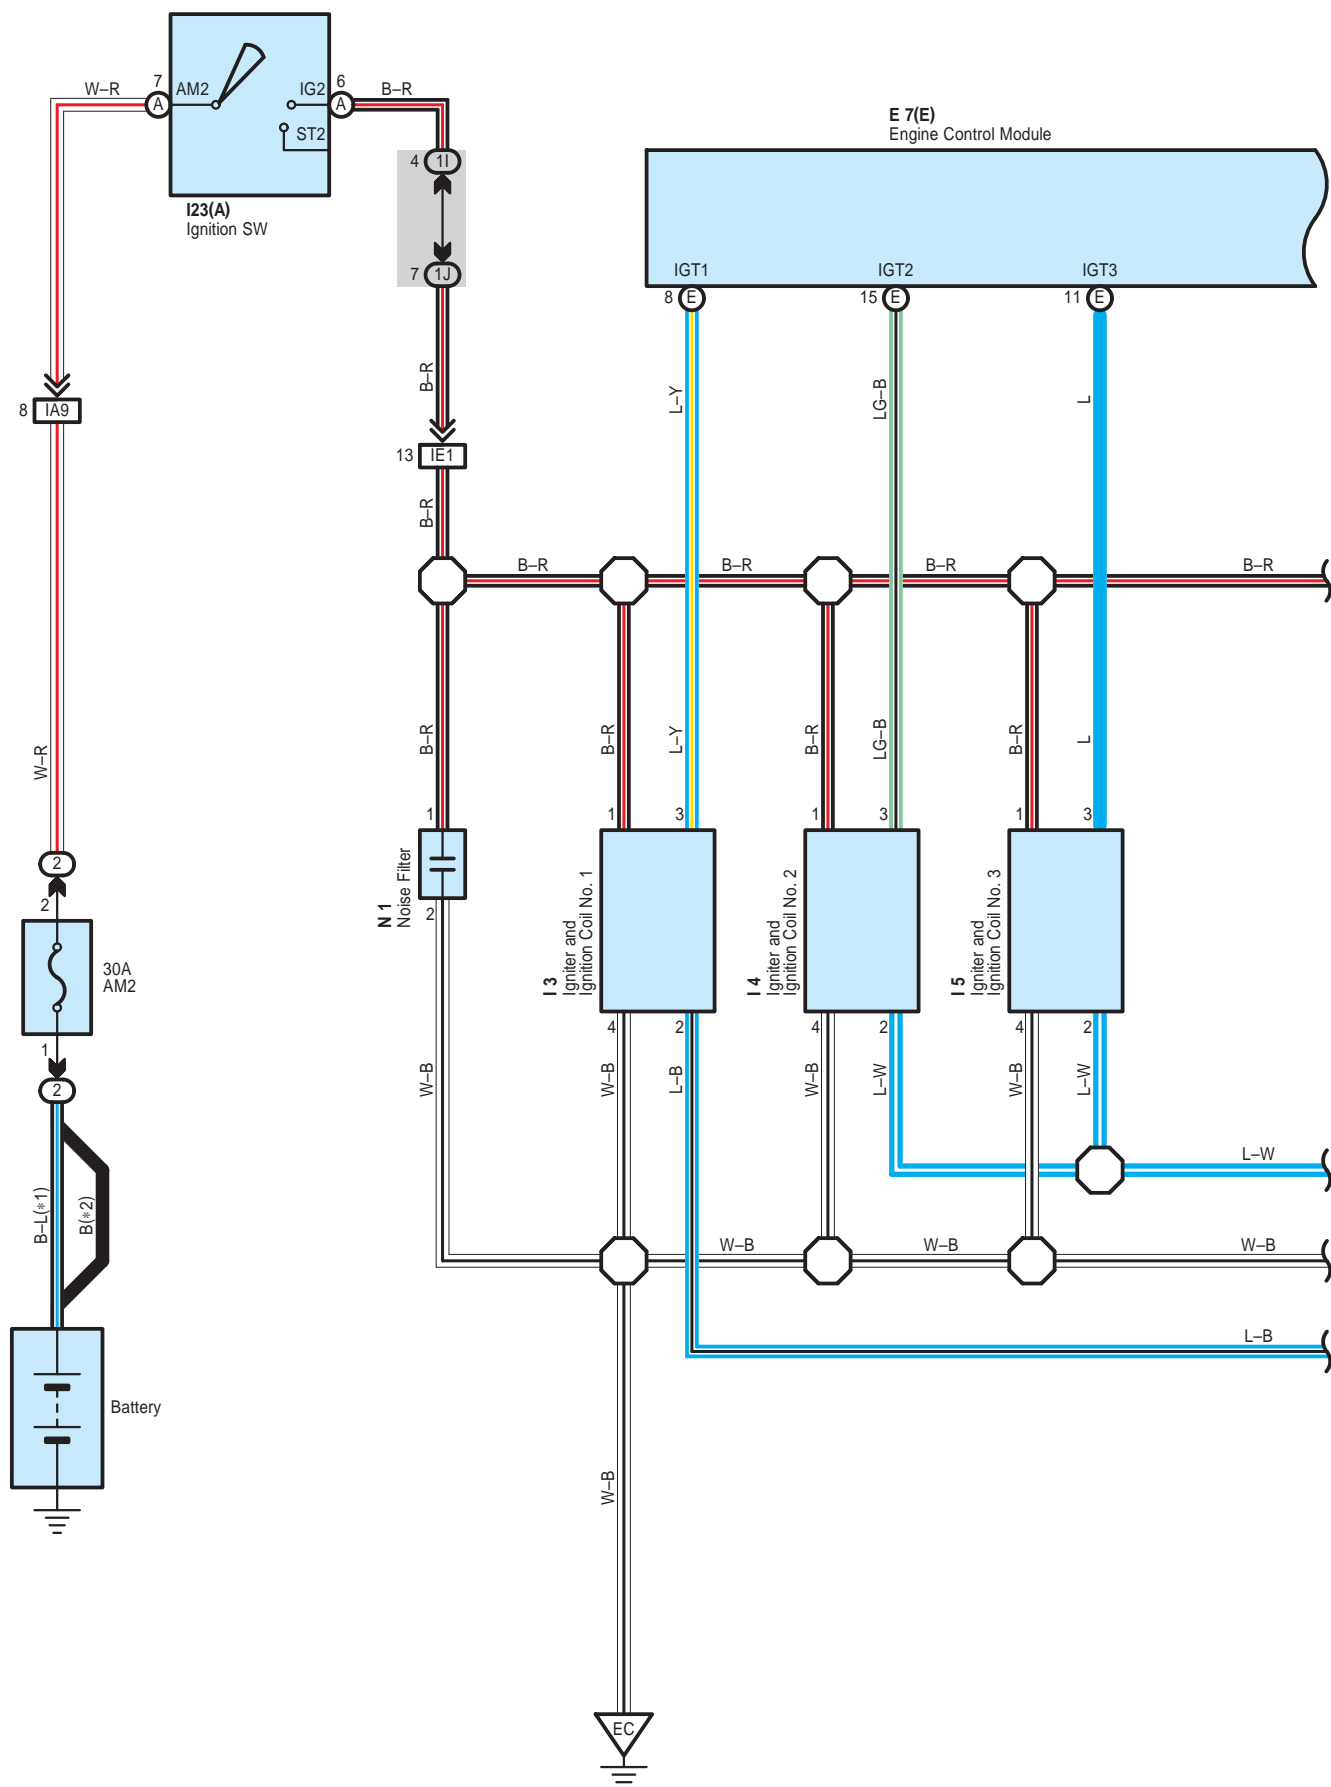

- \* 1 : Towing Package
- \* 2 : Except Towing Package

**E 7(E)**  
Engine Control Module

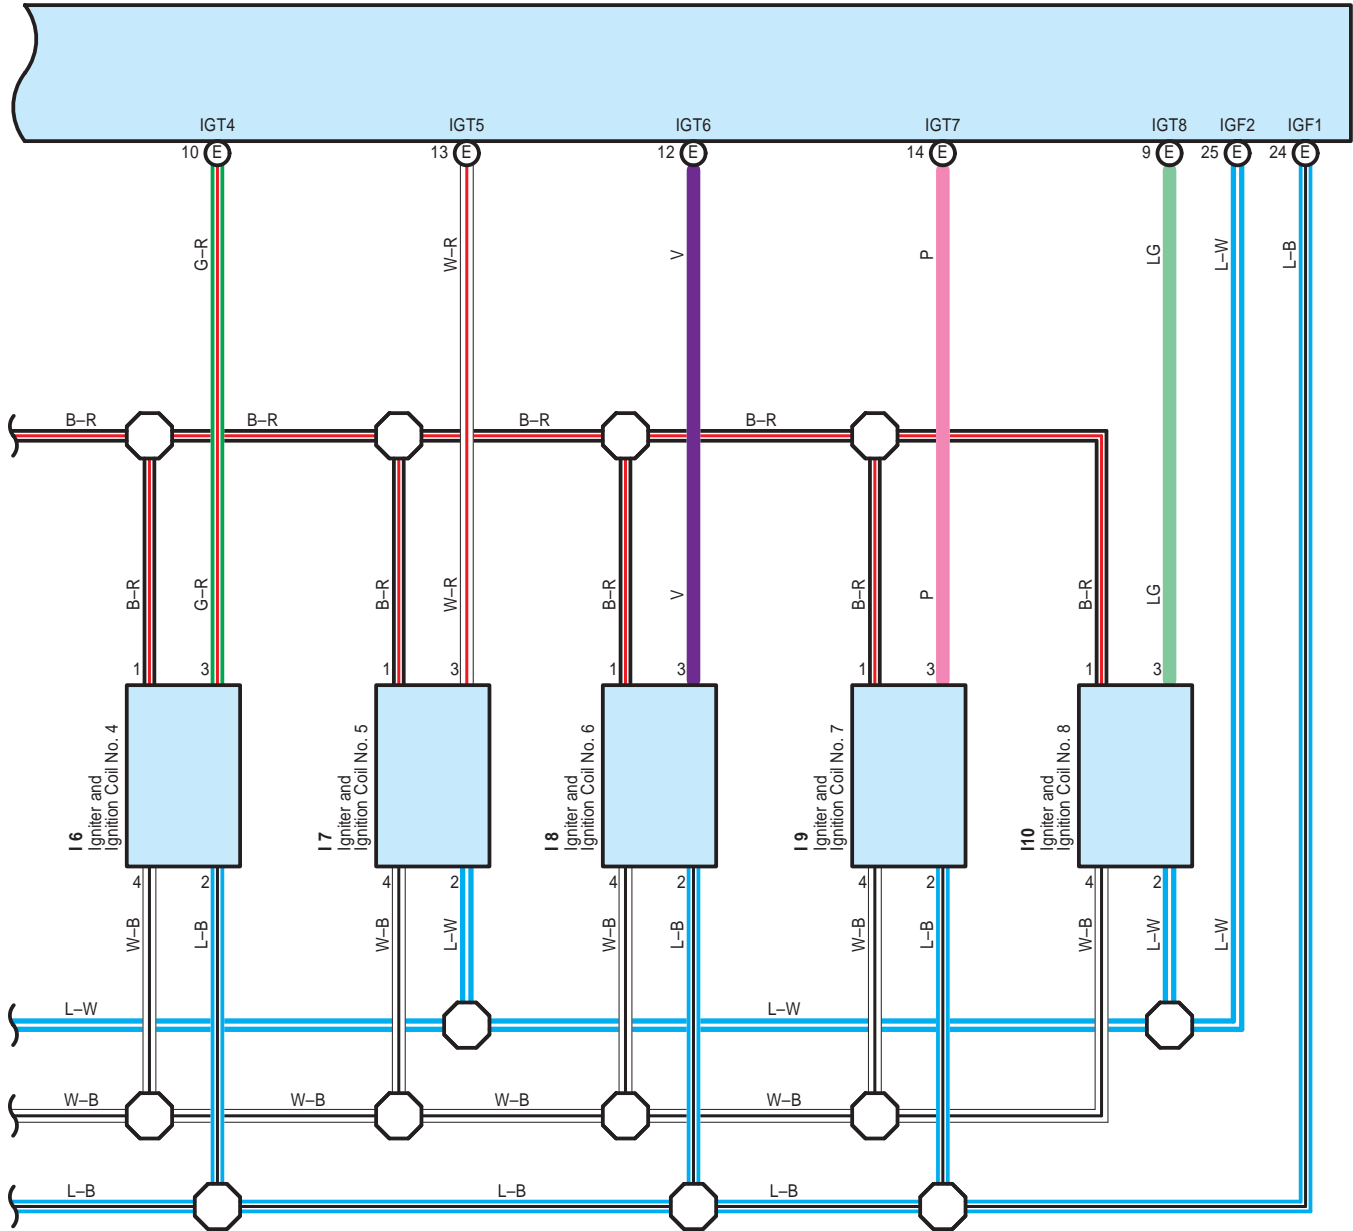

## Ignition for 2UZ–FE (Access/Standard Cab)

### : Parts Location

Code		See Page	Code	See Page	Code	See Page
E7	E	61	I6	57 (2UZ–FE)	I10	57 (2UZ–FE)
I3		57 (2UZ–FE)	I7	57 (2UZ–FE)	I23	A 61
I4		57 (2UZ–FE)	I8	57 (2UZ–FE)	N1	57 (2UZ–FE)
I5		57 (2UZ–FE)	I9	57 (2UZ–FE)		

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1I	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1J	26 (*1)	
	30 (*2)	

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA9	82	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)

### : Ground Points

Code	See Page	Ground Points Location
EC	80 (2UZ–FE)	Rear Bank of Left Cylinder Head

\* 1 : w/o Daytime Running Light    \* 2 : w/ Daytime Running Light    \* 3 : Access Cab    \* 4 : Standard Cab    \* 5 : Access Cab Captain Seat  
 \* 6 : Access Cab Separate Seat    \* 7 : Standard Cab Bench Seat

