


Taillight (Access/Standard Cab)

- * 1 : Towing Package
- * 2 : Except Towing Package
- * 3 : w/ Daytime Running Light
- * 4 : w/o Daytime Running Light

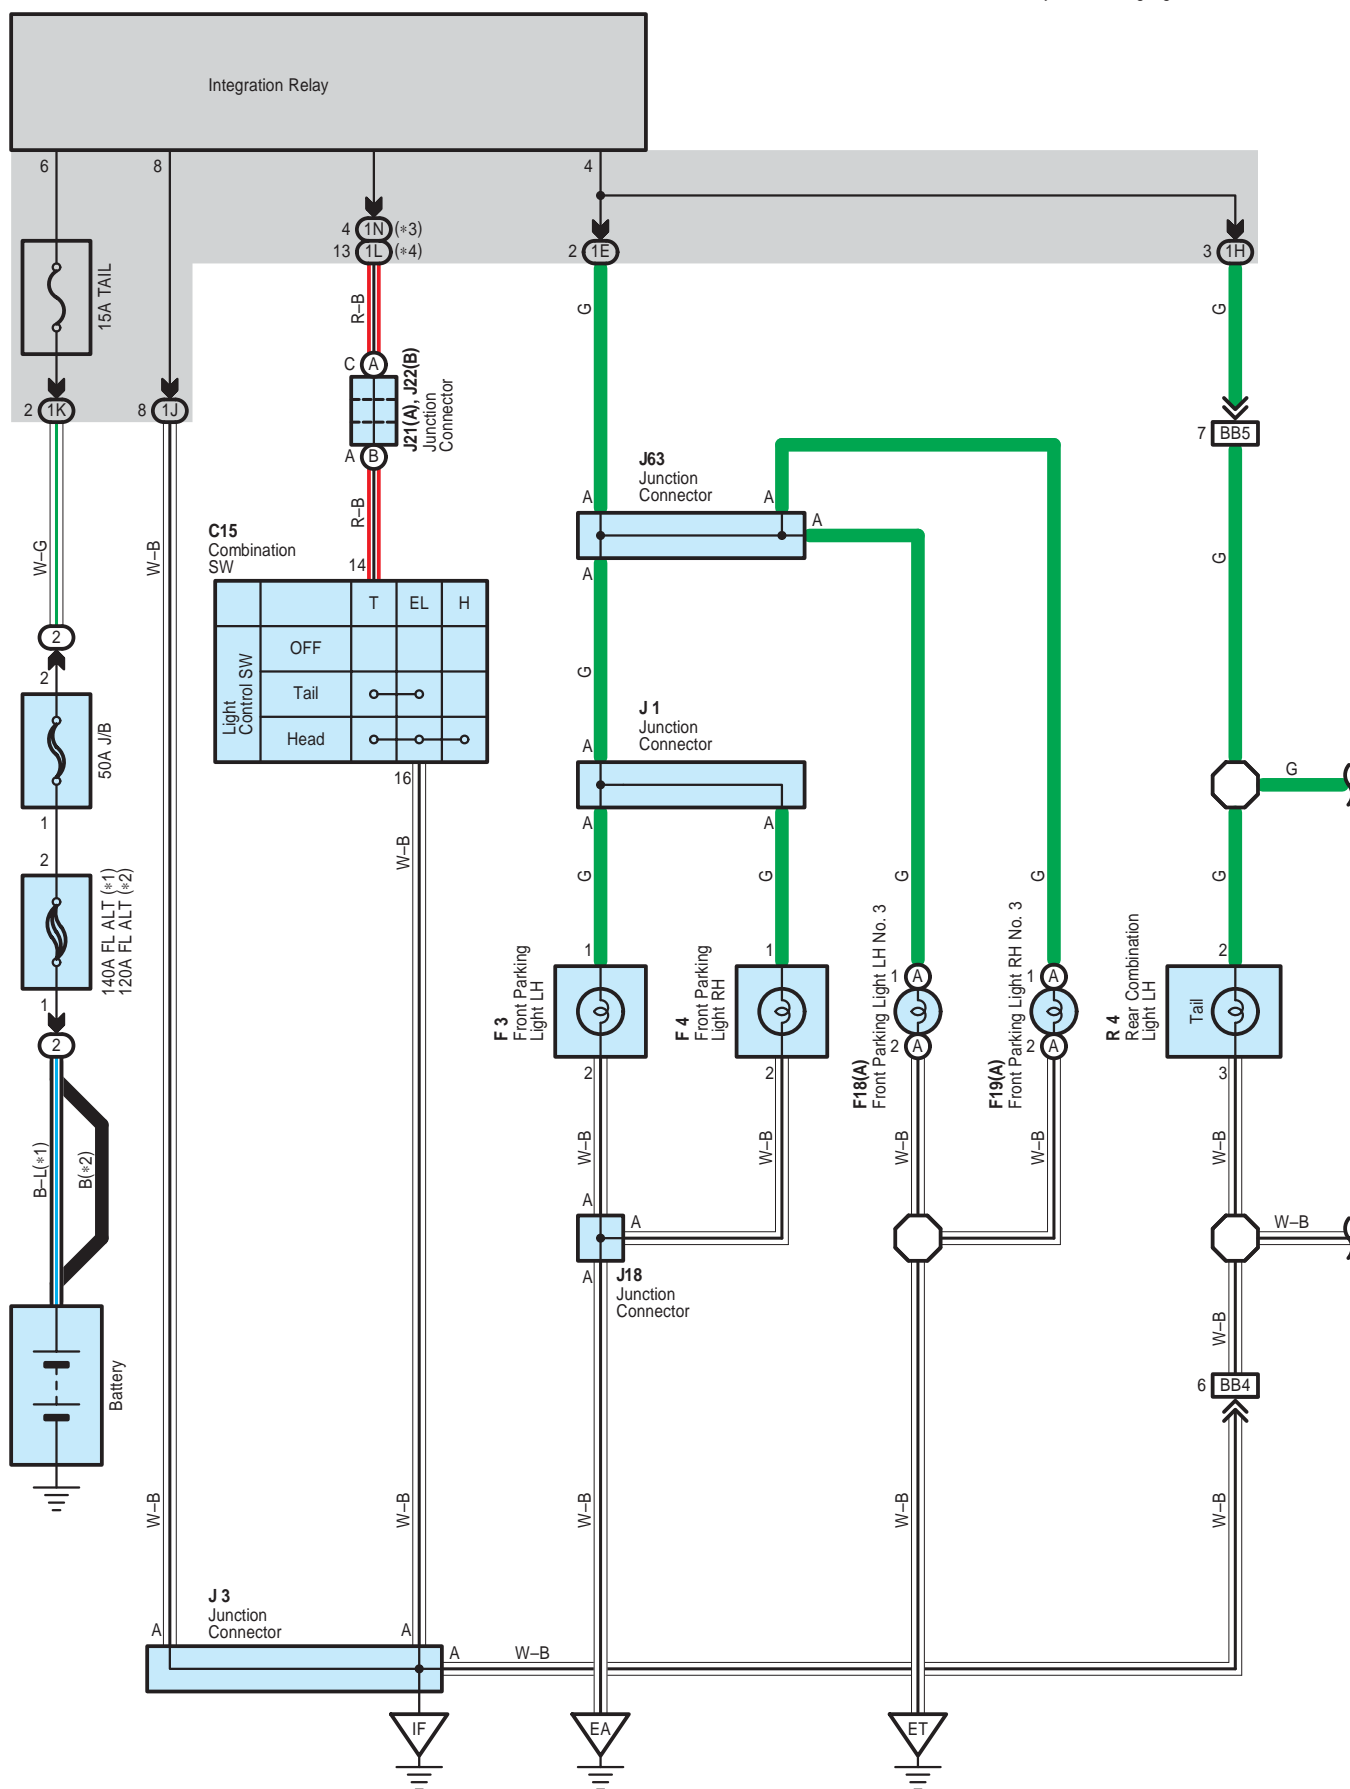



Taillight (Access/Standard Cab)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C15	60	J1	57 (2UZ-FE)	L1	64 (*3)
F3	56 (2UZ-FE)		59 (1GR-FE)		65 (*4)
	58 (1GR-FE)	J3	62	L2	64 (*3)
F4	56 (2UZ-FE)	J18	57 (2UZ-FE)		65 (*4)
	58 (1GR-FE)		59 (1GR-FE)	R4	64 (*3)
F18	A	J21	A		65 (*4)
		J22	B	R5	64 (*3)
F19	A	J63	57 (2UZ-FE)		65 (*4)
			59 (1GR-FE)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1H	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1J	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1K	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1L	27 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1N	31 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BB4	84 (*3)	Frame Wire and Cowl Wire (Under the Driver's Seat)
	85 (*4)	
BB5	84 (*3)	
	85 (*4)	

: Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ-FE)	Front Left Fender
	81 (1GR-FE)	
ET	80 (2UZ-FE)	Front Right Fender
	81 (1GR-FE)	
IF	82	Left Kick Panel
BL	84 (*3)	Surrounding of the Front of the Fuel Tank
	85 (*4)	

* 1 : w/o Daytime Running Light

* 2 : w/ Daytime Running Light

* 3 : Access Cab

* 4 : Standard Cab

* 5 : Access Cab Captain Seat

* 6 : Access Cab Separate Seat

* 7 : Standard Cab Bench Seat

