


- * 1 : Towing Package
- * 2 : Except Towing Package
- * 3 : w/ Daytime Running Light
- * 4 : w/o Daytime Running Light
- * 5 : Separate Type Amplifier
- * 6 : Built-in Type Amplifier
- * 7 : w/ Navigation System
- * 8 : w/o Navigation System

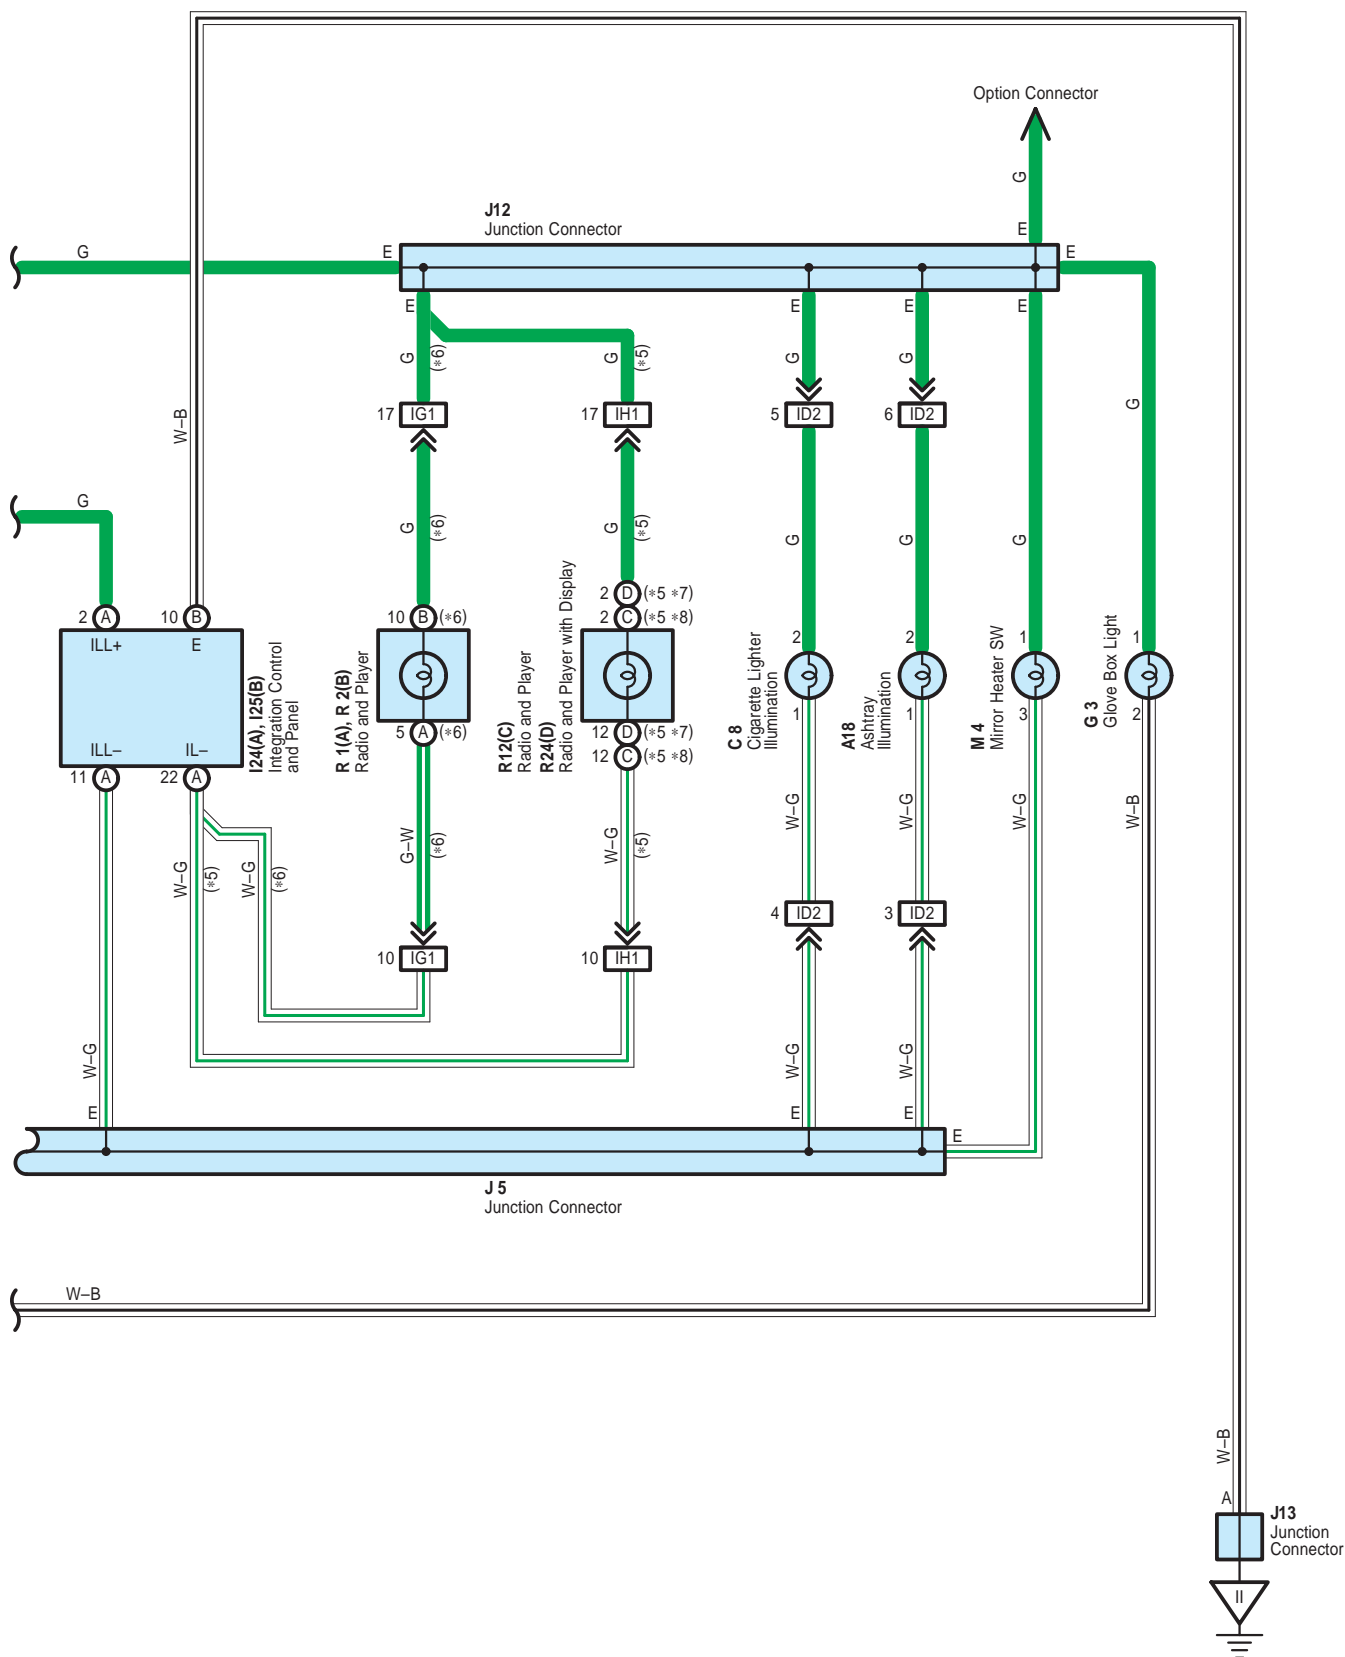

Illumination (Access/Standard Cab)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A18	60	I25 B	61	J22 B	62
C8	60	J3	62	M4	62
C11 A	60	J5	62	R1 A	63
C15	60	J10	62	R2 B	63
C16	60	J12	62	R3	63
G3	61	J13	62	R12 C	63
I24 A	61	J21 A	62	R24 D	63

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1J	26 (*1)	
	30 (*2)	
1K	26 (*1)	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1L	27 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1N	31 (*2)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	82	Cigarette Lighter Wire and Cowl Wire (Instrument Panel Brace LH)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IG1	83	Cowl Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH1	83	Cowl Wire and Floor No.3 Wire (Instrument Panel Brace RH)

: Ground Points

Code	See Page	Ground Points Location
EU	81 (1GR-FE)	Rear Bank of Right Cylinder Head
EW	80 (2UZ-FE)	Front Left Side of Cylinder Head
IF	82	Left Kick Panel
II	82	Right Kick Panel

* 1 : w/o Daytime Running Light * 2 : w/ Daytime Running Light * 3 : Access Cab * 4 : Standard Cab * 5 : Access Cab Captain Seat
 * 6 : Access Cab Separate Seat * 7 : Standard Cab Bench Seat

