



Tire Pressure Warning System (Access/Standard Cab)

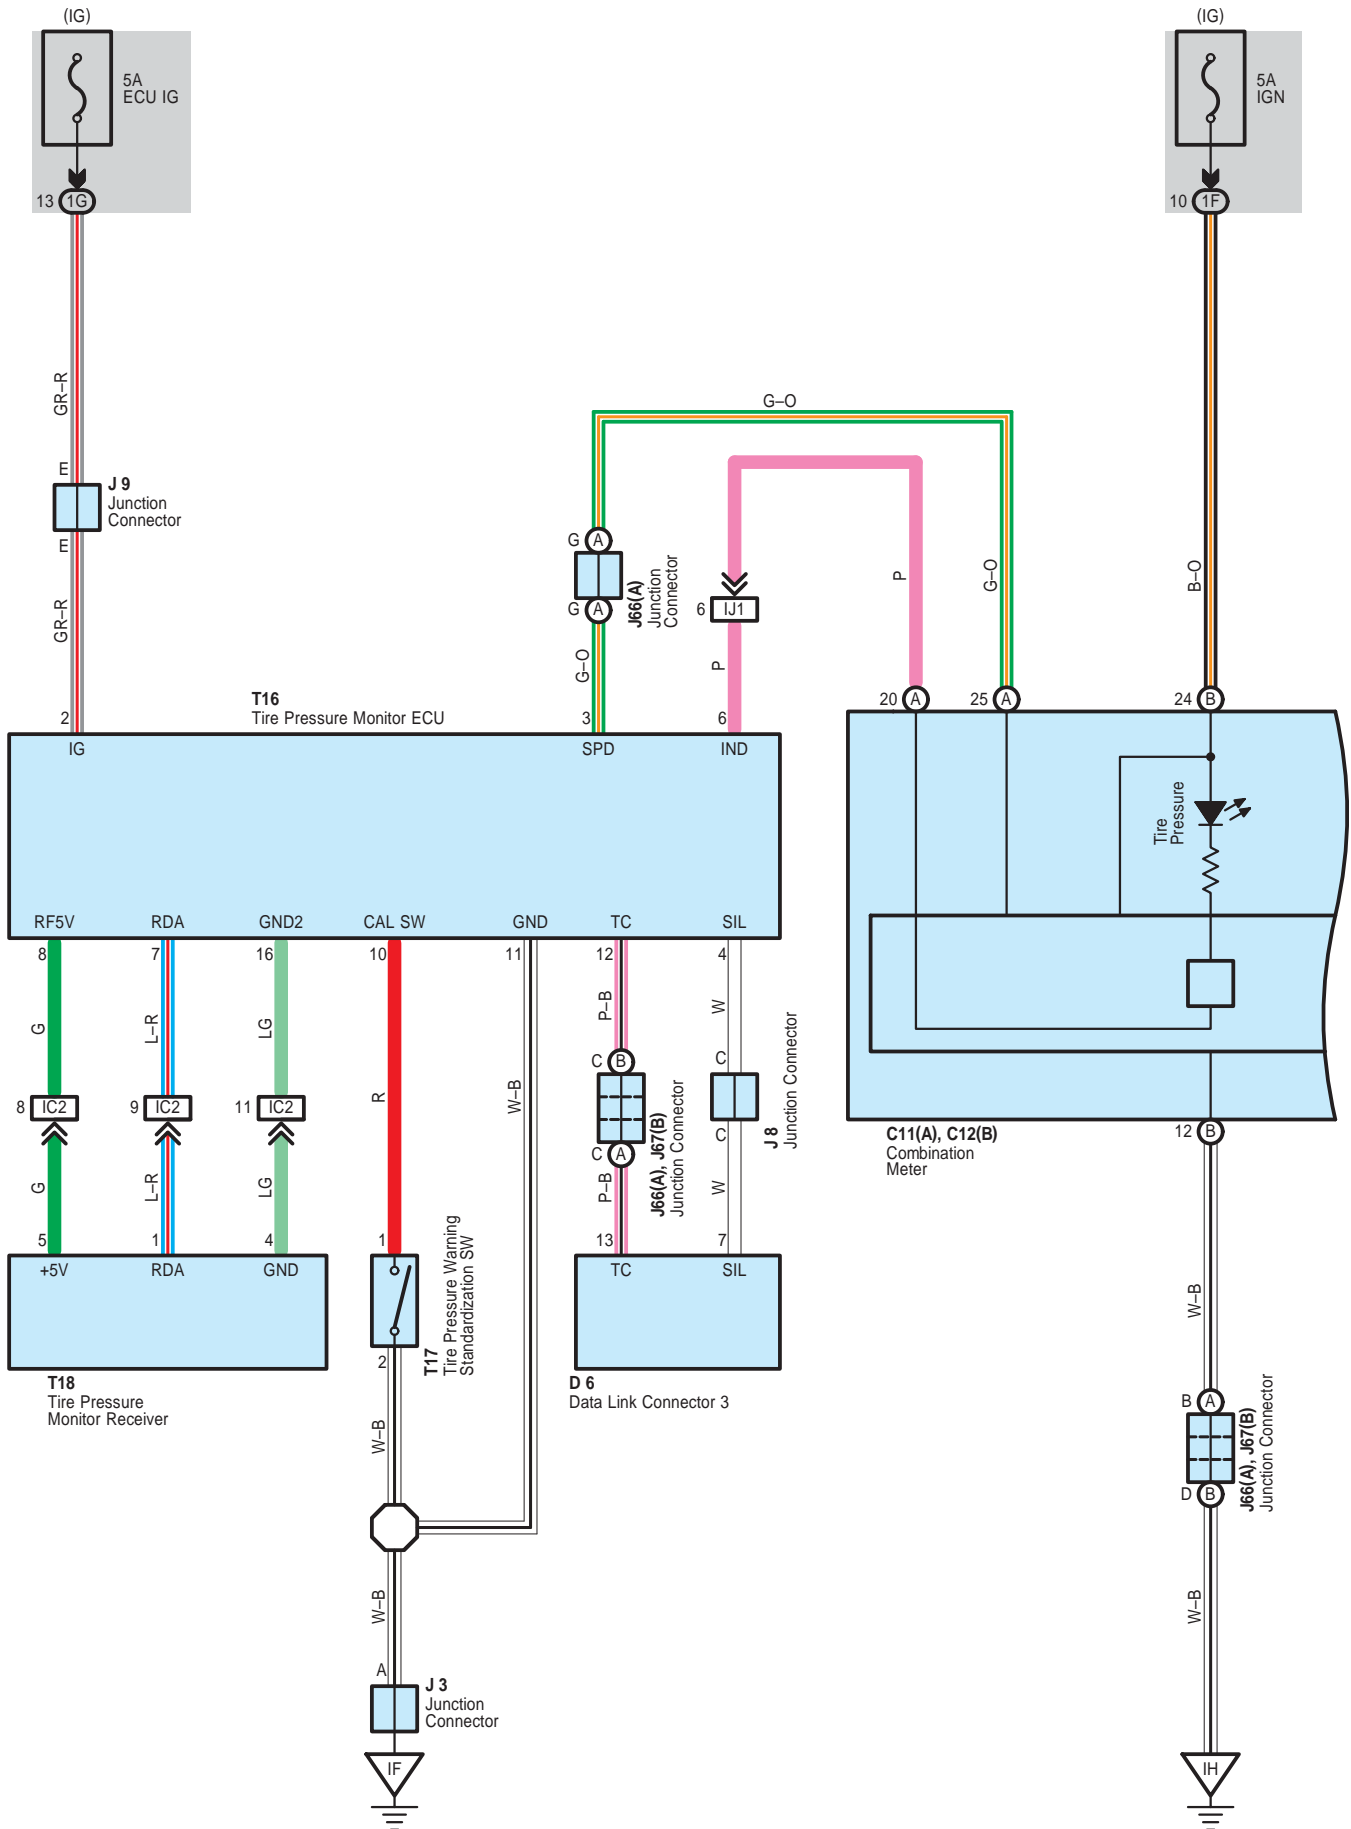

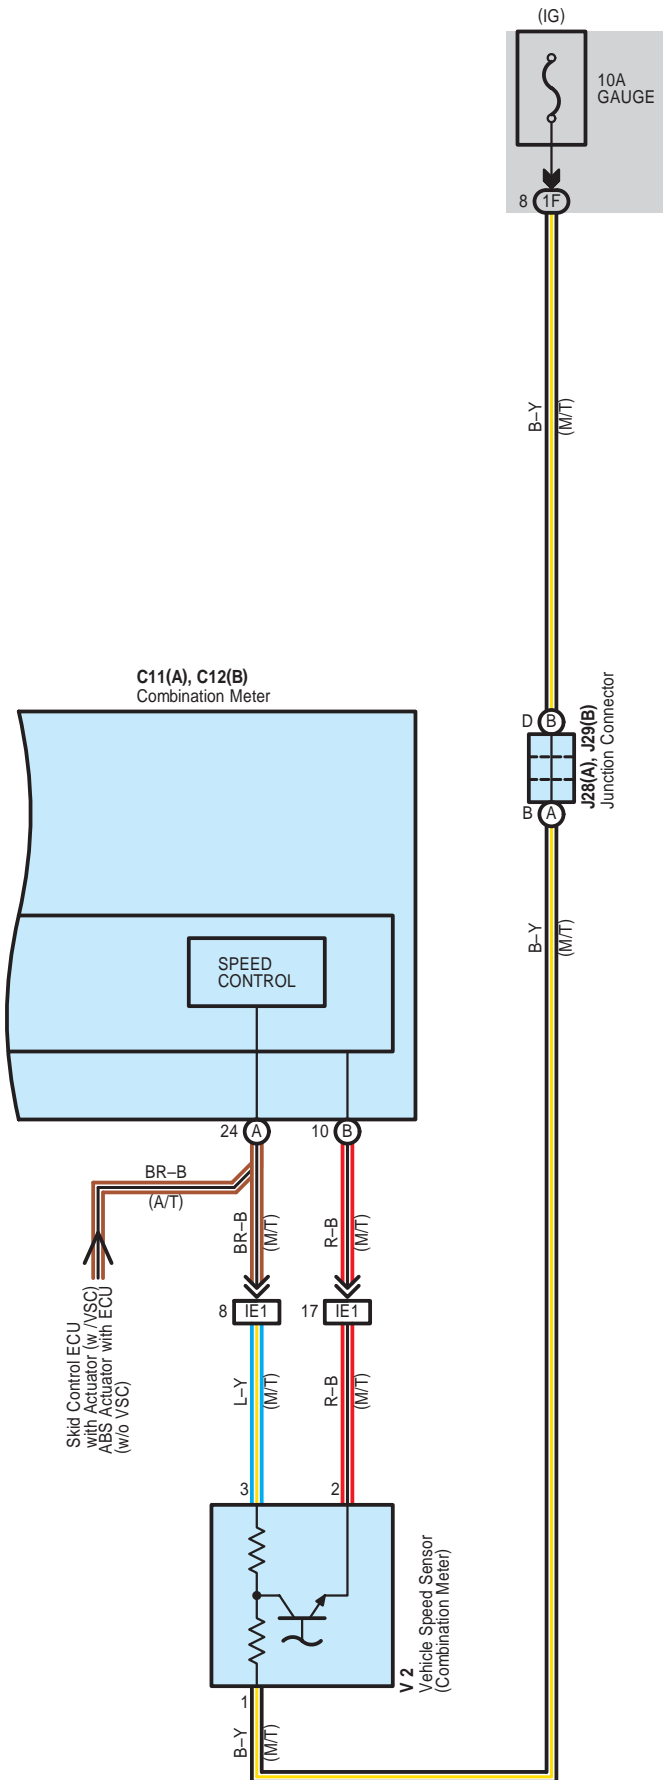

Tire Pressure Warning System (Access/Standard Cab)

System Outline

The air pressure sensor installed in the tire wheel detects the tire air pressure and transmits signals to the vehicle side receiver. When the detected tire air pressure is below a specified level, the warning light in the combination meter comes on to inform the driver.

Press the tire pressure warning standardization SW for 3 seconds with the ignition SW at ON position after the tire pressure is adjusted to the specified value. It will lead the tire pressure monitor ECU to control and warn the pressure according to the specified value.

Warnings when the tire pressure is low

* When the tire air pressure is below a specified level, the warning light in the combination meter comes on.

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
C11	A	60	J9		62	T16	63
C12	B	60	J28	A	62	T17	63
D6		61	J29	B	62	T18	64 (*3)
J3		62	J66	A	62		65 (*4)
J8		62	J67	B	62	V2	59 (1GR-FE)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	
1G	26 (*1)	
	30 (*2)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	82	Cowl Wire and Roof Wire (Left Side of Instrument Panel)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IJ1	83	Cowl Wire and Cowl Wire (Right Side of Instrument Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IF	82	Left Kick Panel
IH	82	Right Kick Panel

* 1 : w/o Daytime Running Light

* 2 : w/ Daytime Running Light

* 3 : Access Cab

* 4 : Standard Cab

* 5 : Access Cab Captain Seat

* 6 : Access Cab Separate Seat

* 7 : Standard Cab Bench Seat

