



# Audio System for Separate Amplifier (Access/Standard Cab)

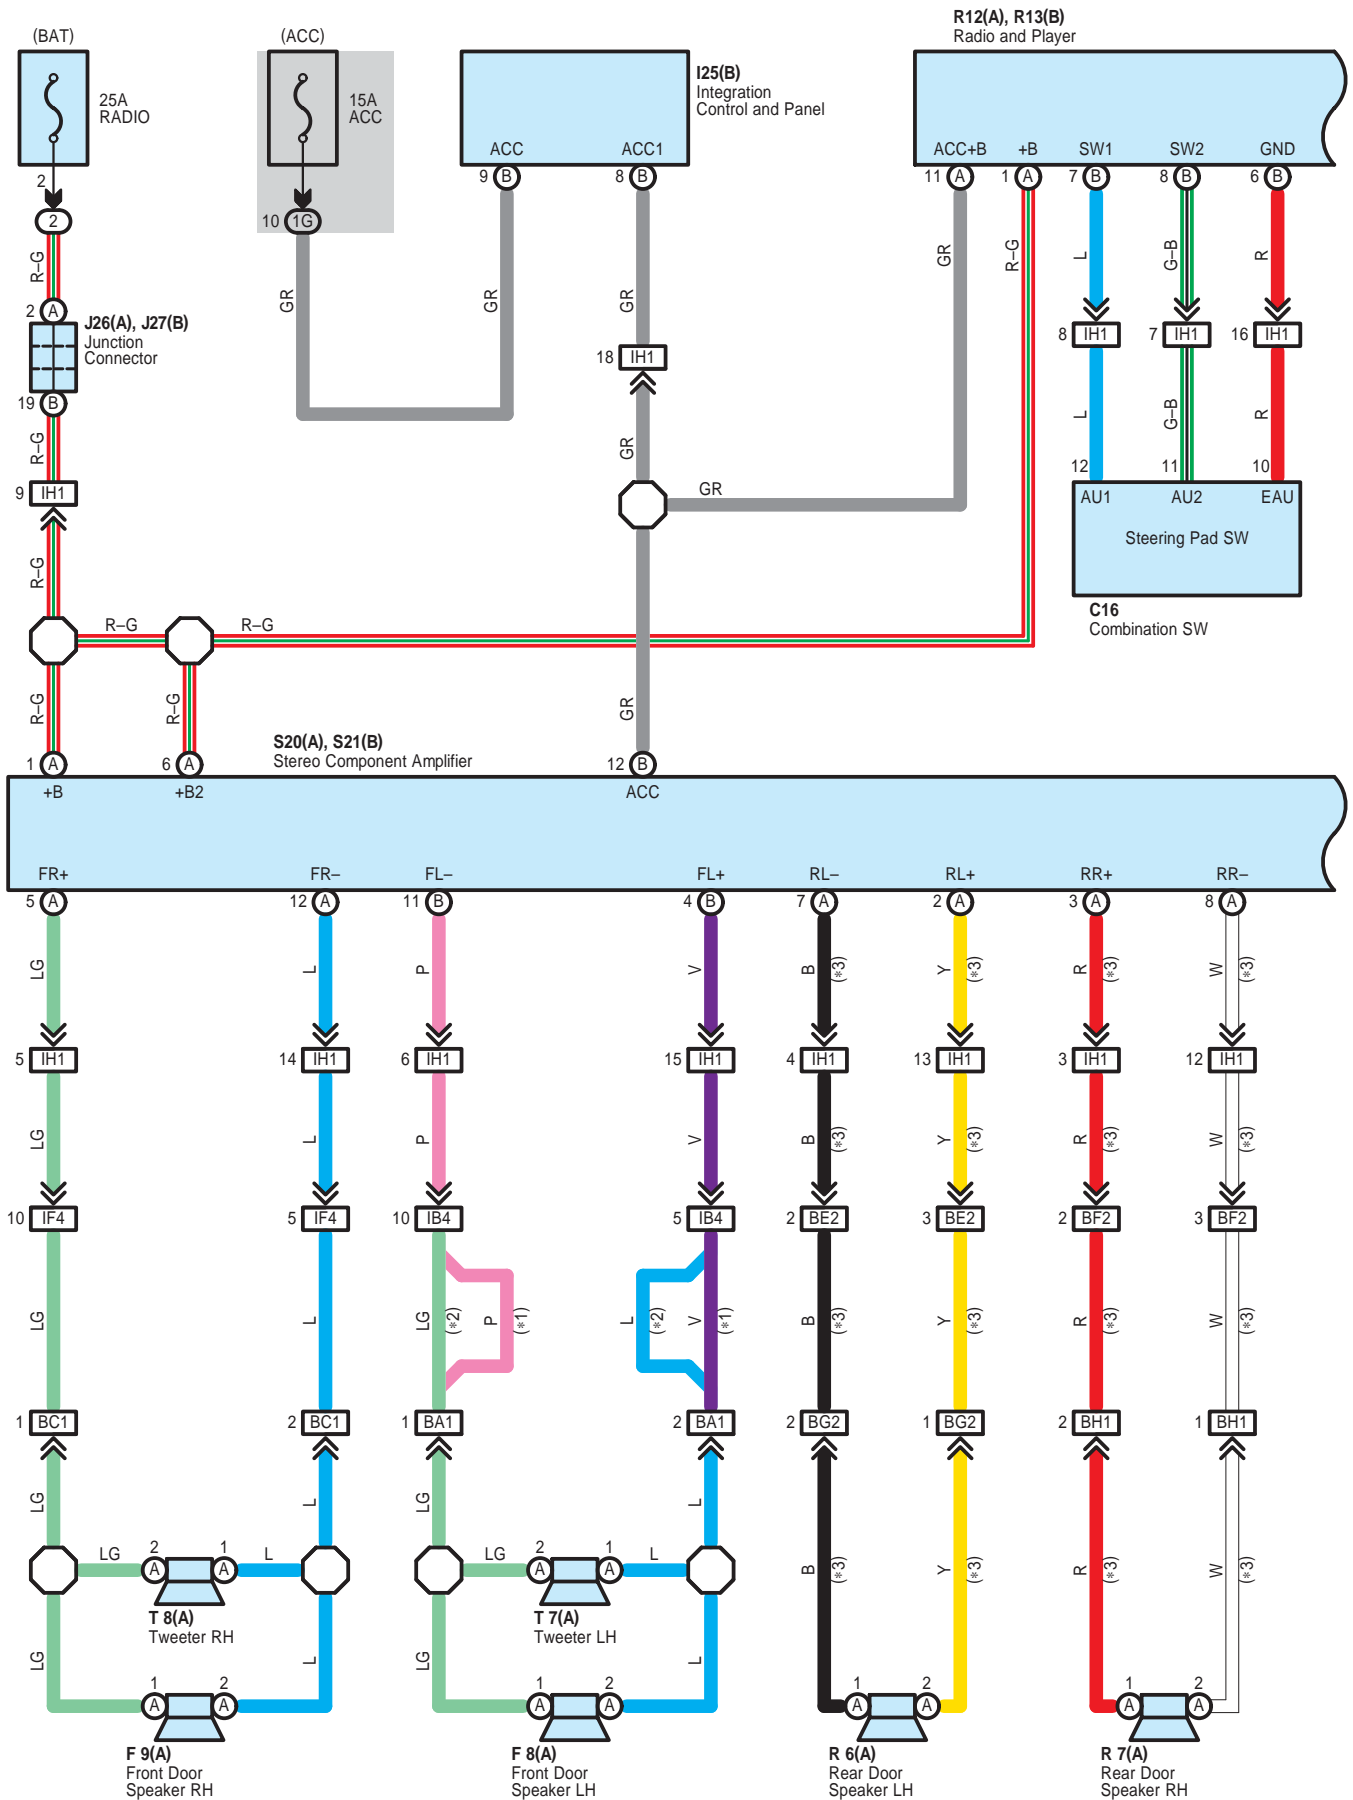

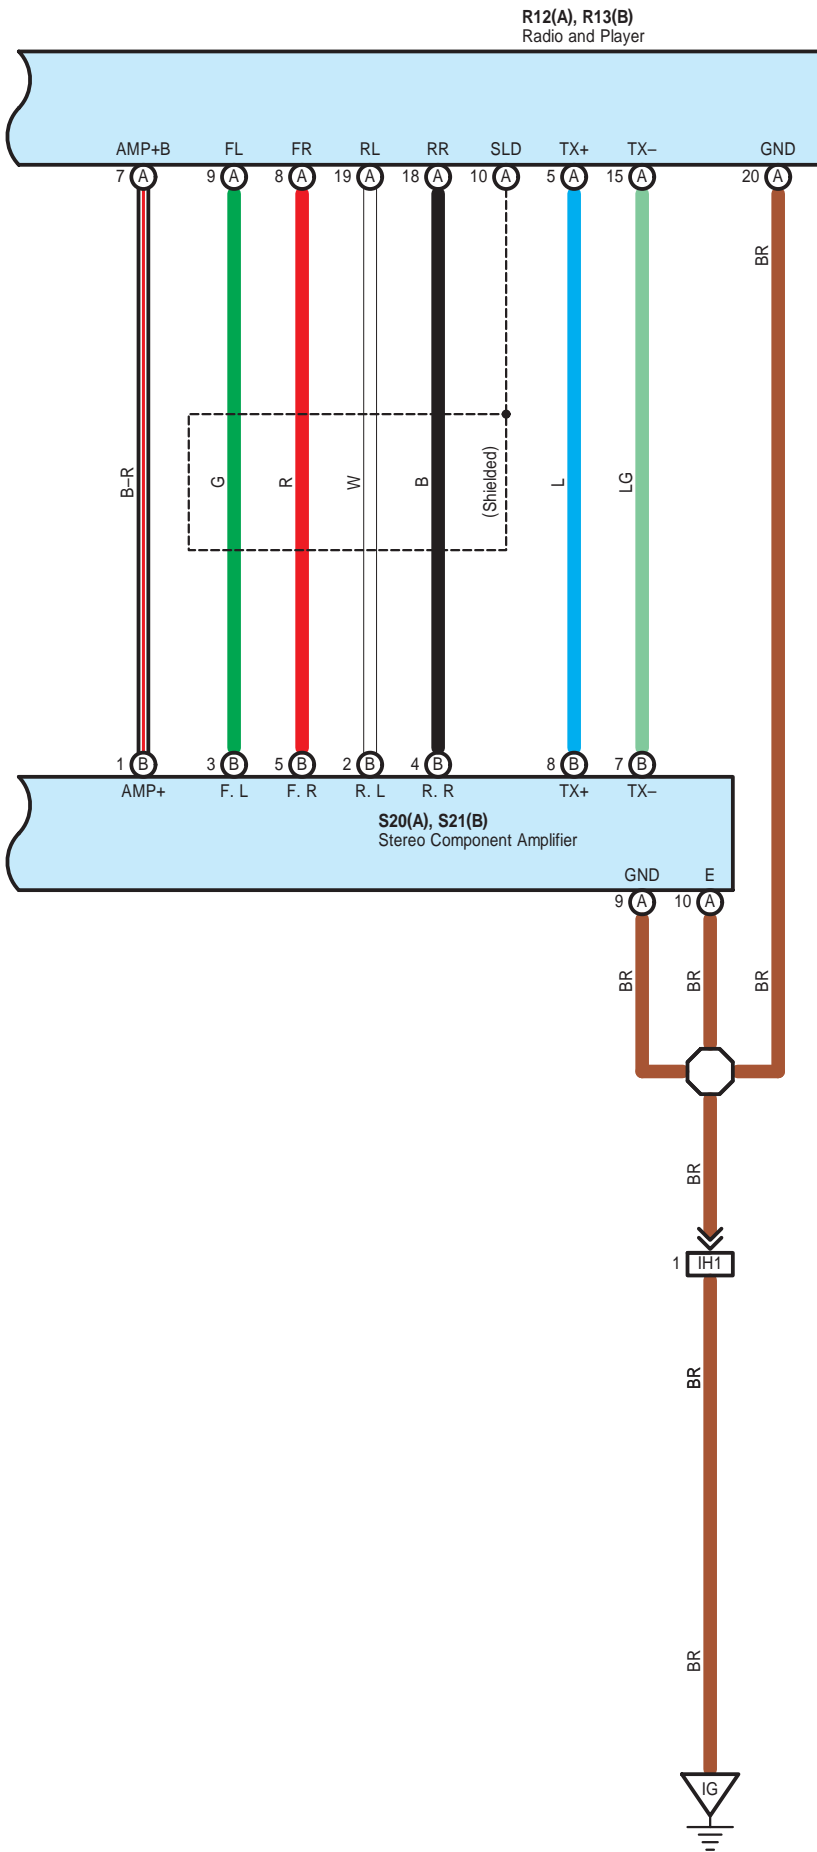

- \* 1 : w/ Door Lock Control
- \* 2 : w/o Door Lock Control
- \* 3 : Access Cab

## Audio System for Separate Amplifier (Access/Standard Cab)

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
C16	60	J27	B	62	S20
F8	A	R6	A	64 (*3)	A
F9	A	R7	A	64 (*3)	S21
I25	B	R12	A	64 (*3)	B
J26	A	R13	B	64 (*3)	T7
				64 (*3)	A
				64 (*3)	T8
				64 (*3)	A

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1G	26 (*1) 30 (*2)	Cowl Wire and Driver Side J/B (Lower Finish Panel)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB4	82	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF4	83	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IH1	83	Cowl Wire and Floor No.3 Wire (Instrument Panel Brace RH)
BA1	84 (*3)	Front Door LH Wire and Speaker Tweeter Wire LH (Inside of Front Door LH)
BC1	84 (*3)	Front Door RH Wire and Speaker Tweeter Wire RH (Inside of Front Door RH)
BE2	84 (*3)	Floor No.2 Wire and Cowl Wire (Center of Left Rocker Panel)
BF2	84 (*3)	Floor No.1 Wire and Cowl Wire (Center of Right Rocker Panel)
BG2	84 (*3)	Floor No.2 Wire and Rear Door No.2 Wire (Under the Left Quarter Panel)
BH1	84 (*3)	Floor No.1 Wire and Rear Door No.1 Wire (Under the Right Quarter Panel)

### : Ground Points

Code	See Page	Ground Points Location
IG	82	Instrument Panel Brace RH

\* 1 : w/o Daytime Running Light    \* 2 : w/ Daytime Running Light    \* 3 : Access Cab    \* 4 : Standard Cab    \* 5 : Access Cab Captain Seat  
 \* 6 : Access Cab Separate Seat    \* 7 : Standard Cab Bench Seat

