

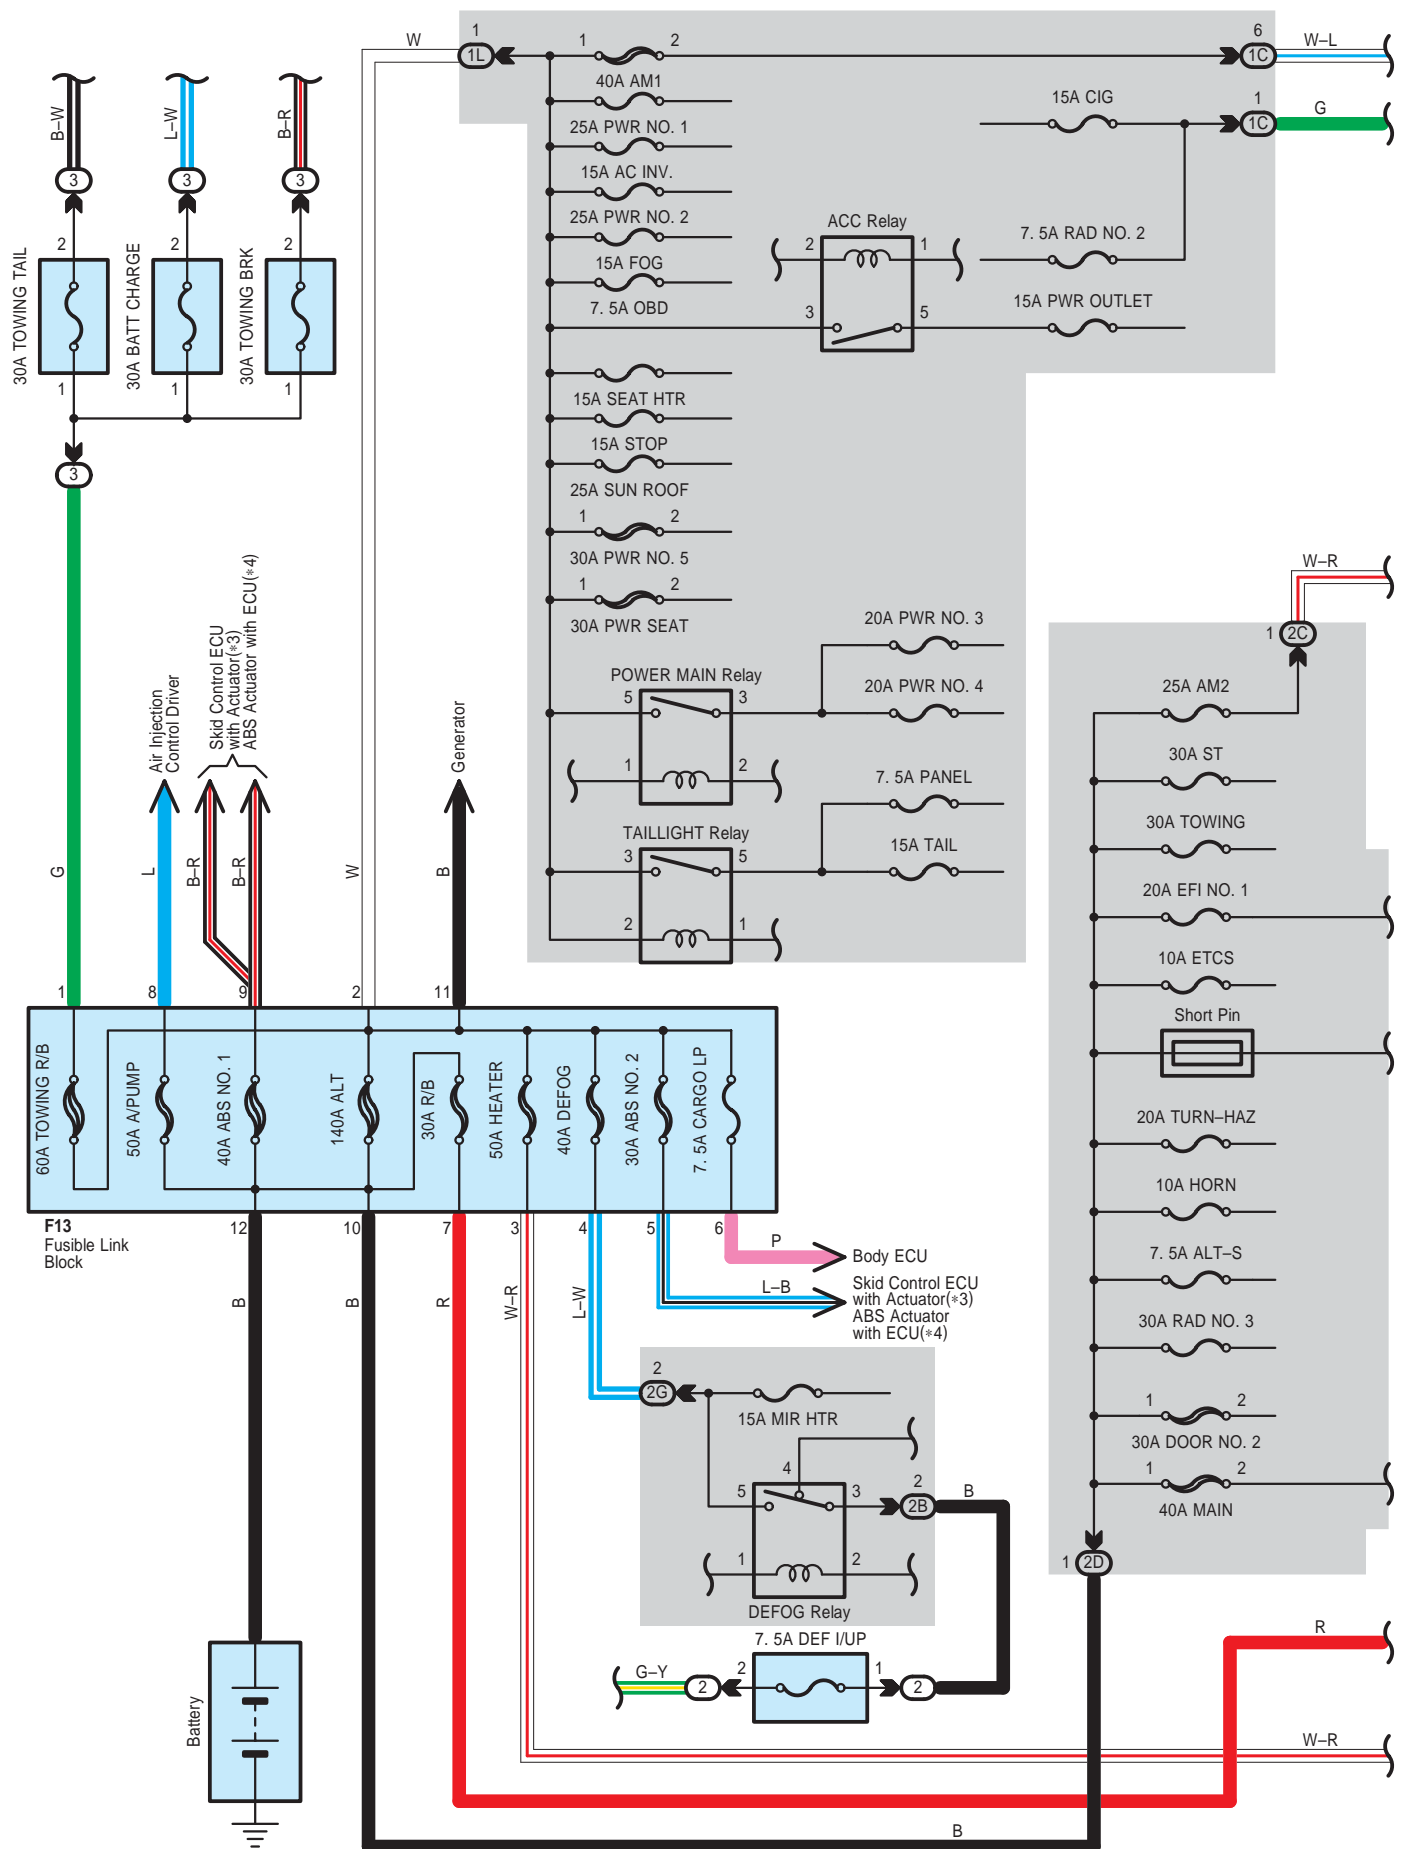


Power Source (Double Cab)

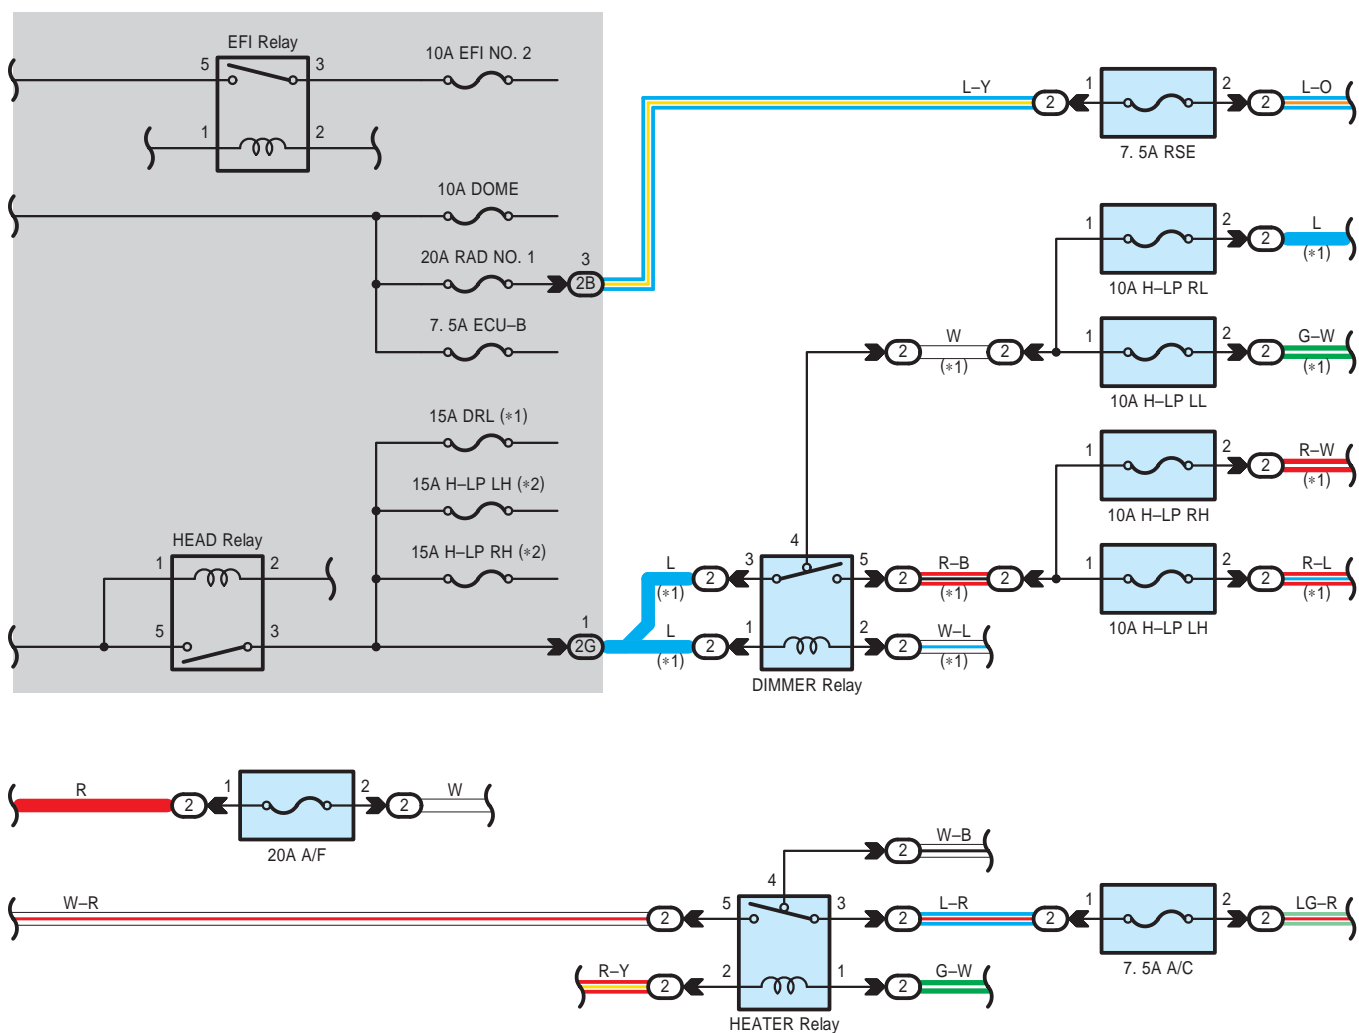

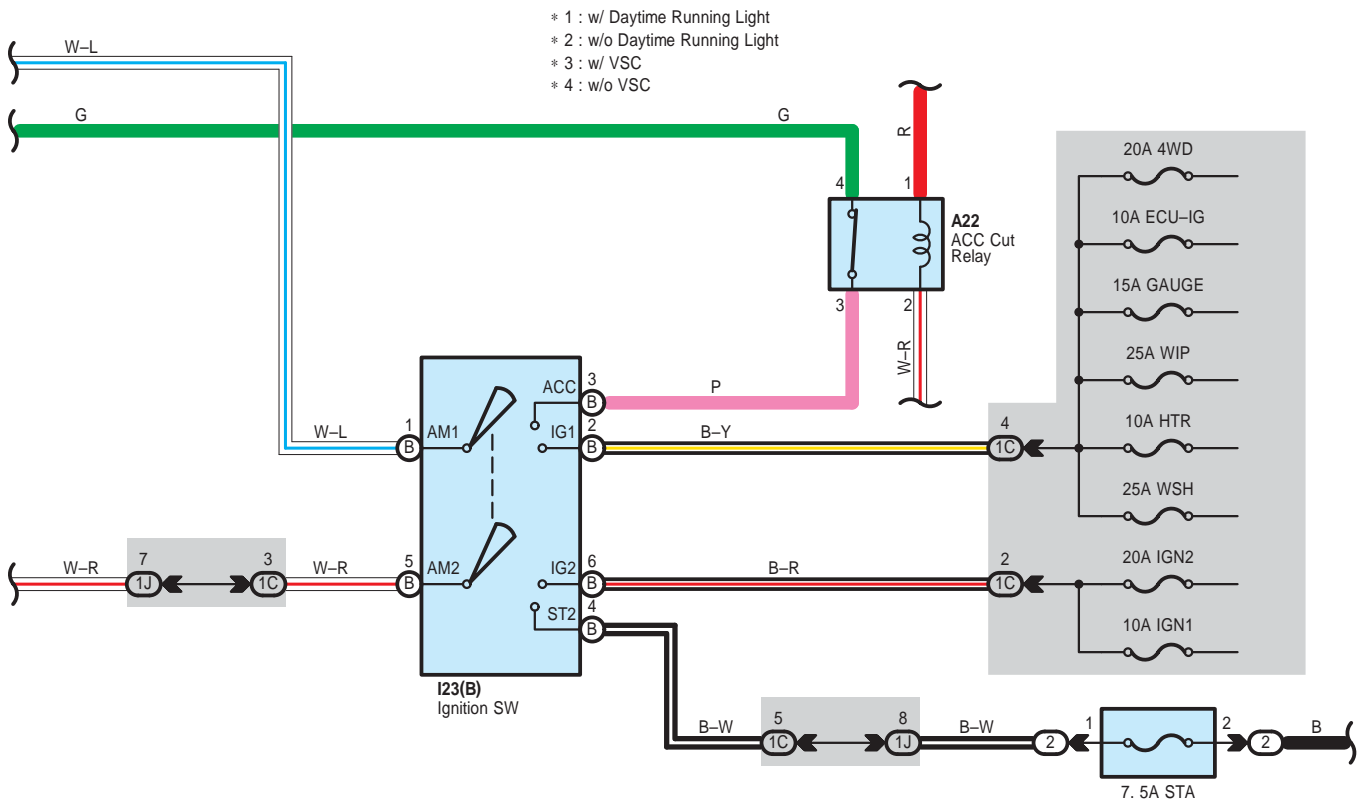

Power Source (Double Cab)

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A22	72	F13	70	I23	B 73

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	42	Engine Room R/B No.2 (Engine Compartment Left)
3	43	Engine Room R/B No.3 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L		
2B	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2C		
2D		
2G		

