



Engine Immobiliser System (Access/Standard Cab)

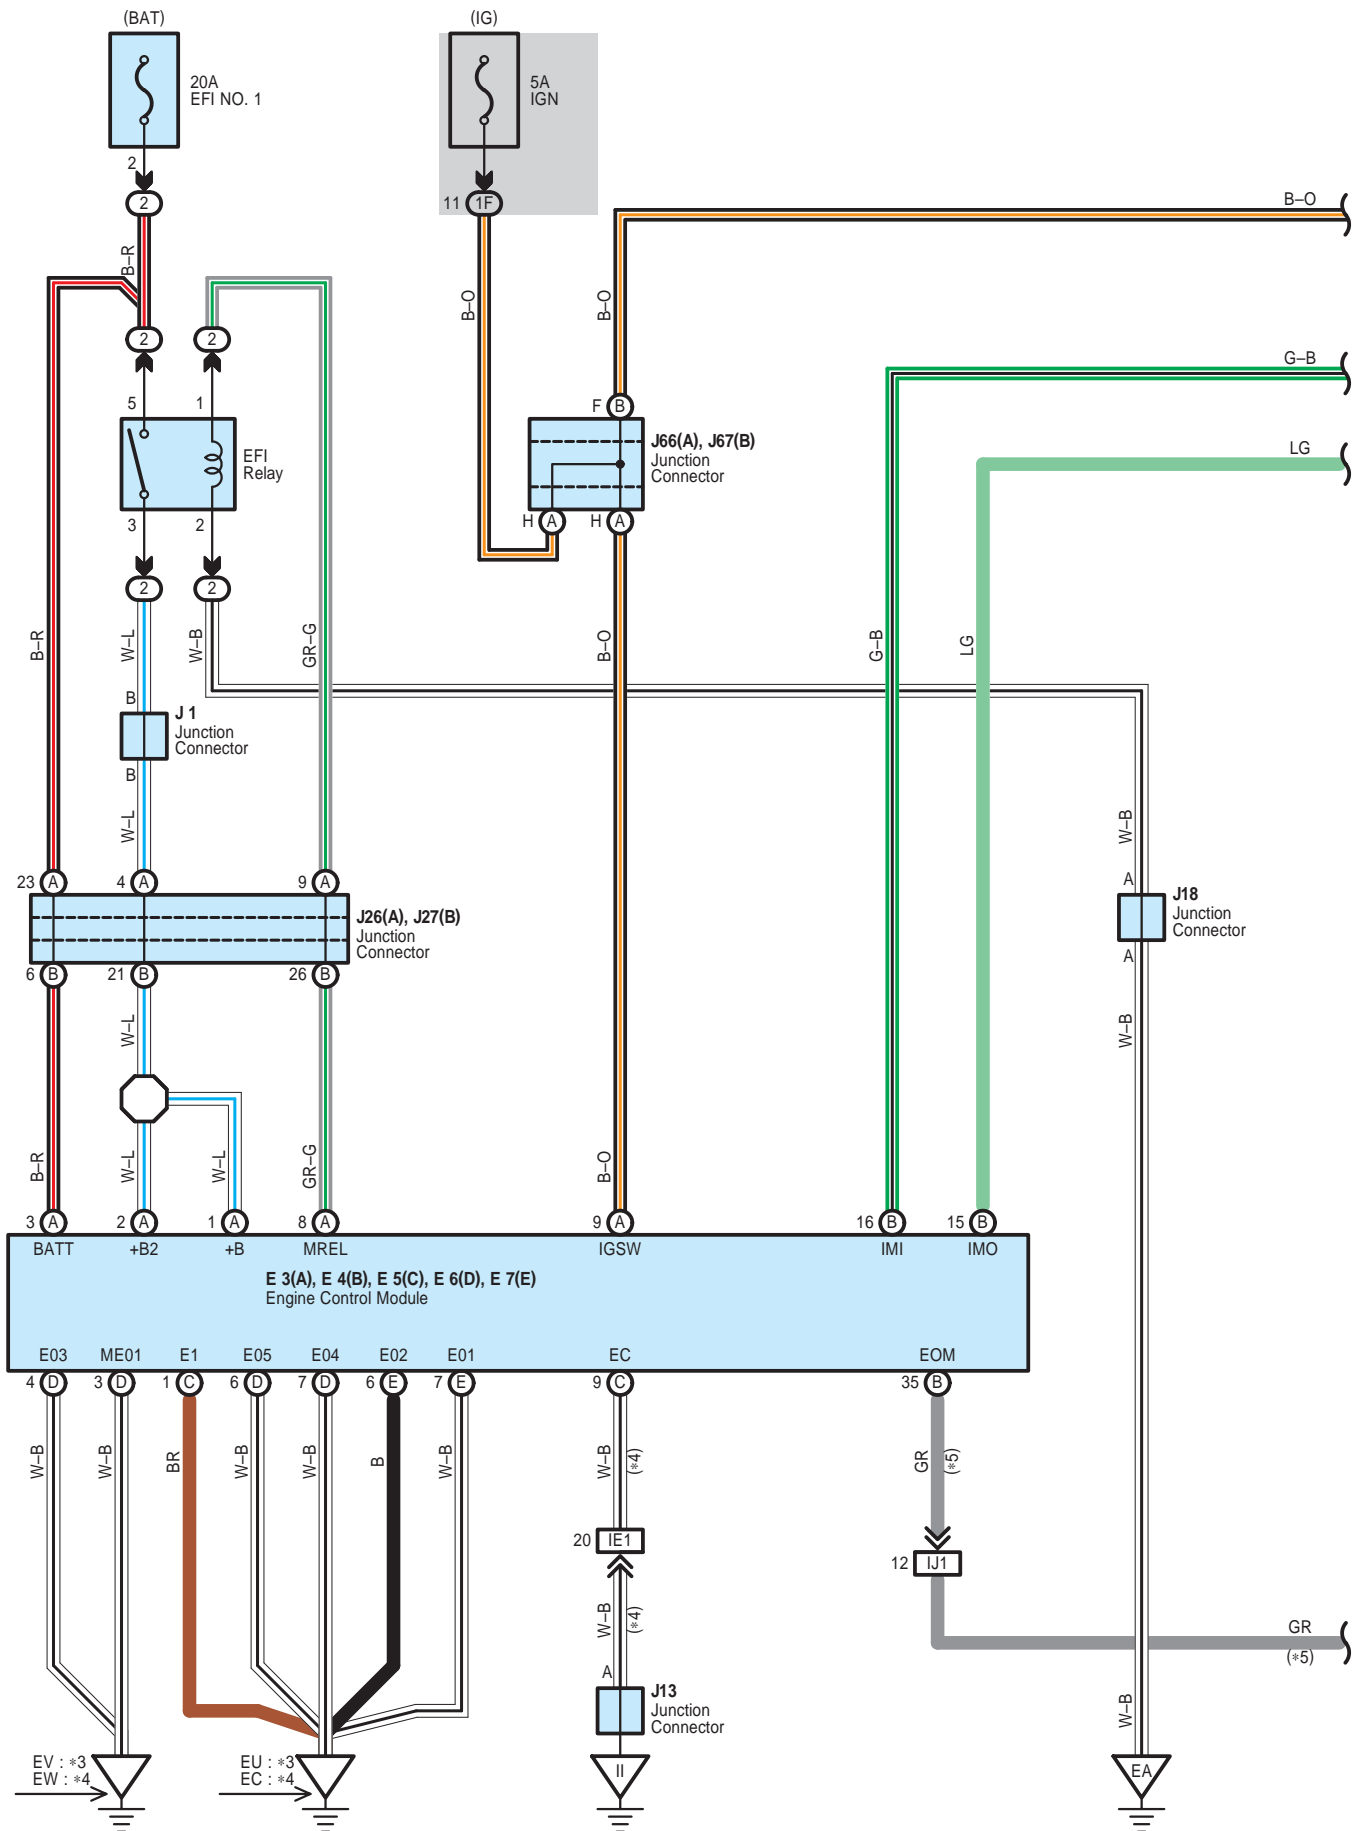

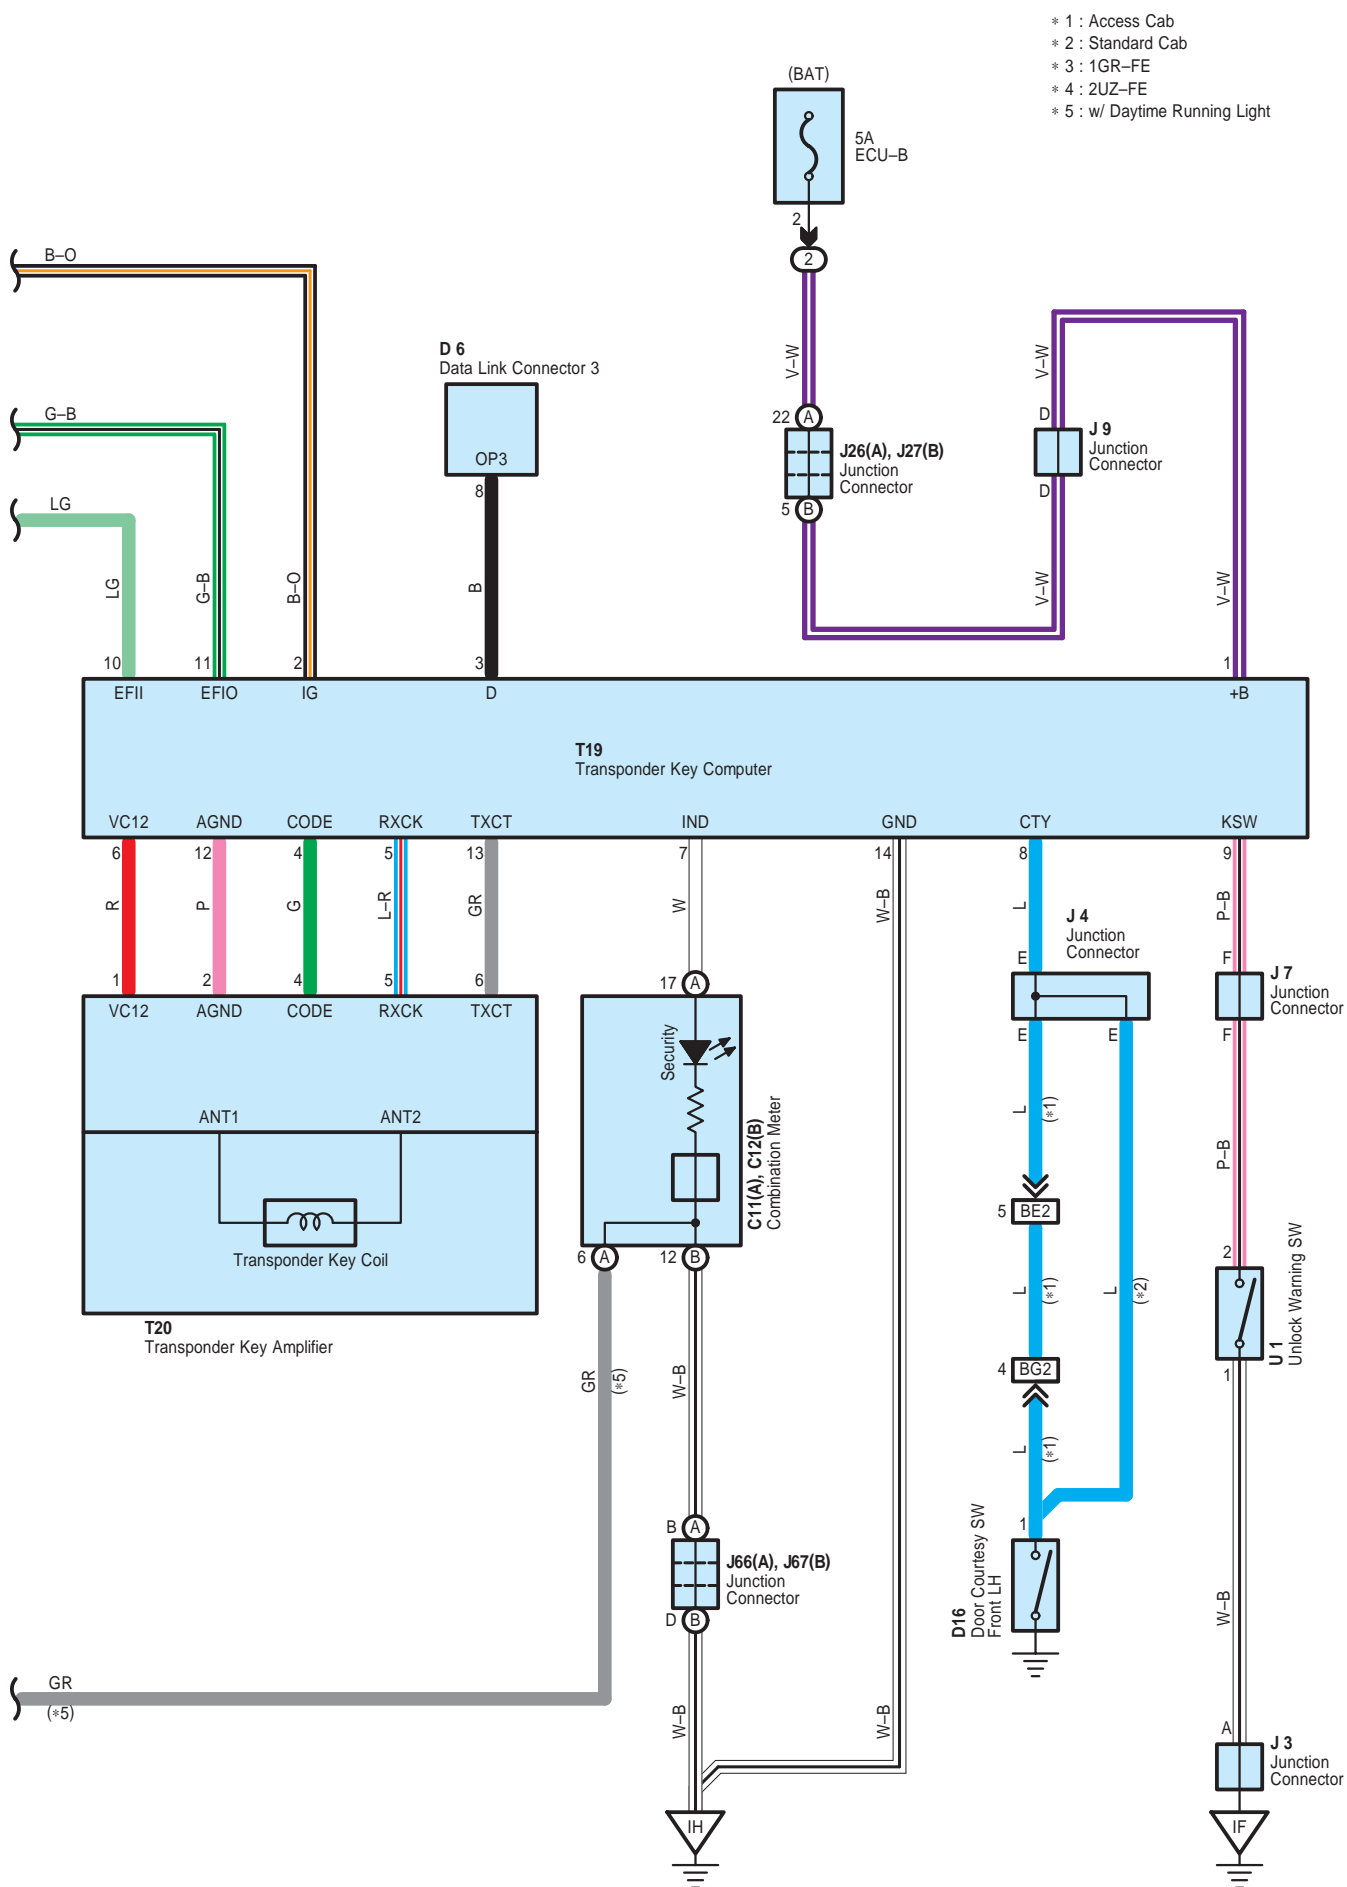

Engine Immobiliser System (Access/Standard Cab)

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
C11	A	60	E7	E	61	J18		59 (1GR-FE)
C12	B	60	J1		57 (2UZ-FE)	J26	A	62
D6		61			59 (1GR-FE)	J27	B	62
D16		64 (*3)	J3		62	J66	A	62
		65 (*4)	J4		62	J67	B	62
E3	A	61	J7		62	T19		63
E4	B	61	J9		62	T20		63
E5	C	61	J13		62	U1		63
E6	D	61	J18		57 (2UZ-FE)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	24	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	26 (*1)	Cowl Wire and Driver Side J/B (Lower Finish Panel)
	30 (*2)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	83	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IJ1	83	Cowl Wire and Cowl Wire (Right Side of Instrument Panel)
BE2	84 (*3)	Floor No.2 Wire and Cowl Wire (Center of Left Rocker Panel)
BG2	84 (*3)	Floor No.2 Wire and Rear Door No.2 Wire (Under the Left Quarter Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	80 (2UZ-FE)	Front Left Fender
	81 (1GR-FE)	
EC	80 (2UZ-FE)	Rear Bank of Left Cylinder Head
EU	81 (1GR-FE)	Rear Bank of Right Cylinder Head
EV	81 (1GR-FE)	Rear Bank of Left Cylinder Head
EW	80 (2UZ-FE)	Front Left Side of Cylinder Head
IF	82	Left Kick Panel
IH	82	Right Kick Panel
II		

* 1 : w/o Daytime Running Light

* 2 : w/ Daytime Running Light

* 3 : Access Cab

* 4 : Standard Cab

* 5 : Access Cab Captain Seat

* 6 : Access Cab Separate Seat

* 7 : Standard Cab Bench Seat

