




Center Cluster Integration Control System (Double Cab)

- * 1 : Captain Seat
- * 2 : Separate Seat

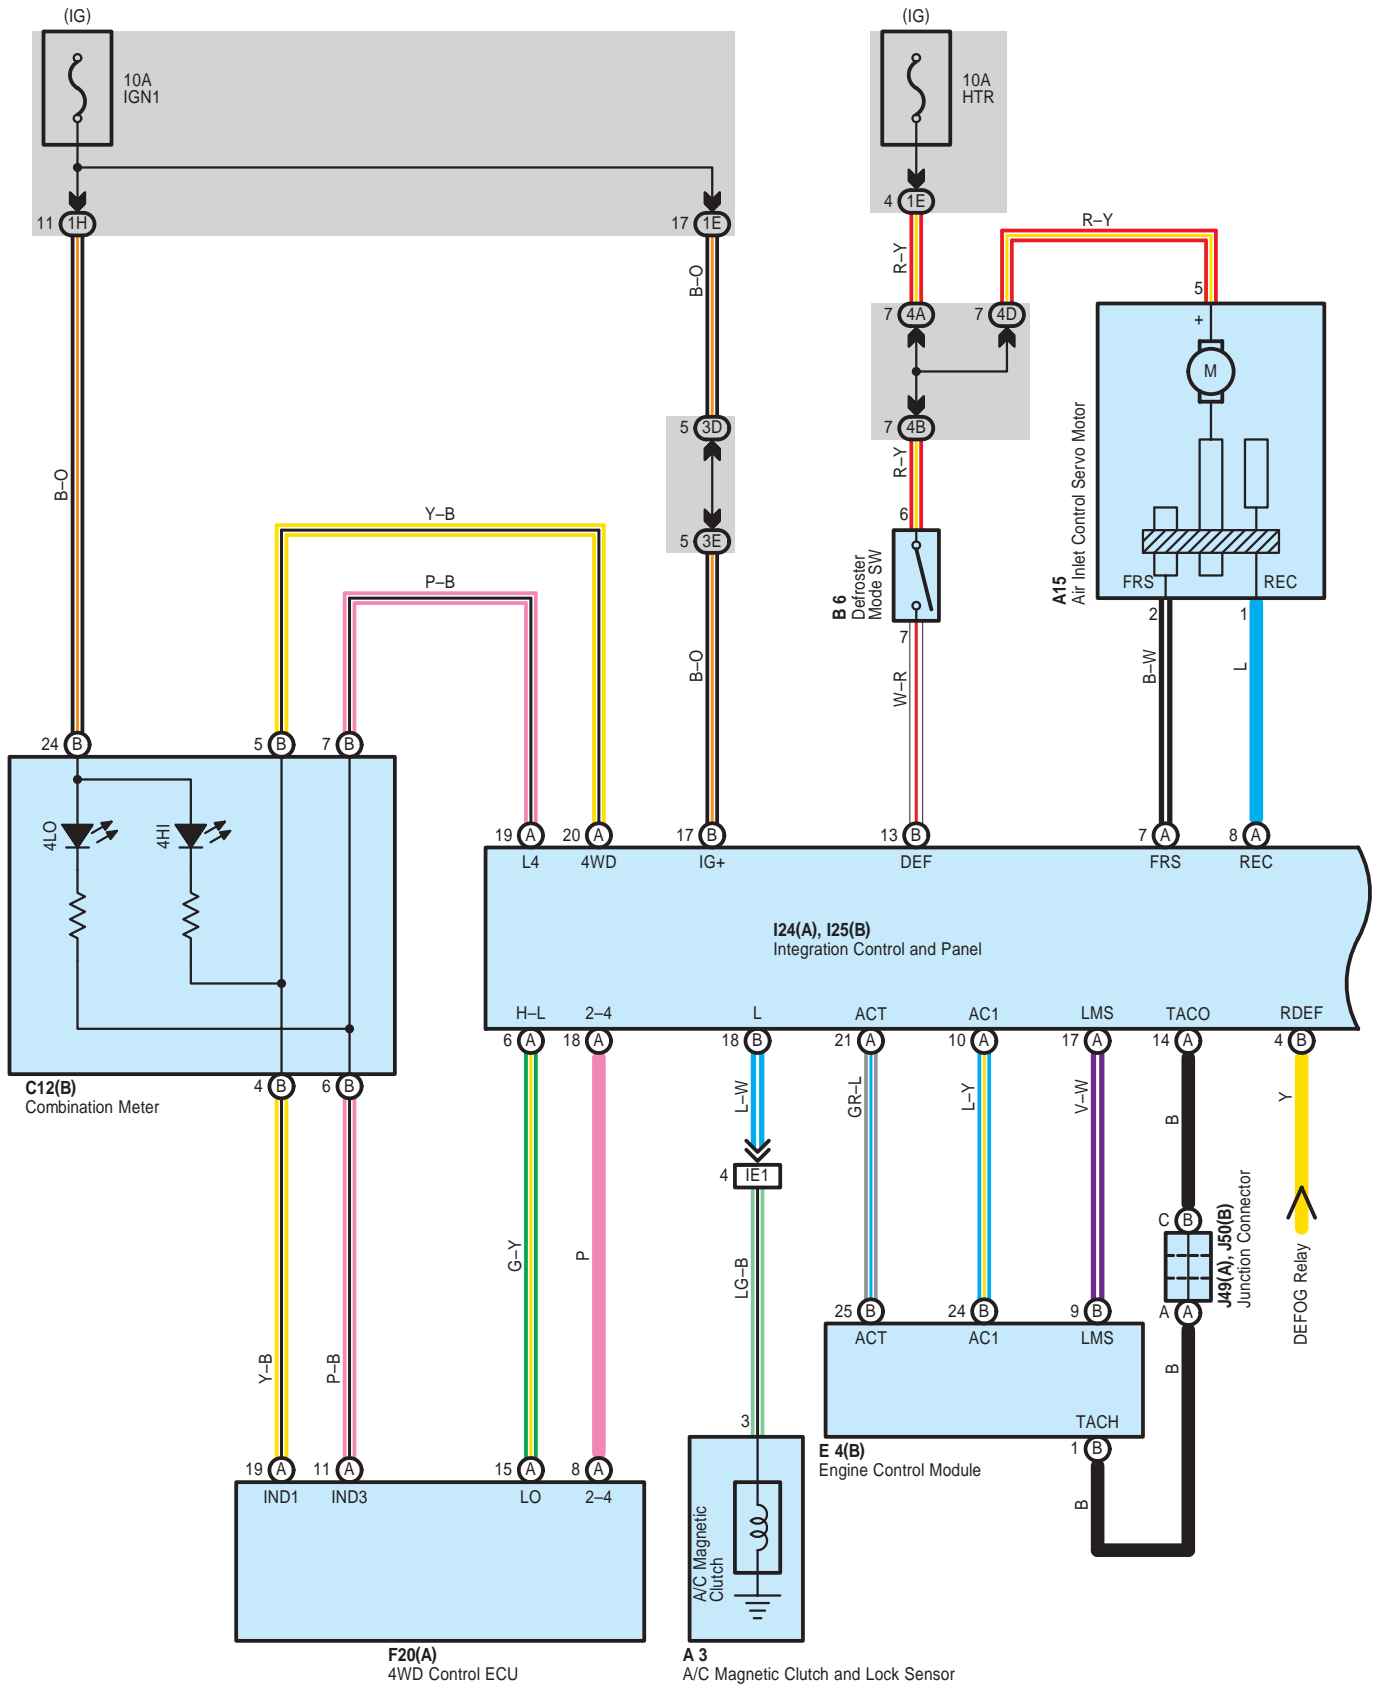

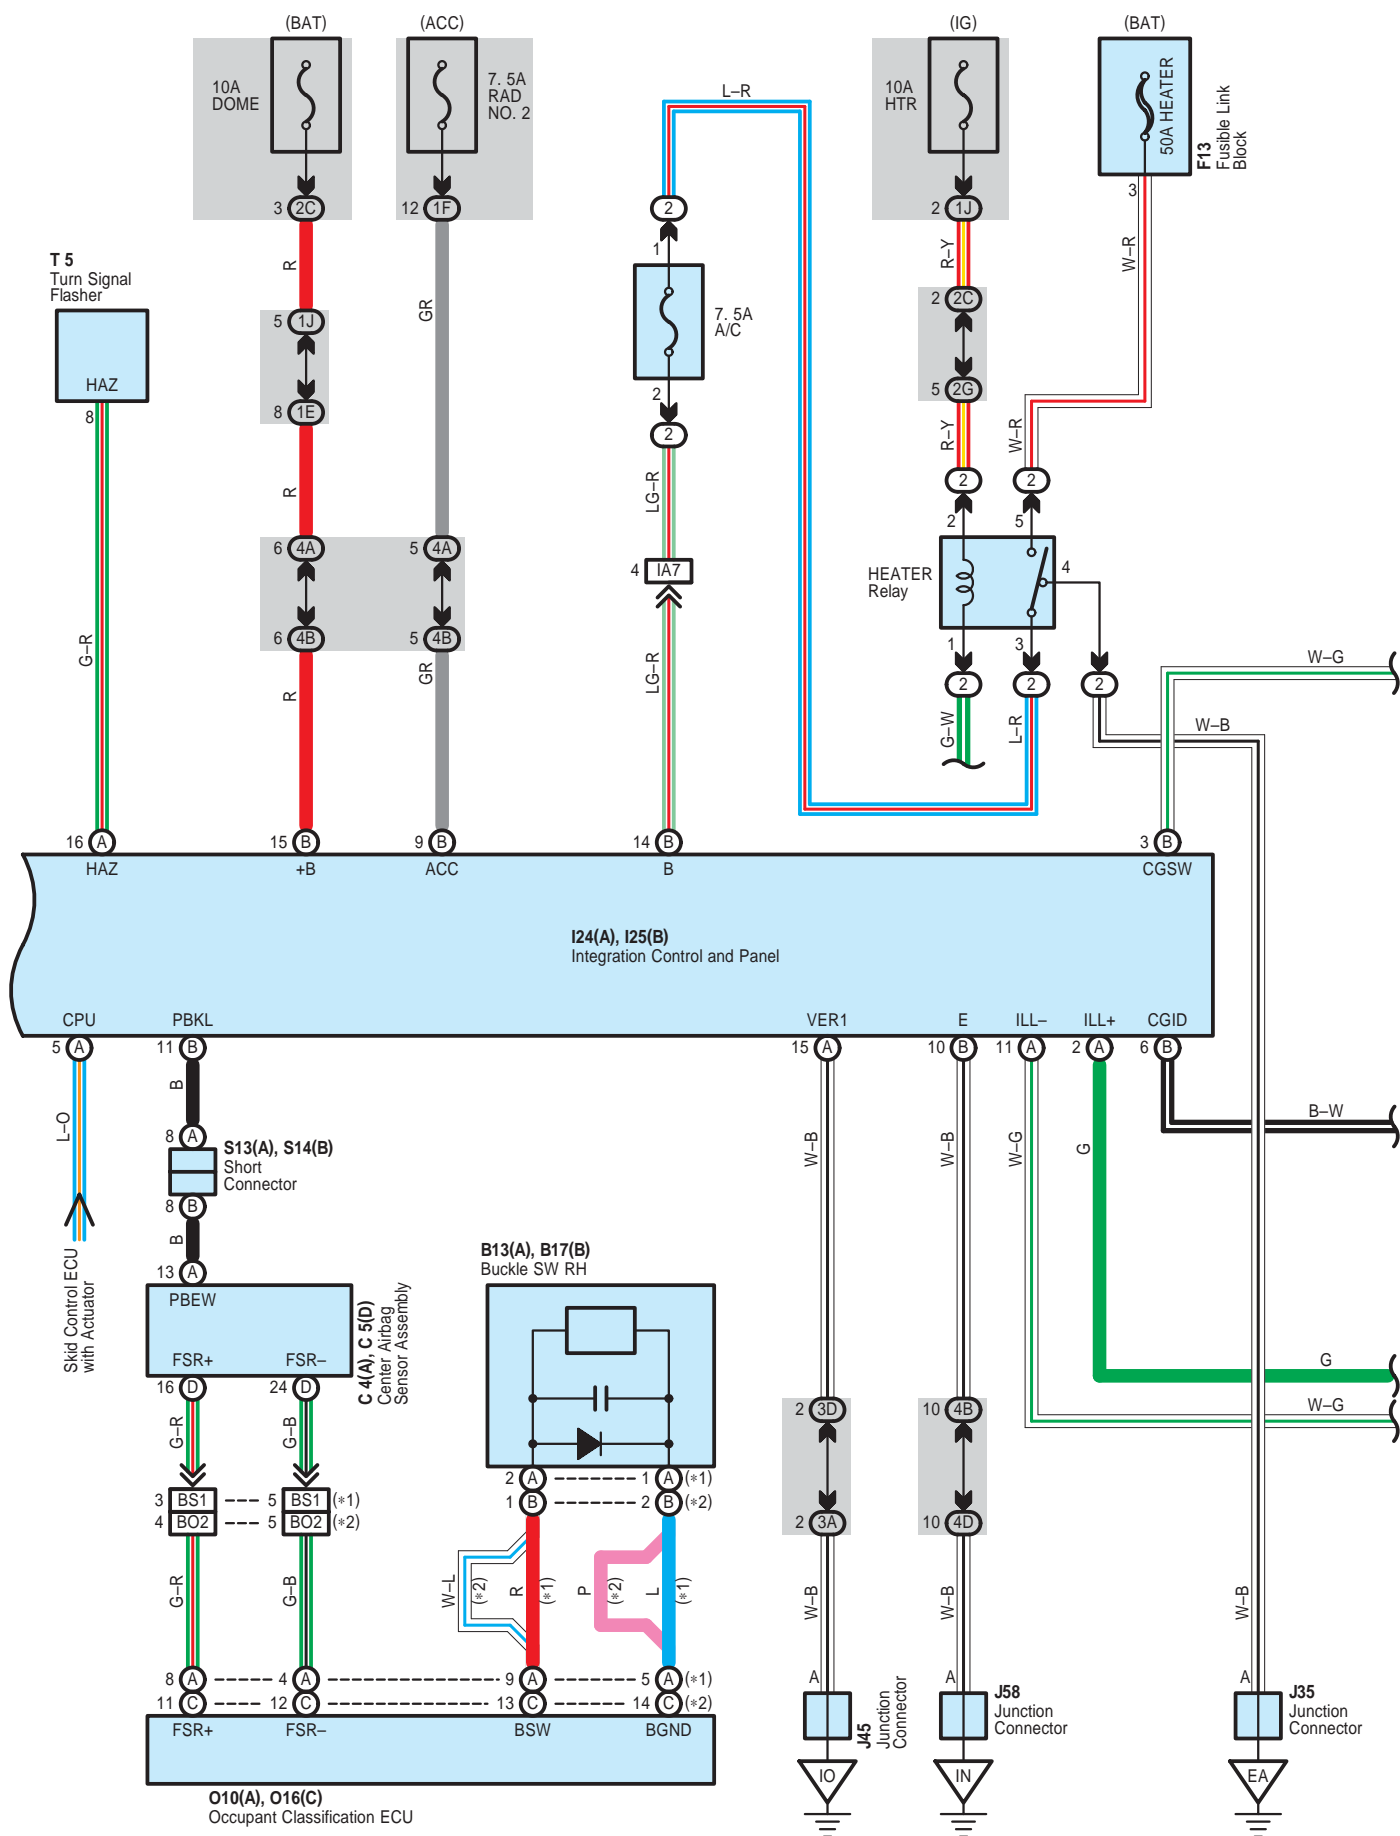

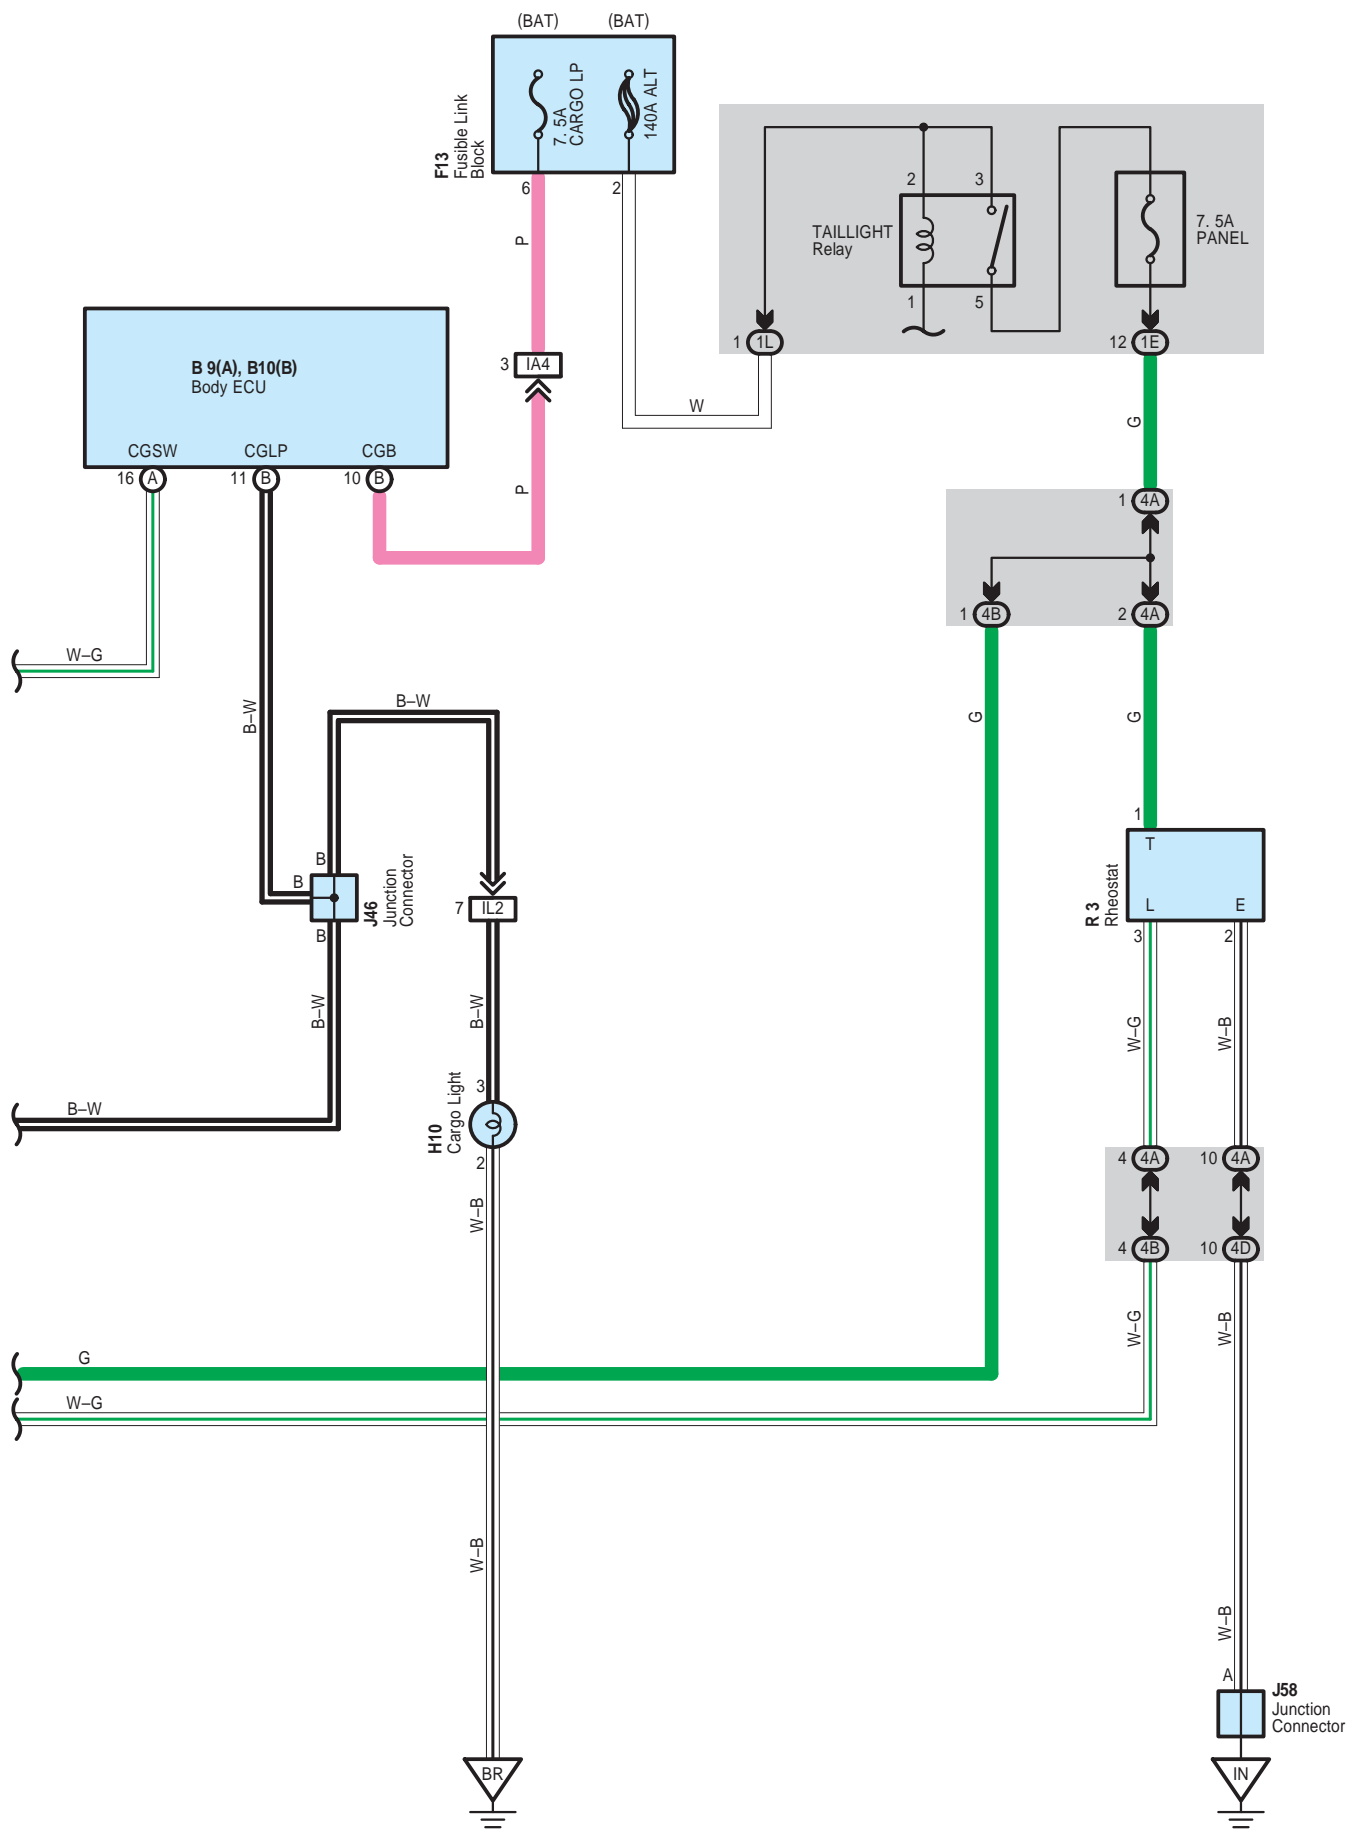

System Outline

The integration control panel is composed by design components such as the cluster, resistor, heater control panel, and SW. The integration control panel controls systems such as the air conditioning, cargo light, 4WD and hazard warning light and clock.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A3		70	E4	B	73	J50	B	74
A15		72	F13		70	J58		74
B6		72	F20	A	73	O10	A	78 (*1)
B9	A	72	H10		76	O16	C	79 (*2)
B10	B	72	I24	A	73	R3		75
B13	A	78 (*1)	I25	B	73	S13	A	75
B17	B	79 (*2)	J35		71	S14	B	75
C4	A	72	J45		74	T5		75
C5	D	72	J46		74			
C12	B	72	J49	A	74			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	42	Engine Room R/B No.2 (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1F		
1H		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L		
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G		
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		
3E		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4B		
4D		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	92	Engine Room Main Wire and Cowl Wire (Left Kick Panel)
IA7		
IE1	93	Engine Wire and Cowl Wire (Right Side of Instrument Panel)
IL2	92	Floor No.2 Wire and Cowl Wire (Right Kick Panel)
BO2	97 (*2)	Seat No.1 Wire and Floor Wire (Under the Front Passenger's Seat)
BS1	96 (*1)	

▽ : Ground Points

Code	See Page	Ground Points Location
EA	90	Front Left Fender Apron
IN	92	Right Kick Panel
IO	92	Left Kick Panel
BR	94	Back Panel Left

* 1 : Captain Seat * 2 : Separate Seat