



Light Auto Turn Off System (Double Cab)

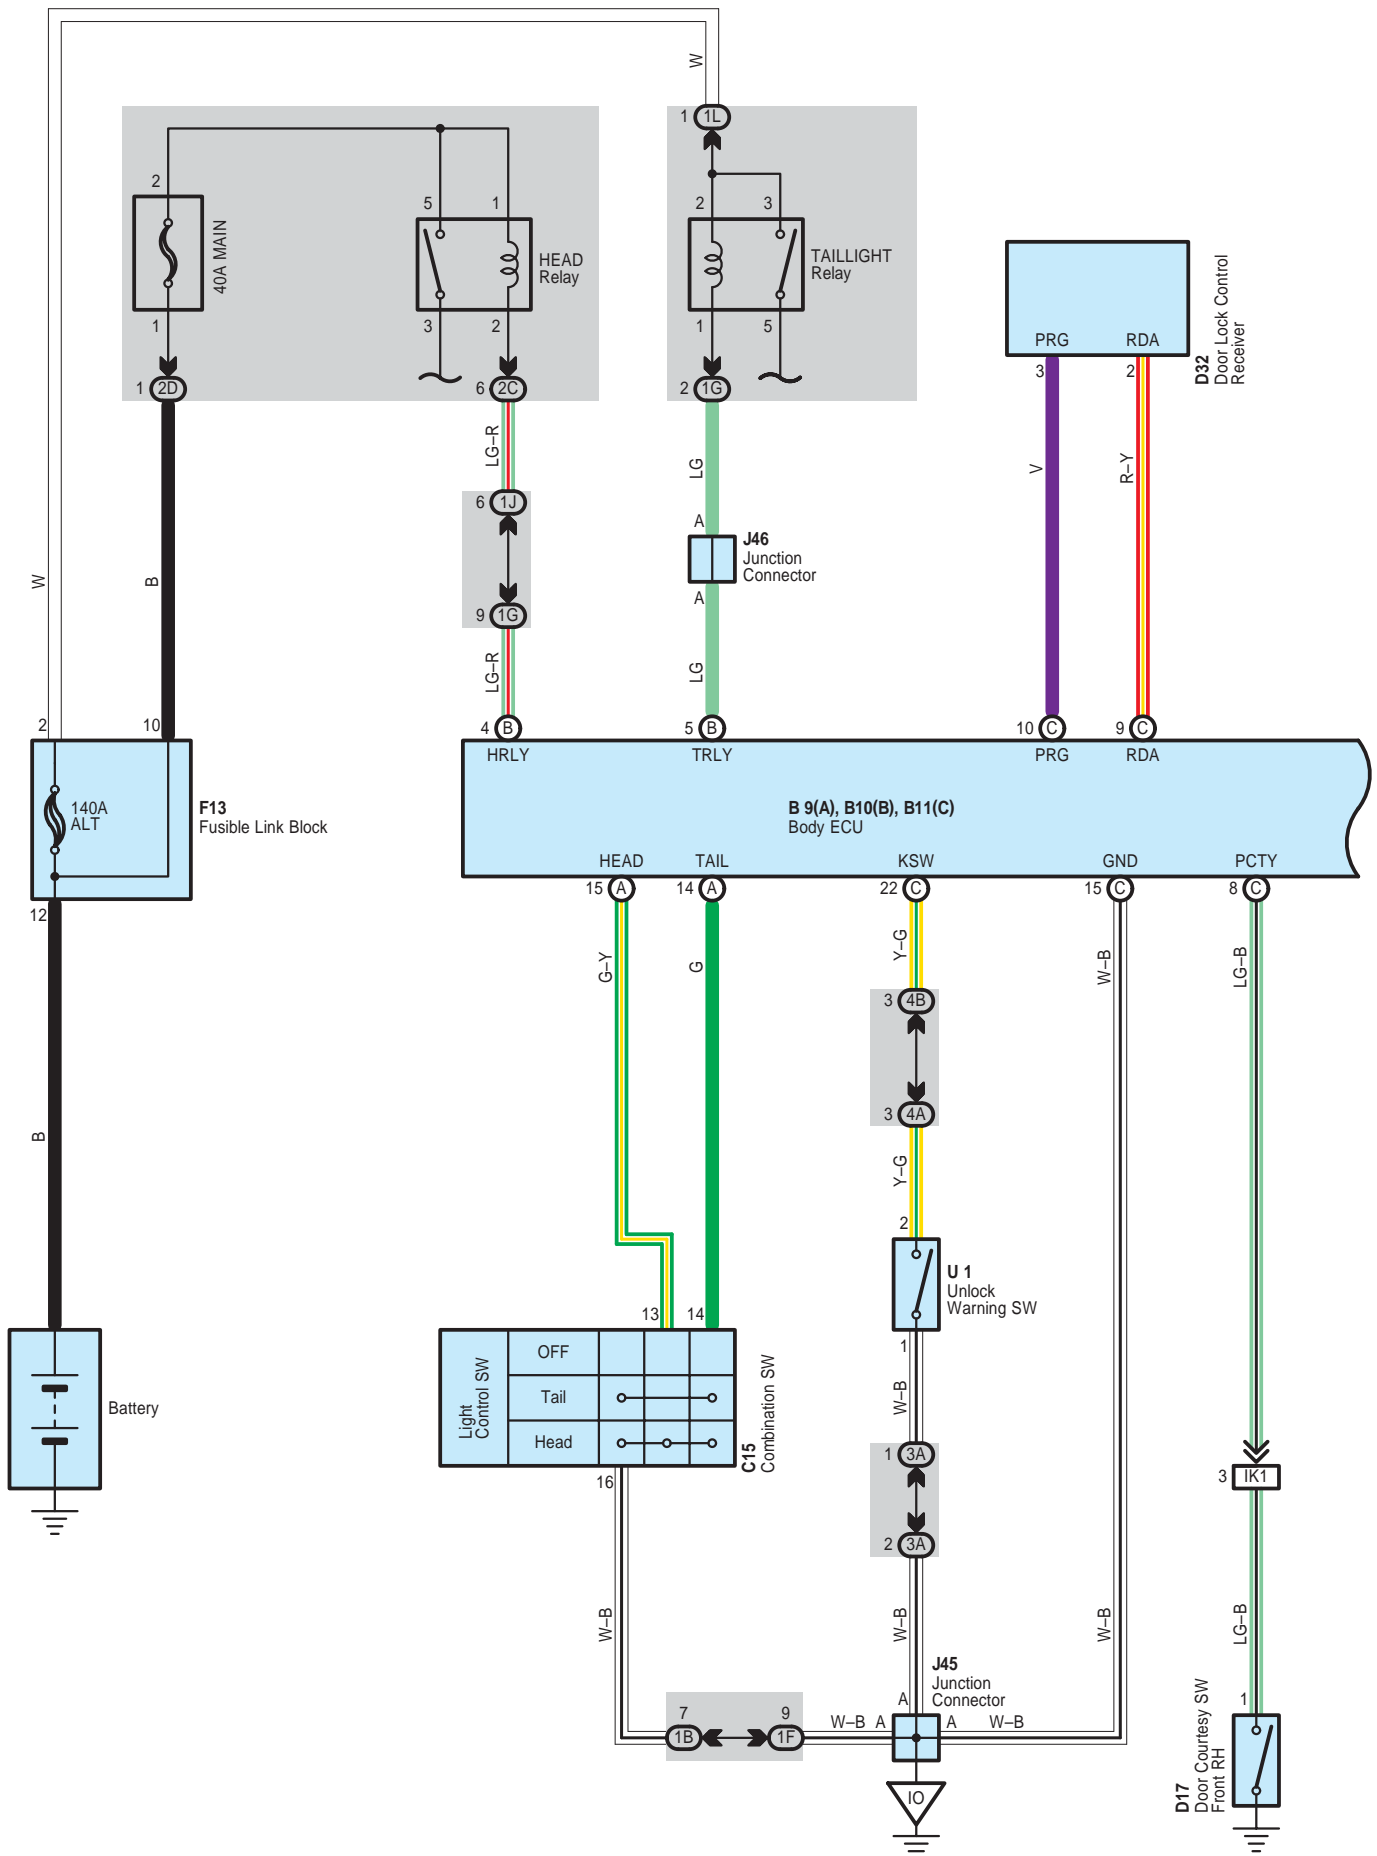

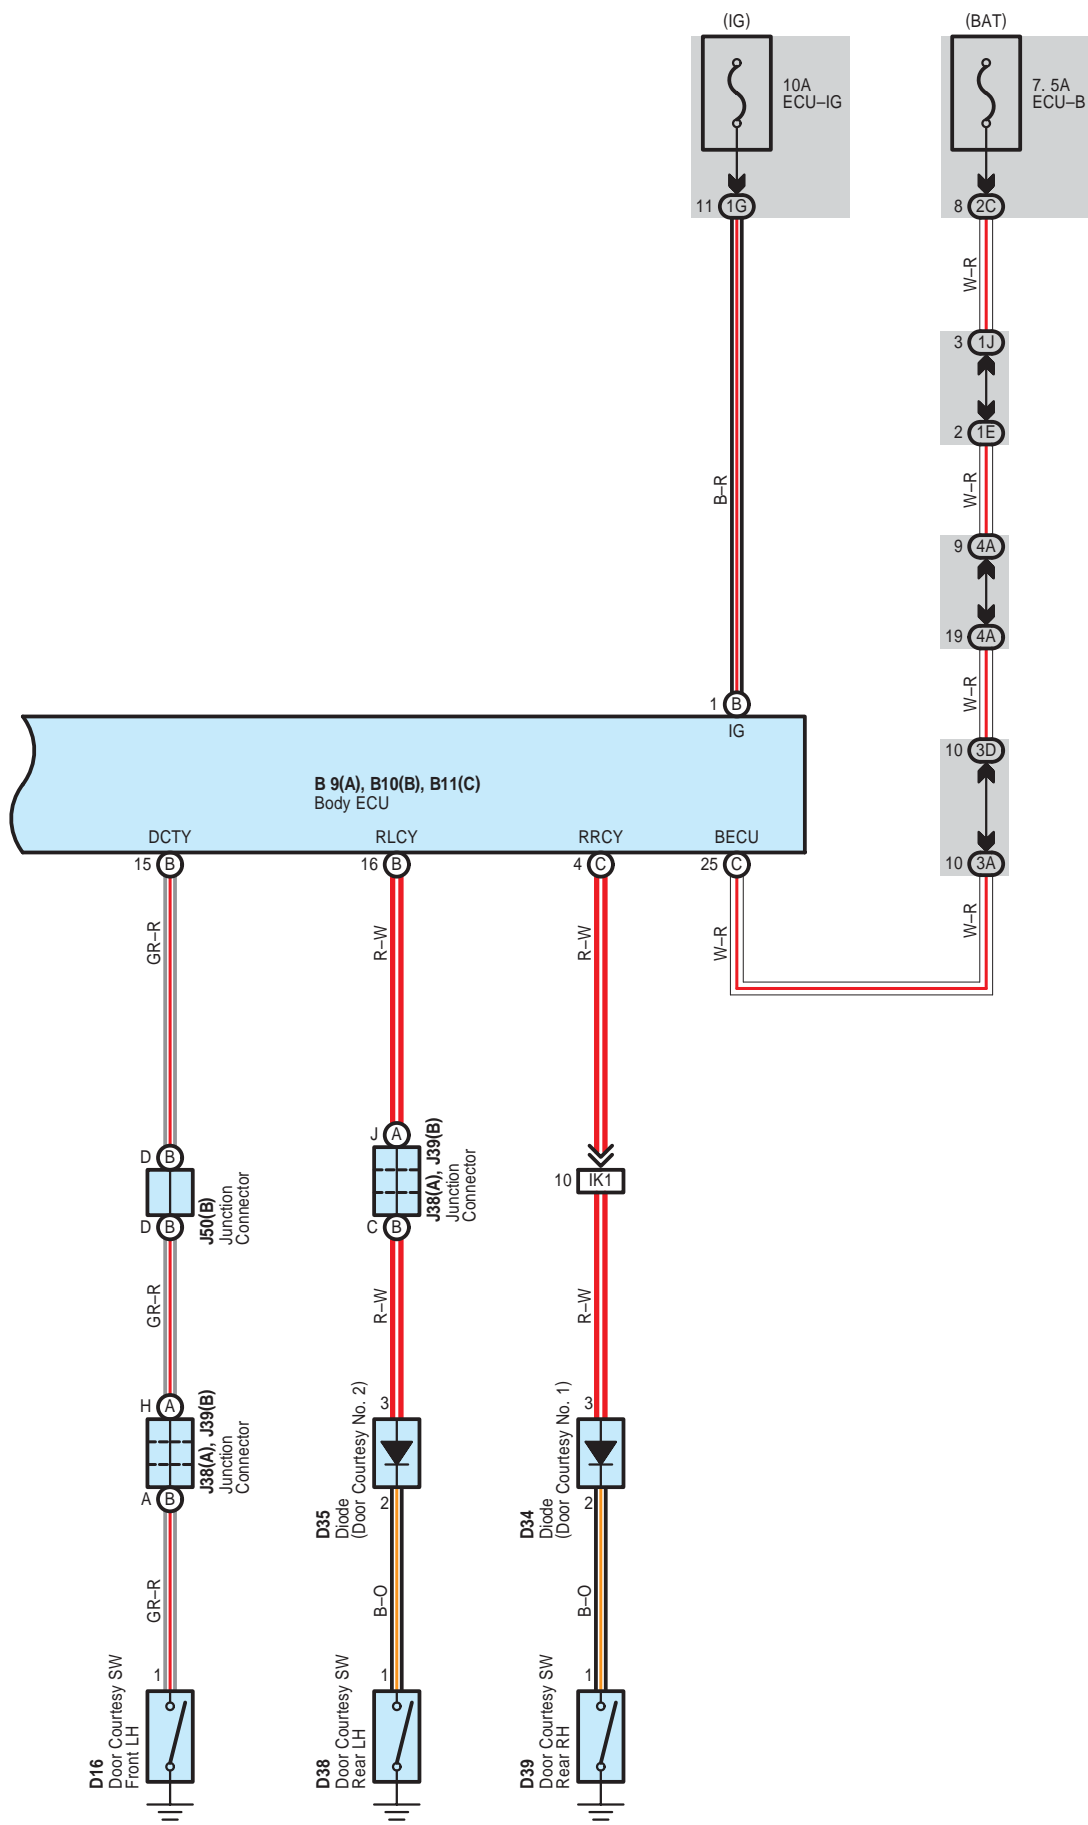

Light Auto Turn Off System (Double Cab)

System Outline

With the light control SW at TAIL position, and the ignition SW turned to ACC or OFF position from ON or ST position, the tail lights will be turned off when the driver's door is opened.

When the ignition SW is turned to ACC or OFF position from ON or ST position with the headlights on, the headlights will be turned off 30 seconds after all the doors are closed.

The light goes off immediately when all the doors are locked using the wireless door lock.

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
B9	A	72	D32	73	J38	A	74
B10	B	72	D34	76	J39	B	74
B11	C	72	D35	76	J45		74
C15		72	D38	76	J46		74
D16		76	D39	76	J50	B	74
D17		76	F13	70	U1		75

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	49	Cowl Wire and Driver Side J/B (Lower Finish Panel)
1E		
1F		
1G		
1J	49	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L		
2C	45	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2D		
3A	52	Cowl Wire and Sub J/B No.3 (Upper the Accelerator Pedal)
3D		
4A	54	Cowl Wire and Sub J/B No.4 (Upper the Accelerator Pedal)
4B		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	93	Floor Wire and Cowl Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IO	92	Left Kick Panel

