

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	Pressure SW	90980-11149	B 8	Back Window Relay	82660-20340
A 3	A/C Magnetic Clutch and Lock Sensor	90980-11016	B 9	Body ECU	90980-11974
A 5	ABS Actuator with ECU	90980-12426	B10	Body ECU	90980-11973
A 6	ABS Speed Sensor Front LH (w/ VSC)	90980-11156	B11	Body ECU	90980-11877
	ABS Speed Sensor Front LH (w/o VSC)	90980-11075	B12	Back Window Control Relay	90980-10803
A 7	ABS Speed Sensor Front RH (w/ VSC)	90980-11156	B13	Buckle SW RH	90980-11486
	ABS Speed Sensor Front RH (w/o VSC)	90980-11075	B14	Buckle SW LH	90980-12381
A 9	ADD Actuator	90980-11858		Seat Position Airbag Sensor	
A10	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-10869	B16	Buckle SW LH	90980-11486
A11	Airbag Sensor Front LH (Access Cab, Standard Cab)	90980-12490	B17	Buckle SW RH (Bench Seat)	
	Airbag Sensor Front LH (Double Cab)	90980-11856		Buckle SW RH (Separate Seat)	90980-11467
A12	Airbag Sensor Front RH (Access Cab, Standard Cab)	90980-12490	C 1	Camshaft Position Sensor	90980-11016
	Airbag Sensor Front RH (Double Cab)	90980-11856	C 2	Crankshaft Position Sensor (1GR-FE)	90980-12028
A13	A/C Thermistor	90980-11918		Crankshaft Position Sensor (2UZ-FE)	90980-11162
A15	Air Inlet Control Servo Motor	90980-11909	C 4	Center Airbag Sensor Assembly	90980-12391
A16	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	C 5	Center Airbag Sensor Assembly (Access Cab, Standard Cab)	90980-12449
A17	Airbag Squib (Steering Wheel Pad)			Center Airbag Sensor Assembly (Double Cab)	90980-12390
A18	Ashtray Illumination	—	C 6	Center Airbag Sensor Assembly (Access Cab, Standard Cab)	90980-12450
A19	ABS Speed Sensor Rear	90980-10942		Center Airbag Sensor Assembly (Double Cab)	90980-12392
A20	Accelerator Pedal Position Sensor (A/T)	90980-11858	C 7	Cigarette Lighter	90980-10760
	Accelerator Pedal Position Sensor (M/T)	90980-11144	C 8	Cigarette Lighter Illumination	90980-11148
A22	ACC Cut Relay	82660-53010	C10	Clutch Start SW	90980-10825
A28	Ambient Temp. Sensor	90980-11070	C11	Combination Meter	90980-12557
A29	ABS Deceleration Sensor	90980-10845	C12	Combination Meter	90980-12554
A30	Air Fuel Ratio Sensor (Bank 2 Sensor 1)	90980-10869	C15	Combination SW	90980-11672
A31	Air Switching Valve	90980-11149	C16	Combination SW	90980-12552
A32	Air Injection Control Driver	90980-11858	C17	Combination SW	90980-11594
A33	Air Injection Control Driver	90980-12068	C19	Camshaft Timing Oil Control Valve LH	90980-11162
A34	Air Pressure Sensor	90980-10845	C20	Camshaft Timing Oil Control Valve RH	
A35	Air Pump	90980-11032	C21	Curtain Airbag Cut Off SW	90980-10797
A36	Airbag Cut Off SW	90980-12063	C22	Curtain Shield Airbag Squib LH	90980-11886
B 1	Back-Up Light SW	90980-11250	C23	Curtain Shield Airbag Squib RH	
B 2	Brake Fluid Level Warning SW (w/ VSC)	90980-11156	D 2	Daytime Running Light Resistor	90980-10928
	Brake Fluid Level Warning SW (w/o VSC)	90980-11207	D 3	Detection SW (Transfer 4WD Position)	90980-11250
B 3	Back-Up Light Relay	82660-20340	D 4	Detection SW (Transfer L4 Position)	90980-11025
B 4	Blower Motor (Access Cab, Standard Cab)	90980-10214	D 6	Data Link Connector 3	90980-11665
	Blower Motor (Double Cab)	90980-10903	D 8	Diode (A/T)	90980-11071
B 5	Blower Resistor	90980-10171	D 9	Diode (Door Courtesy)	90980-11608
B 6	Blower SW	90980-10877	D11	Diode (Power Window System)	90980-10962
	Defroster Mode SW		D14	Door Courtesy Light Front LH	90980-11148
B 7	Buckle SW LH (Bench Seat)	90980-10859	D15	Door Courtesy Light Front RH	
	Buckle SW LH (Captain Seat (w/ Power Seat))	90980-11950	D16	Door Courtesy SW Front LH	90980-10871
	Buckle SW LH (Separate Seat, Captain Seat (w/o Power Seat))	90980-12374	D17	Door Courtesy SW Front RH	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D18	Door Courtesy SW Rear LH Lower	90980-11003	F 3	Front Parking Light LH	90980-11020
D19	Door Courtesy SW Rear LH Upper			Front Turn Signal Light LH	
D20	Door Courtesy SW Rear RH Lower		F 4	Front Parking Light RH	
D21	Door Courtesy SW Rear RH Upper			Front Turn Signal Light RH	
D22	Door Key Lock and Unlock SW LH	90980-11245	F 5	Fuel Pump Resistor (1GR-FE)	90980-10901
D23	Door Key Lock and Unlock SW RH			Fuel Pump Resistor (2UZ-FE)	90980-11156
D24	Door Lock Control SW RH	90980-10797	F 8	Front Door Speaker LH	90980-10935
D25	Door Lock Motor LH	90980-11150	F 9	Front Door Speaker RH	
	Door Unlock Detection SW LH		F10	Fuel Pump	90980-11077
D26	Door Lock Motor RH			Fuel Sender	
	Door Unlock Detection SW RH		F11	Front Parking Light LH No.2	90980-11020
D27	Diode (Step Light)	Front Turn Signal Light LH No.2			
D28	Diode (Door Lock)	F12	Front Parking Light RH No.2		
D29	Diode (TVIP)		Front Turn Signal Light RH No.2		
D30	Diode (Unlock Warning)	90980-10962	F13	Fusible Link Block	82620-0C011
D31	Diode (Parking Brake SW)		F15	Front Door Speaker LH (Woofer)	90980-10795
D32	Door Lock Control Receiver	90980-11909	F16	Front Door Speaker RH (Woofer)	
D33	DVD Player	90980-12266	F17	Front Passenger Door ECU	90980-11469
D34	Diode (Door Courtesy No.1)	90980-11071	F18	Front Parking Light LH No.3 (Access Cab, Standard Cab)	90980-11075
D35	Diode (Door Courtesy No.2)			Front Parking Light LH No.3 (Double Cab)	90980-11156
D36	Door Courtesy Light Rear LH	90980-11148	F19	Front Parking Light RH No.3 (Access Cab, Standard Cab)	90980-11075
D37	Door Courtesy Light Rear RH			Front Parking Light RH No.3 (Double Cab)	90980-11156
D38	Door Courtesy SW Rear LH	90980-10871	F20	4WD Control ECU	90980-12560
D39	Door Courtesy SW Rear RH		F21	4WD Control ECU	90980-12561
D40	Door Lock Motor Rear LH	90980-12226	G 1	Generator (1GR-FE)	90980-09372
	Door Unlock Detection SW Rear LH			Generator (2UZ-FE)	90980-09365
D41	Door Lock Motor Rear RH		G 2	Generator	90980-11964
	Door Unlock Detection SW Rear RH		G 3	Glove Box Light	90980-11148
D42	Door Key Lock and Unlock SW Front LH	90980-11858	H 1	Headlight LH	90980-11314
	Door Lock Motor Front LH		H 2	Headlight RH	
	Door Unlock Detection SW Front LH		H 4	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D43	Door Key Lock and Unlock SW Front RH		H 6	Heated Oxygen Sensor (Bank 2 Sensor 2)	
	Door Lock Motor Front RH		H 7	Horn LH	90980-10619
	Door Unlock Detection SW Front RH		H 8	Horn RH	
D44	Driver Door ECU	90980-11877	H10	Cargo Light	90980-11296
E 1	Electronically Controlled Transmission Solenoid	90980-12293		High Mounted Stop Light	
E 2	Engine Coolant Temp. Sensor	90980-10735	H11	Headphone Terminal LH	90980-12263
E 3	Engine Control Module	90980-12525	H12	Headphone Terminal RH	
E 4	Engine Control Module	90980-12529	I 3	Igniter and Ignition Coil No.1	90980-11885
E 5	Engine Control Module	90980-12526	I 4	Igniter and Ignition Coil No.2	
E 6	Engine Control Module	90980-12528	I 5	Igniter and Ignition Coil No.3	
E 7	Engine Control Module	90980-12527	I 6	Igniter and Ignition Coil No.4	
E 8	Engine Hood Courtesy SW	90980-11189	I 7	Igniter and Ignition Coil No.5	
F 1	Front Fog Light LH	90980-11096	I 8	Igniter and Ignition Coil No.6	
F 2	Front Fog Light RH				

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I 9	Igniter and Ignition Coil No.7	90980-11885	J38	Junction Connector	90980-12319
I10	Igniter and Ignition Coil No.8		J39	Junction Connector	
I14	Injector No.1	90980-11875	J40	Junction Connector	90980-12078
I15	Injector No.2		J41	Junction Connector	
I16	Injector No.3		J42	Junction Connector	90980-12076
I17	Injector No.4		J43	Junction Connector	
I18	Injector No.5		J45	Junction Connector	90980-11686
I19	Injector No.6		J46	Junction Connector	90980-11529
I20	Injector No.7		J47	Junction Connector	90980-11661
I21	Injector No.8		J48	Junction Connector	
I22	Ignition Key Cylinder Light	90980-10906	J49	Junction Connector	
I23	Ignition SW (Access Cab, Standard Cab)	90980-11615	J50	Junction Connector	90980-10933
	Ignition SW (Double Cab)	90980-11778	J51	Junction Connector	
I24	Integration Control and Panel	90980-11915	J52	Junction Connector	90980-10957
I25	Integration Control and Panel	90980-11973	J53	Junction Connector	90980-10933
I26	Interior Light (Access Cab, Standard Cab)	90980-10935	J54	Junction Connector	90980-11686
	Interior Light (Double Cab)	90980-11950	J55	Junction Connector	90980-11661
I27	Inner Mirror	90980-11794	J56	Junction Connector	
J 1	Junction Connector	90980-11714	J57	Junction Connector	90980-11542
J 2	Junction Connector		J58	Junction Connector	90980-11686
J 3	Junction Connector	90980-10976	J59	Junction Connector	90980-11398
J 4	Junction Connector	90980-11915	J60	Junction Connector	
J 5	Junction Connector		J63	Junction Connector	
J 7	Junction Connector		J64	Junction Connector	90980-11915
J 8	Junction Connector		J65	Junction Connector	
J 9	Junction Connector		J66	Junction Connector	
J10	Junction Connector		J67	Junction Connector	90980-12355
J12	Junction Connector		J68	Junction Connector	
J13	Junction Connector	90980-10976	J69	Junction Connector	
J18	Junction Connector	90980-11542	J70	Junction Connector	
J21	Junction Connector	90980-11661	J71	Junction Connector	
J22	Junction Connector		J72	Junction Connector	90980-10871
J23	Junction Connector		J73	Junction Connector	
J24	Junction Connector		J74	Junction Connector	90980-11542
J26	Junction Connector	90980-12320	J75	Junction Connector	90980-11529
J27	Junction Connector	90980-11915	J76	Junction Connector	90980-12355
J28	Junction Connector		J77	Junction Connector	
J29	Junction Connector	90980-11194	J78	Junction Connector	
J30	Junction Connector	90980-11194	J79	Junction Connector	
J31	Junction Connector	90980-11542	J80	Junction Connector	90980-10871
J32	Junction Connector		J81	Junction Connector	
J34	Junction Connector		J82	Junction Connector	90980-11542
J35	Junction Connector	90980-11194	J83	Junction Connector	
J36	Junction Connector	90980-11661			
J37	Junction Connector				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
K 1	Knock Sensor (Bank 1)	90980-11875	P14	Pretensioner RH (Access Cab, Standard Cab)	90980-12452
K 2	Knock Sensor (Bank 2)			Pretensioner RH (Double Cab)	90980-12253
L 1	License Plate Light LH	90980-11162	P15	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
L 2	License Plate Light RH		P16	Power Seat Control SW (Driver's Seat)	90980-10997
L 3	Lumbar Support Control SW (Driver's Seat)	90980-10789	P17	Power Seat Motor (Driver's Seat Rear Vertical Control)	90980-10825
L 4	Canister Pump Module	90980-12380	P18	Power Seat Motor (Driver's Seat Reclining Control)	
M 1	Mass Air Flow Meter (1GR-FE)	90980-11317	P19	Power Seat Motor (Driver's Seat Slide Control)	
	Mass Air Flow Meter (2UZ-FE)	90980-12292	P20	Power Seat Motor (Driver's Seat Lumbar Support Control)	
M 4	Mirror Heater SW	90980-10797	P21	Power Window Control SW (Back Window)	90980-10996
M 5	Main SW	90980-10957	P22	Power Window Motor (Back Window) (Access Cab, Standard Cab)	90980-10860
M 6	Moon Roof Control ECU and Motor	90980-10997		Power Window Motor (Back Window) (Double Cab)	90980-11012
N 1	Noise Filter	90980-10843	P23	Power Outlet (115V)	90980-10601
O 1	O/D Direct Clutch Speed Sensor	90980-11156	P24	Power Outlet (Rear)	90980-10760
O 2	Oil Pressure SW	90980-11363	P25	Power Window Control SW Rear LH	90980-10797
O 4	O/D Main SW	90980-11470	P26	Power Window Control SW Rear RH	
O 5	Option Connector	90980-11603	P27	Power Window Motor Rear LH	
O 7	Option Connector (Glass Breakage Sensor)	90980-10871	P28	Power Window Motor Rear RH	
O 8	Overhead Module	90980-10805	R 1	Radio and Player	90980-10996
O10	Occupant Classification ECU	90980-12356	R 2	Radio and Player	90980-10997
O11	Occupant Classification ECU	90980-12357	R 3	Rheostat	90980-10216
O12	Occupant Classification Sensor Front LH	90980-12353	R 4	Rear Combination Light LH	90980-10988
O13	Occupant Classification Sensor Front RH	90980-12354	R 5	Rear Combination Light RH	
O14	Occupant Classification Sensor Rear LH		R 6	Rear Door Speaker LH	90980-10935
O15	Occupant Classification Sensor Rear RH	90980-12353	R 7	Rear Door Speaker RH	
O16	Occupant Classification ECU	90980-AA009	R 8	Remote Control Mirror LH (Access Cab, Standard Cab w/ Mirror Heater)	90980-11452
O17	Occupant Classification Sensor	90980-AA011		Remote Control Mirror LH (Access Cab, Standard Cab w/o Mirror Heater)	90980-10907
P 1	Park/Neutral Position SW	90980-12362		Remote Control Mirror LH (Double Cab)	90980-11487
P 2	Power Steering Oil Pressure SW	90980-11428	R 9	Remote Control Mirror LH (Access Cab, Standard Cab w/ Mirror Heater)	90980-11452
P 5	Parking Brake SW (A/T)	90980-10871		Remote Control Mirror RH (Access Cab, Standard Cab w/o Mirror Heater)	90980-10907
	Parking Brake SW (M/T)	90980-10825		Remote Control Mirror RH (Double Cab)	90980-11487
P 6	Power Outlet (Access Cab, Standard Cab)	90980-10760	R10	Remote Control Mirror SW	90980-11657
	Power Outlet (Double Cab Captain seat)	90980-10905	R12	Radio and Player	90980-12038
	Power Outlet (Double Cab Separate Seat)	90980-10760	R13	Radio and Player	90980-12259
P 7	Power Outlet (Access Cab, Standard Cab, Double Cab Separate Seat)	90980-10760	R14	Radio and Player	90980-12038
	Power Outlet (Double Cab Captain seat)	90980-10905	R15	Radio and Player	90980-12259
P 8	Personal Light	90980-10908	R16	Radio and Player	90980-12552
P 9	Power Window Control SW Front RH	90980-10789	R17	Rear Seat Entertainment ECU	90980-12267
P10	Power Window Master SW	90980-10997			
P11	Power Window Motor Front LH (Access Cab, Standard Cab)	90980-10860			
	Power Window Motor Front LH (Double Cab)	90980-11011			
P12	Power Window Motor Front RH	90980-10860			
P13	Pretensioner LH (Access Cab, Standard Cab)	90980-12452			
	Pretensioner LH (Double Cab)	90980-12253			

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
R18	Rear Seat Entertainment ECU	90980-12268	S40	Seat Position Airbag Sensor (Front Passenger's Side) (Bench Seat)	90980-12195
R19	Rear Seat Entertainment ECU	90980-12266		Seat Position Airbag Sensor (Front Passenger's Side) (Separate Seat)	90980-12416
R20	Rear Seat Audio Controller	90980-12267	S41	Seat Position Airbag Sensor (Driver's Side)	90980-12416
R21	Rear Seat Entertainment Display	90980-12156	T 3	Transfer Shift Actuator	90980-11858
R22	Rear Window Defogger	90980-10359	T 5	Turn Signal Flasher	90980-10799
R23	Rear Window Defogger		T 6	Trailer Socket (Except Towing Package)	82824-34040
R24	Radio and Player with Display	90980-12038		Trailer Socket (Towing Package)	82824-34050
R25	Radio and Player with Display	90980-12259	T 7	Tweeter LH (Access Cab, Standard Cab)	90980-10906
R26	Radio and Player with Display	90980-11909		Tweeter LH (Double Cab)	90980-11012
R27	Radio and Player with Display	90980-12038	T 8	Tweeter RH (Access Cab, Standard Cab)	90980-10906
R28	Radio and Player with Display	90980-12259		Tweeter RH (Double Cab)	90980-11012
R29	Radio and Player with Display	90980-12552	T 9	Trailer Converter	90980-11535
R30	Radio and Player with Display	90980-11909	T10	TVIP Buzzer	90980-11051
R31	Radio and Player with Display	90980-12209	T11	TVIP ECU	90980-11424
S 1	Starter (1GR-FE (Cold Area Spec.))	90980-09507	T12	TVIP ECU	90980-11392
	Starter (1GR-FE (Except Cold Area Spec.))	90980-09463	T13	TVIP ECU	90980-10799
	Starter (2UZ-FE)	90980-09585	T14	Throttle Control Motor and Throttle Position Sensor	90980-11858
S 2	Starter	90980-11400	T15	Theft Deterrent Horn	90980-10619
S 3	Step Light	81945-33010	T16	Tire Pressure Monitor ECU	90980-12553
S 4	Stop Light SW (Access Cab, Standard Cab)	90980-11118	T17	Tire Pressure Warning Standardization SW	90980-10906
	Stop Light SW (Double Cab)	90980-11013	T18	Tire Pressure Monitor Receiver	90980-11909
S 8	Short Pin	90980-10907	T19	Transponder Key Computer	90980-11556
S 9	Short Connector (TVIP)	90980-10908	T20	Transponder Key Amplifier	90980-10996
S10	Glass Breakage Sensor Microphone	90980-11013	U 1	Unlock Warning SW	90980-10860
	Security Indicator		V 2	Vehicle Speed Sensor (Combination Meter)	90980-11143
S11	Seat Heater SW (Driver's Seat)	90980-10797	V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
S12	Seat Heater SW (Front Passenger's Seat)	90980-10996	V 4	VSV (Purge)	
S13	Short Connector	90980-11910	V 6	Vanity Light LH (Access Cab, Standard Cab)	90980-11368
S14	Short Connector	90980-11911		Vanity Light LH (Double Cab)	90980-11369
S19	Steering Sensor	90980-12553	V 7	Vanity Light RH (Access Cab, Standard Cab)	90980-11368
S20	Stereo Component Amplifier	90980-10803		Vanity Light RH (Double Cab)	90980-11369
S21	Stereo Component Amplifier	90980-12200	V10	Video Terminal	90980-12264
S23	Stereo Component Amplifier		V11	VSC Warning Buzzer	90980-10906
S24	Stereo Component Amplifier	90980-10821	V12	Voltage Inverter	90980-10799
S26	Seat Heater (Driver's Seat)	90980-10795	V13	VSV (ACIS)	90980-11156
S28	Seat Heater (Front Passenger's Seat)		V14	VSV (Air Switching Valve Bank 1)	90980-11149
S29	Skid Control ECU with Actuator	90980-12297	V15	VSV (Air Switching Valve Bank 2)	
S30	Skid Control ECU with Actuator	90980-12294	V16	VVT Sensor LH (1GR-FE)	90980-12353
S31	Stop Light Relay	82660-53010		VVT Sensor LH (2UZ-FE)	90980-10947
S32	Side Airbag Sensor Rear LH	90980-12241	V17	VVT Sensor RH (1GR-FE)	90980-12353
S33	Side Airbag Sensor Rear RH			VVT Sensor RH (2UZ-FE)	90980-10947
S34	Side Airbag Sensor LH				
S35	Side Airbag Sensor RH				
S37	Side Airbag Squib LH	90980-11864			
S38	Side Airbag Squib RH				
S39	Seat Belt Tension Sensor	90980-11349			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
W 2	Washer Level Sensor	90980-11177	W 5	Wireless Door Lock Buzzer	90980-11142
	Washer Motor		Y 1	Yaw Rate Sensor	90980-11904
W 4	Wiper Motor	90980-11599			