


## DISASSEMBLY


### 1. Access cab, Standard cab: REMOVE AIRBAG INDICATOR CIRCUIT

Release the 2 claws and remove the indicator circuit, then disconnect the connector.

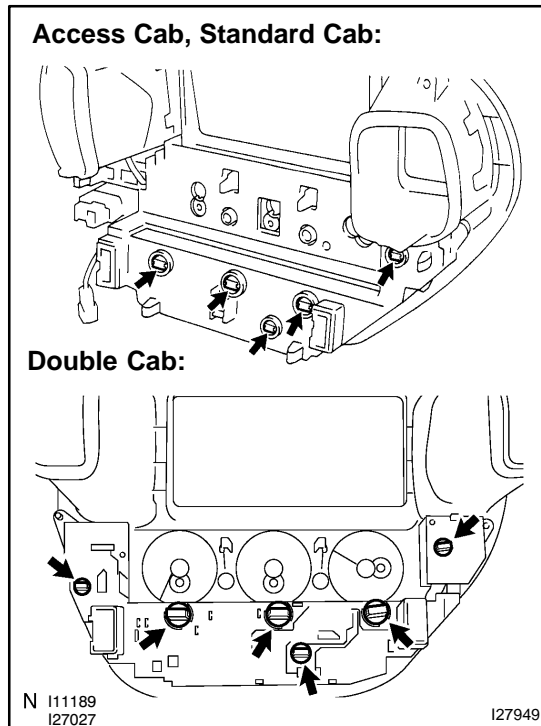


### 2. REMOVE BULBS

- (a) Access cab, standard cab:  
Remove the 5 bulbs.
- (b) Double cab:  
Remove the 6 bulbs.

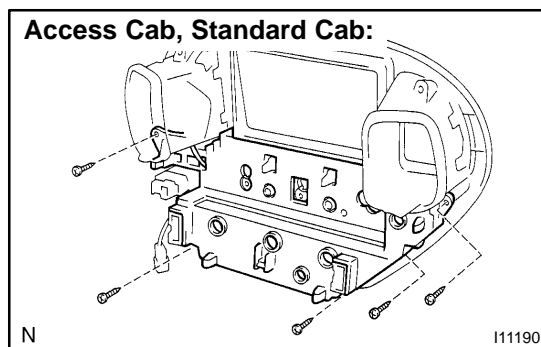


### 3. Access cab, Standard cab: REMOVE HEATER CONTROL HOUSING

- (a) Remove the 5 screws.
- (b) Remove the heater control housing.

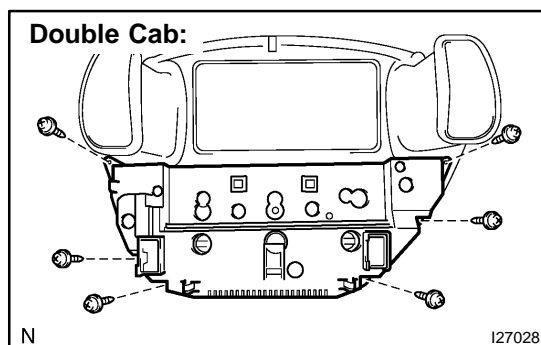


### 4. Double cab: REMOVE HEATER CONTROL HOUSING


- (a) Remove the 5 screws.
- (b) Remove the heater control housing.

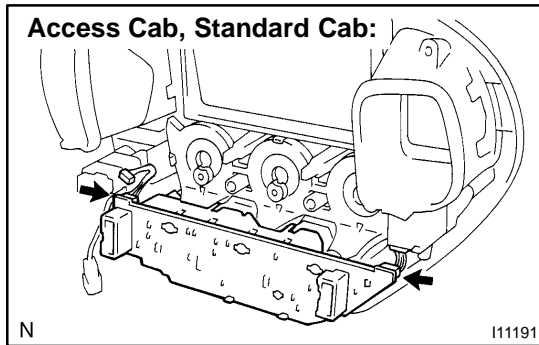

- 5. Access cab, Standard cab:**  
**REMOVE INTEGRATION CIRCUIT**
- (a) Disconnect the 2 connectors.
  - (b) Remove the circuit.

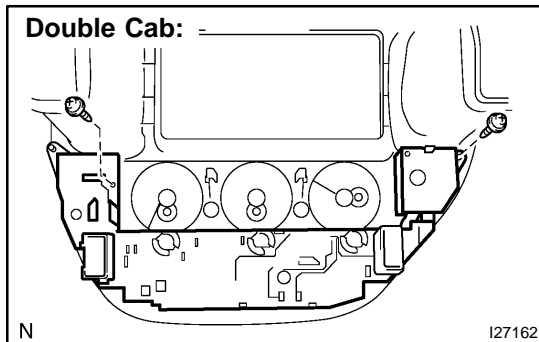

- 6. Double cab:**  
**REMOVE INTEGRATION CIRCUIT**
- (a) Remove the 2 screws.
  - (b) Remove the circuit.

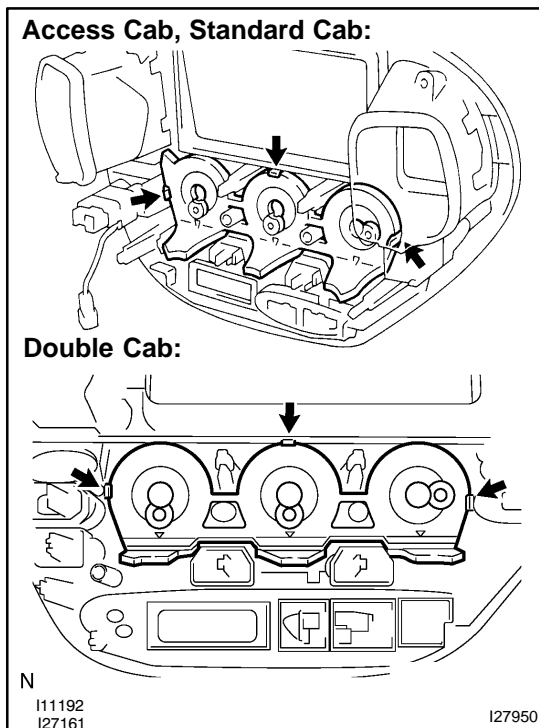

- 7. REMOVE LENS**  
 Release the 3 claws, then remove the lens.