

DISASSEMBLY

1. REMOVE BLOWER MOTOR

- (a) Double cab:
Remove the 2 screws and motor cover.
- (b) Remove the 3 screws and blower motor.

2. REMOVE AIR INLET SERVOMOTOR

Remove the 3 screws and servomotor.