

REMOVAL

1. REMOVE COOLING UNIT (See page [AC-31](#))

2. REMOVE BLOWER UNIT

- (a) Double cab:
Remove the 2 screws and motor cover.
- (b) Disconnect the connector from the blower motor.
- (c) Disconnect the air inlet damper control cable from the blower unit.

HINT:

At the time of installation, refer to the following:

After connection, adjust the control cable.

- (d) Remove the nut, bolt and blower unit.