



HEATER CONTROL ASSEMBLY ON-VEHICLE INSPECTION

AC27J-03

INSPECT HEATER CONTROL DIAL AND LEVER OPERATION

Move the control dial and lever left and right and check for stiffness and binding through the full range of the levers.

If a click sound cannot be heard or recoil is felt, adjust the control cable or check the control cable and heater control assembly.