

WATER VALVE

AC27A-02

ON-VEHICLE INSPECTION

1. **WARM UP ENGINE**
2. **DISCONNECT WATER VALVE CONTROL CABLE**
3. **INSPECT WATER VALVE OPERATION**
 - (a) Check that warm air comes out from the vent when the water valve lever is moved to the "WARM" position.
 - (b) Check that cool air comes out when the water valve is moved to the "COOL" position.
If operation is not as specified, replace the water valve.
4. **CONNECT WATER VALVE CONTROL CABLE**