



INSTALLATION

1. CHECK TORQUE CONVERTER INSTALLATION

- (a) Install the torque converter to the transmission housing.

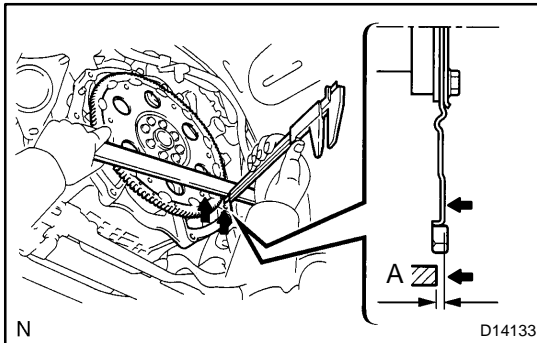

- (b) Using vernier calipers and a straight edge, measure dimension A between the transmission fitting part and the converter fitting part of the drive plate.

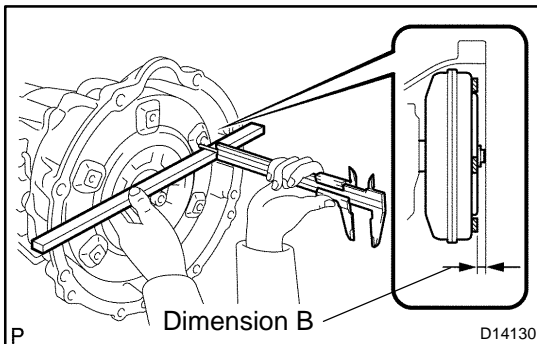

- (c) Using vernier calipers and a straight edge, measure the dimension B shown in the illustration and check that B is greater than A measured in step (b).

Standard distance: A + 1 mm (0.04 in.) or more

2. MEASURE DRIVE PLATE RUNOUT AND INSPECT RING GEAR (See page [AT-39](#))

3. TRANSMISSION INSTALLATION

- (a) Installation is in the reverse order of removal (See page [AT-34](#)).
- (b) Adjust the shift lever position (See page [DI-1117](#)).
- (c) Fill the transmission (See page [AT-4](#)).
- (d) Conduct the road test of the vehicle (See page [DI-1118](#)).