


## PARK/NEUTRAL POSITION (PNP) SWITCH

AT130-01

### ON-VEHICLE REPAIR

1. **DISCONNECT PARK/NEUTRAL POSITION SWITCH CONNECTOR**

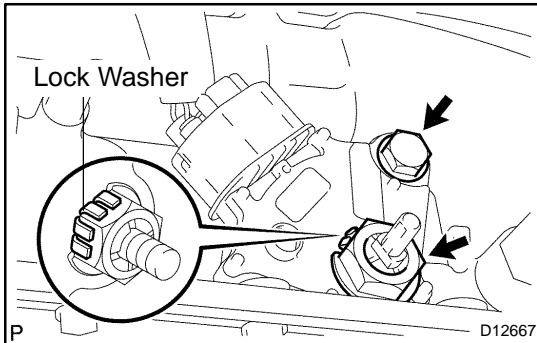

2. **REMOVE PARK/NEUTRAL POSITION SWITCH**

- (a) Pry off the lock washer and remove the nut.
- (b) Remove the bolt and park/neutral position switch.

3. **INSTALL PARK/NEUTRAL POSITION SWITCH**

- (a) Install the park/neutral position switch with the bolt.

**Torque: 13 N·m (130 kgf·cm, 10 ft·lbf)**

- (b) Install a new lock washer and the nut.

**Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)**

- (c) Bend the claws on the lock washer to stake the nut.

- (d) Adjust the park/neutral position switch

(See page [DI-952](#) or [DI-1117](#)).

4. **CONNECT PARK/NEUTRAL POSITION SWITCH CONNECTOR**