


INSPECTION

1. M/T: INSPECT BACK-UP LIGHT SWITCH CONTINUITY

Condition	Tester Connection	Specified Condition
Not pushed	1 - 2	No continuity
Pushed	1 - 2	Continuity

If the continuity is not as specified, replace the switch.

2. A/T: INSPECT PARK/NEUTRAL POSITION SWITCH CONTINUITY (See page [DI-993](#) or [DI-1159](#))

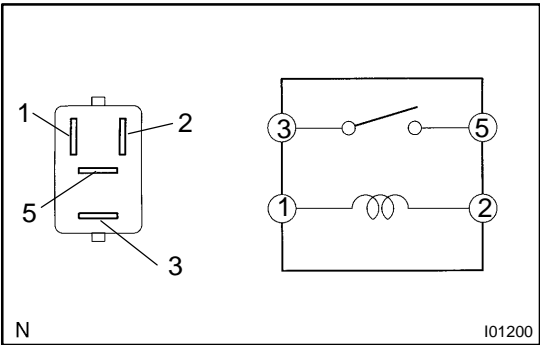

3. A/T: INSPECT BACK-UP LIGHT RELAY CONTINUITY

Tester Connection	Specified Condition
3 - 5	No Continuity
3 - 5	Continuity (When battery voltage is applied to terminals 1 and 2)

If the continuity is not as specified, replace the relay.