


# BACK-UP LIGHT SYSTEM LOCATION


BE2LS-01


## Double Cab

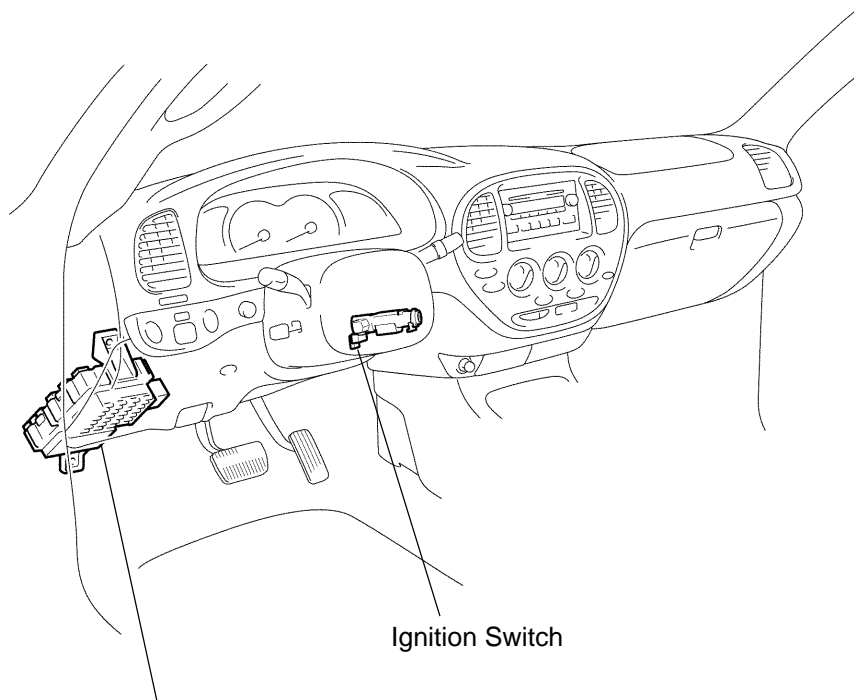


- Instrument Panel J/B
- BACK-UP LIGHT Relay
  - GAUGE Fuse


- Rear Combination Light
- Back-up Light

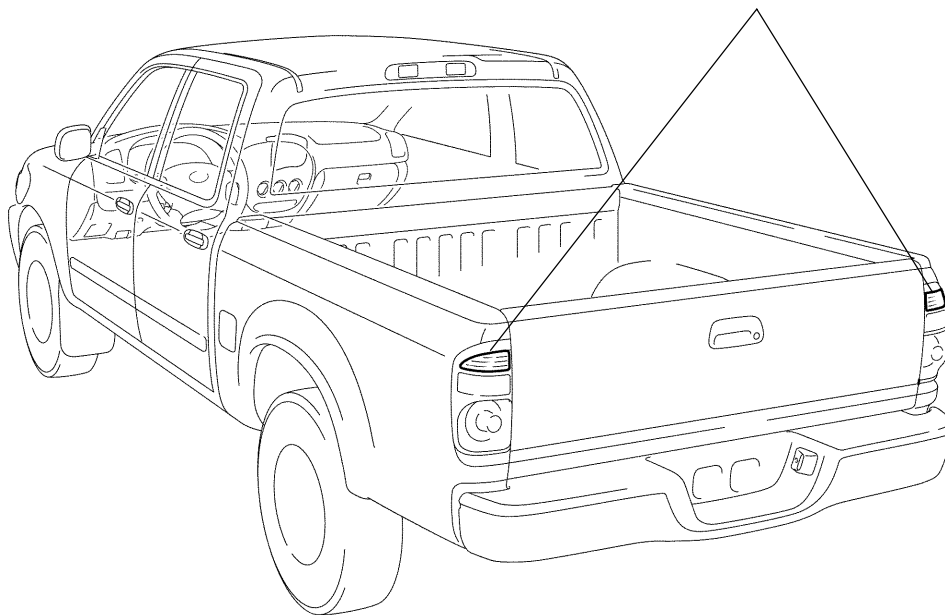

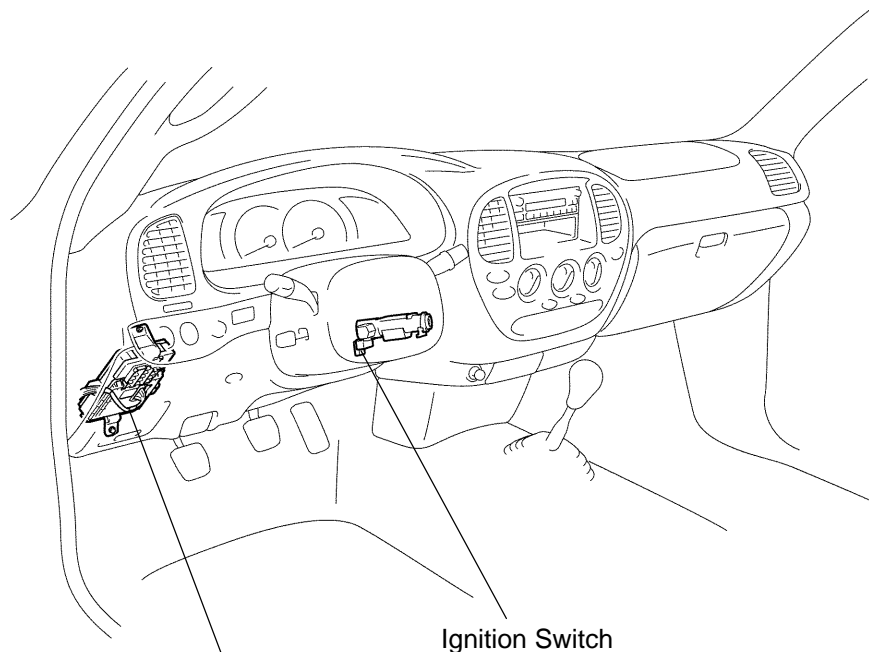
**Except Double Cab**

- Driver Side J/B
- BACK-UP LIGHT Relay (A/T)
  - GAUGE Fuse

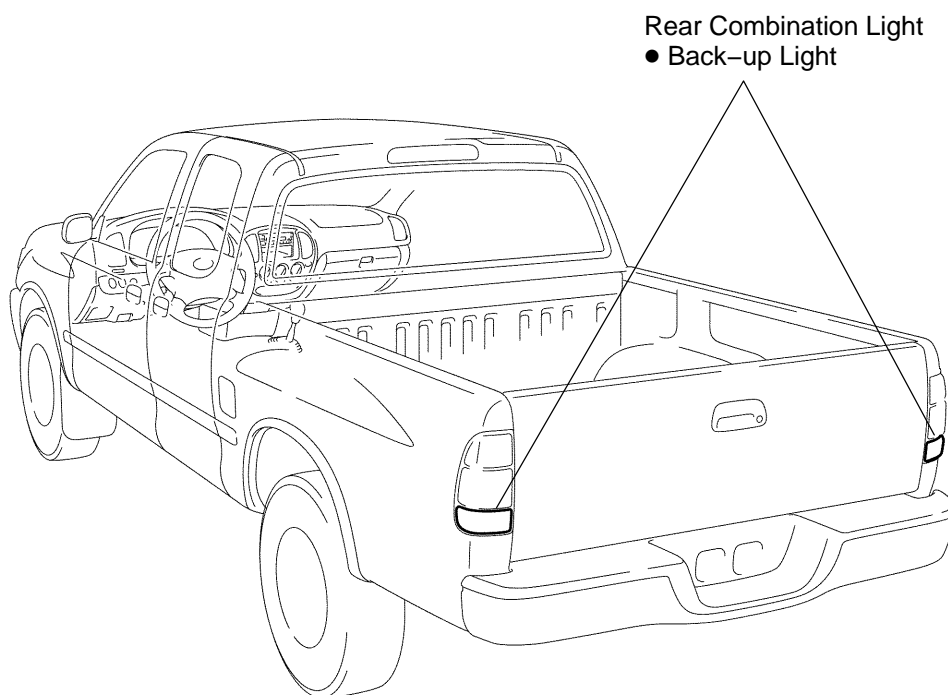

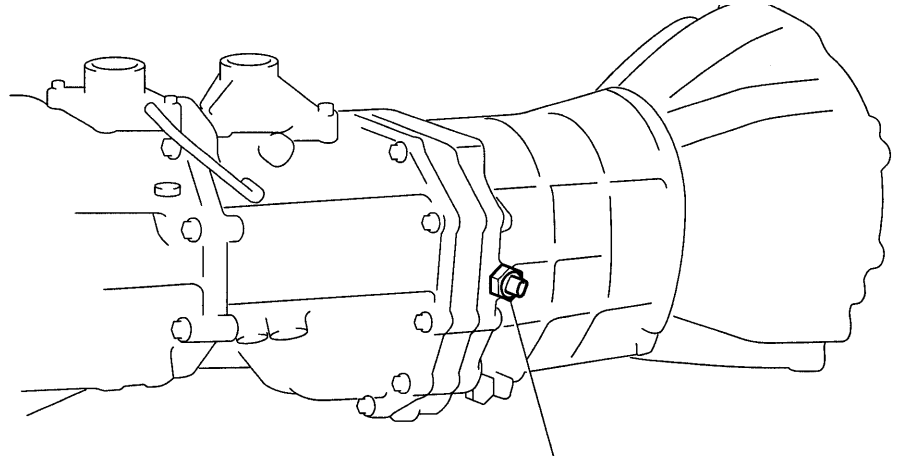

M/T:  
Back-up Light Switch

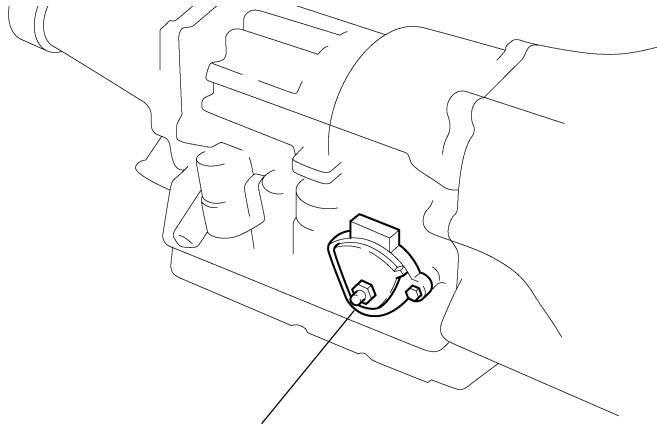

A/T:  
Park/neutral Position Switch