

## LOCATION

Instrument Panel J/B  
● ECU-IG Fuse

Roof Console Box Assembly:  
● GARAGE Door Opener Switch (Overhead Module)

Ignition Switch

