


INSPECTION

1. INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

- Disconnect the connector from the personal light.
- Push the personal light switch on, check that continuity exists between terminals 1 and 3.


If the continuity is not as specified, replace the bulb or light.

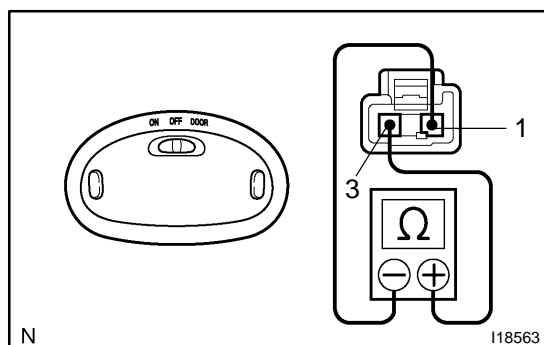

2. INSPECT DOME LIGHT SWITCH CONTINUITY


- Disconnect the connector from the dome light.
- Push the personal light switch on, check that continuity exists between terminals 1 and 3.

If the continuity is not as specified, replace the bulb or light.

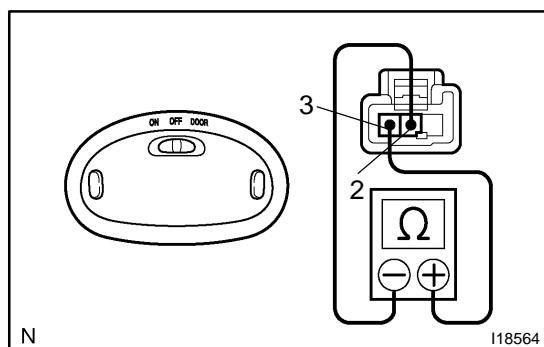

- Turn the light switch to the DOOR position, check that continuity exists between terminals 2 and 3.


If the continuity is not as specified, replace the light.

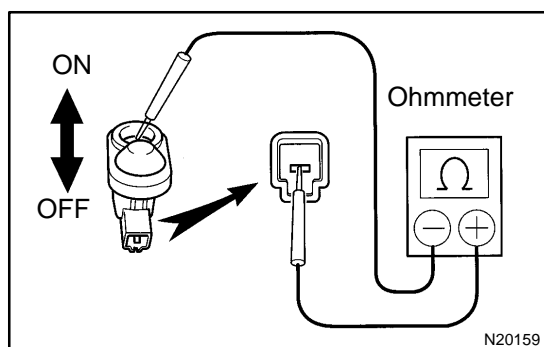

3. INSPECT DOOR COURTESY SWITCH CONTINUITY

- Check that continuity exists between the terminal and the switch body with the switch ON (switch pin released: door opened).
- Check that no continuity exists between the terminal and the switch body with the switch OFF (switch pin pushed in: door closed).


If the continuity is not as specified, replace the switch.

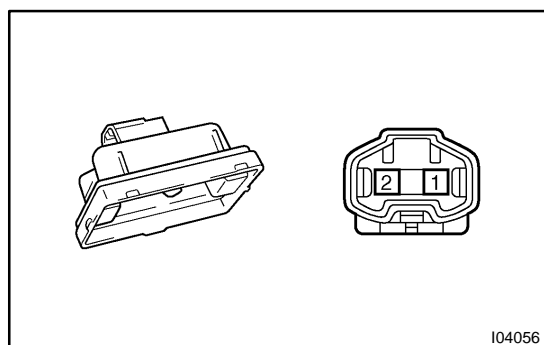

4. INSPECT DOOR COURTESY LIGHT CONTINUITY

Check that continuity exists between terminals 1 and 2.

If the continuity is not as specified, replace the light assembly or bulb.

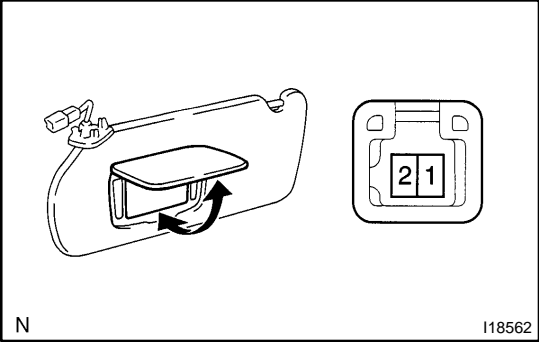

5. INSPECT VANITY LIGHT CONTINUITY

Switch Position	Tester Connection	Specified Condition
OFF (Closed)	1 – 2	No continuity
ON (Opened)	1 – 2	Continuity

If the continuity is not as specified, replace the bulb or vanity light.