


INSPECTION

1. Double cab: INSPECT IGNITION SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
ACC	1 – 3	Continuity
ON	1 – 2 – 3 5 – 6	Continuity
START	1 – 2 4 – 5 – 6	Continuity


If the continuity is not as specified, replace the switch.

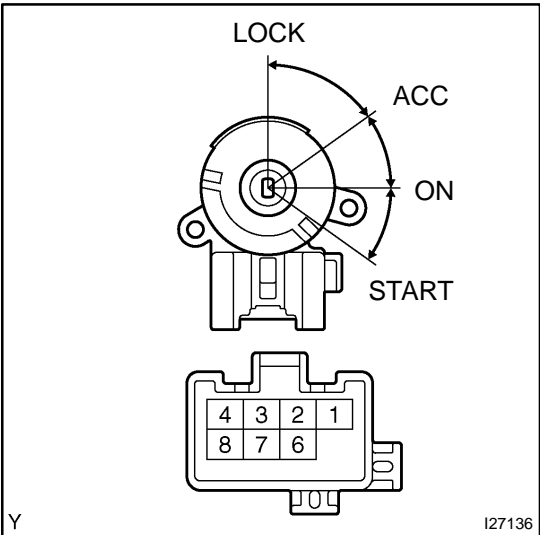

2. Except double cab: INSPECT IGNITION SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
ACC	2 – 3	Continuity
ON	2 – 3 – 4 6 – 7	Continuity
START	1 – 2 – 4 6 – 7 – 8	Continuity

If the continuity is not as specified, replace the switch.

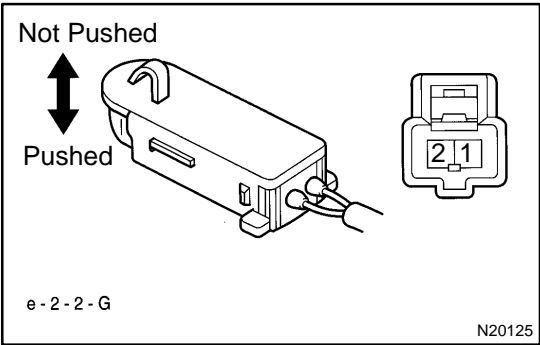

3. INSPECT KEY UNLOCK WARNING SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
Switch not pushed (Key removed)	1 – 2	No continuity
Switch pushed (Key inserted)	1 – 2	Continuity

If the continuity is not as specified, replace the switch.