


## INSPECTION

### 1. INSPECT DRIVER DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
LOCK	3 – 5	Continuity
OFF	3 – 5, 3 – 6	No continuity
UNLOCK	3 – 6	Continuity


If the continuity is not as specified, replace the door lock assembly.

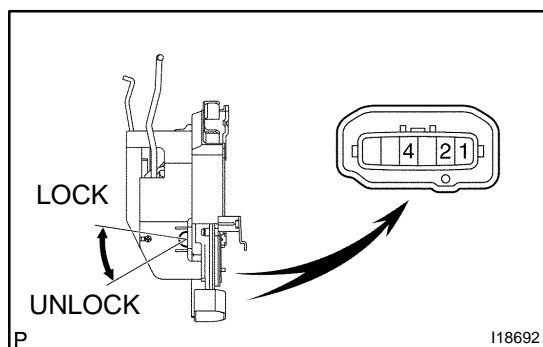

### 2. INSPECT PASSENGER SIDE DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
LOCK	2 – 4	Continuity
OFF	1 – 4, 2 – 4	No continuity
UNLOCK	1 – 4	Continuity


If the continuity is not as specified, replace the door lock assembly.

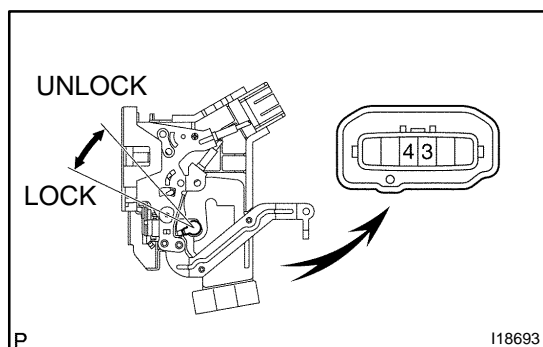

### 3. INSPECT DRIVER SIDE DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
OFF (Door lock set to LOCK)	3 – 4	No continuity
ON (Door lock set to UNLOCK)	3 – 4	Continuity


If the continuity is not as specified, replace the door lock assembly.

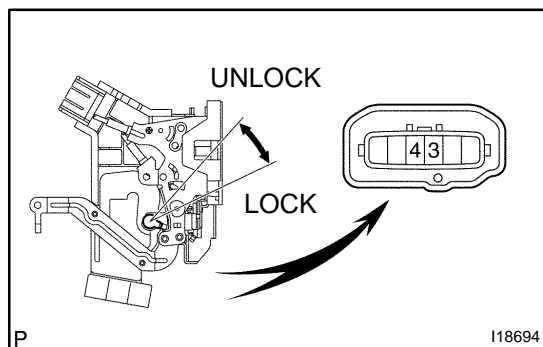

### 4. INSPECT PASSENGER SIDE DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
OFF (Door lock set to LOCK)	3 – 4	No continuity
ON (Door lock set to UNLOCK)	3 – 4	Continuity


If the continuity is not as specified, replace the door lock assembly.

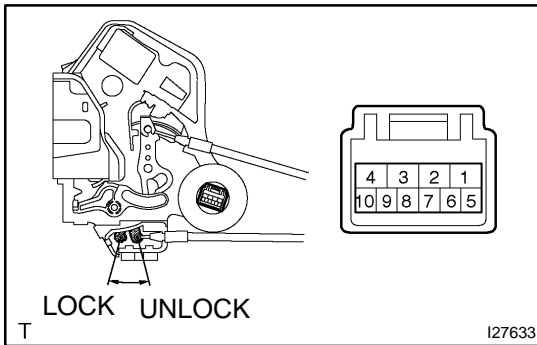

## 5. INSPECT REAR LEFT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
OFF (Door lock set to LOCK)	6 – 9	No continuity
ON (Door lock set to UNLOCK)	6 – 9	Continuity


If the continuity is not as specified, replace the door lock assembly.

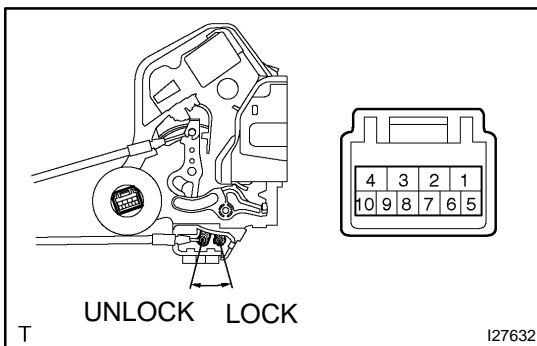

## 6. INSPECT REAR RIGHT DOOR UNLOCK DETECTION SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
OFF (Door lock set to LOCK)	6 – 9	No continuity
ON (Door lock set to UNLOCK)	6 – 9	Continuity


If the continuity is not as specified, replace the door lock assembly.

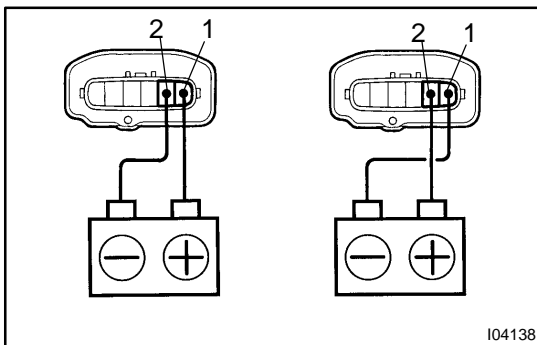

## 7. INSPECT DRIVER SIDE DOOR LOCK MOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, and check that the door lock cable moves to the UNLOCK position.
- Reverse the polarity and check that the door lock cable moves to the LOCK position.


If operation is not as specified, replace the door lock assembly.

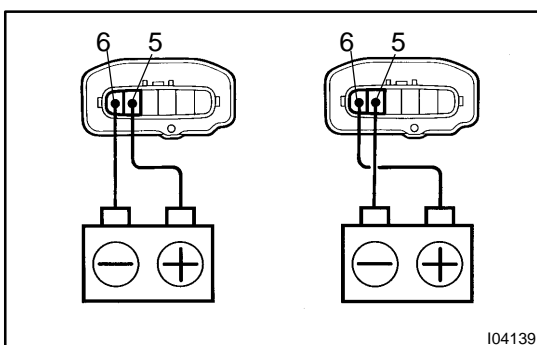

## 8. INSPECT PASSENGER SIDE DOOR LOCK MOTOR OPERATION


- Connect the positive (+) lead from the battery to terminal 5 and the negative (–) lead to terminal 6, and check that the door lock cable moves to the UNLOCK position.
- Reverse the polarity and check that the door lock cable moves to the LOCK position.

If operation is not as specified, replace the door lock assembly.

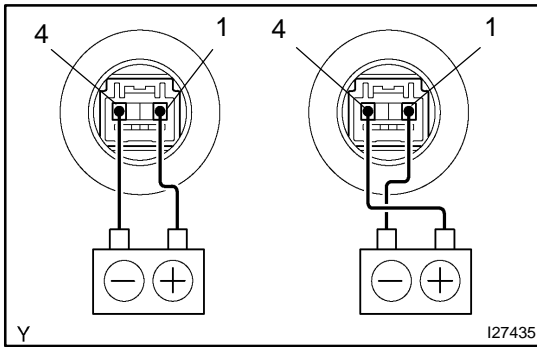**9. INSPECT REAR LEFT SIDE DOOR LOCK MOTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 4, and check that the door lock cable moves to the UNLOCK position.
- Reverse the polarity and check that the door lock cable moves to the LOCK position.

If operation is not as specified, replace the door lock assembly.

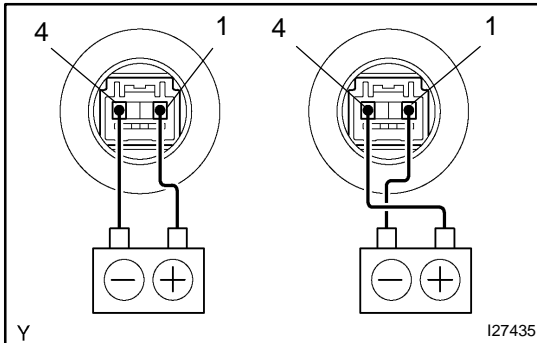**10. INSPECT REAR RIGHT SIDE DOOR LOCK MOTOR OPERATION**

- Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 4, and check that the door lock cable moves to the UNLOCK position.
- Reverse the polarity and check that the door lock cable moves to the LOCK position.

If operation is not as specified, replace the door lock assembly.