


POWER OUTLET LOCATION

BE2K0-01

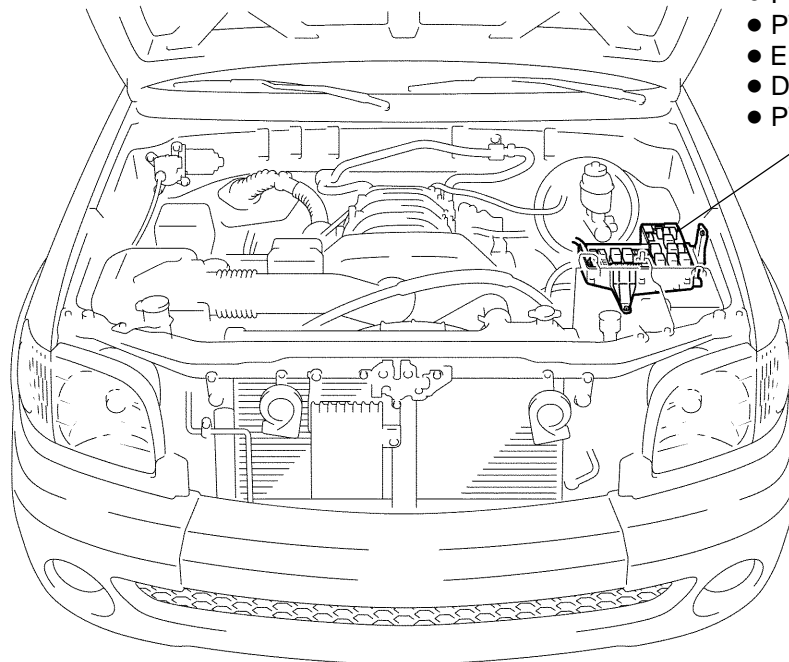

Except Double Cab:
Engine Room R/B

- PWR OUTLET1 Fuse
- PWR OUTLET2 Fuse
- EUC-B Fuse
- DOME Fuse
- PWR OUTLET Relay

Double Cab (w/ Rear Seat Entertainment System):
Voltage Inverter

