

POWER SLIDE BACK WINDOW SYSTEM (Except Double Cab)

LOCATION

BE2LI-01

Power Slide Back Window Switch

Ignition Switch

Driver Side J/B

- ECU-IG Fuse
- POWER Relay
- Integration Relay

Power Slide Back Window Regulator and Motor Assembly

