


INSPECTION

1. Double cab:
INSPECT STOP LIGHT SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
Not pushed	1 – 4	Continuity
Pushed in	1 – 4	No continuity
Not pushed	2 – 3	No continuity
Pushed in	2 – 3	Continuity


If the continuity is not as specified, replace the switch.

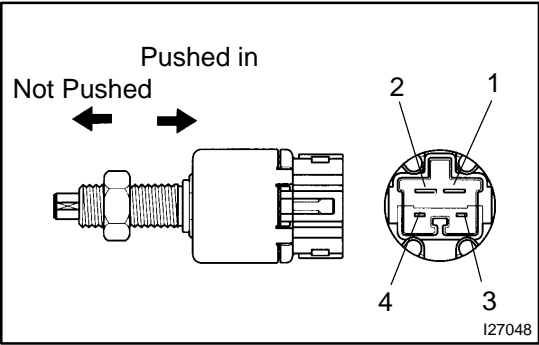

2. Except double cab:
INSPECT STOP LIGHT SWITCH CONTINUITY

Switch Position	Tester Connection	Specified Condition
Not pushed	1 – 2	Continuity
Pushed in	1 – 2	No continuity
Not pushed	3 – 4	No continuity
Pushed in	3 – 4	Continuity

If the continuity is not as specified, replace the switch.

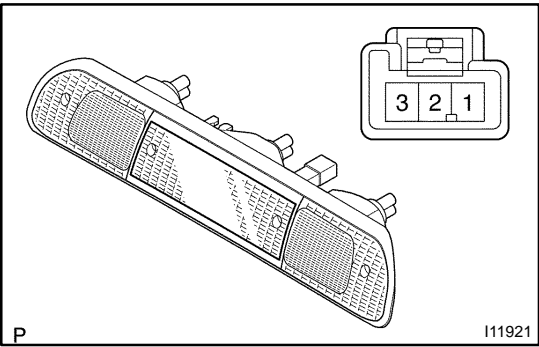

3. INSPECT HI-MOUNTED STOP LIGHT ASSEMBLY CONTINUITY

Using an ohmmeter, check that continuity exists between terminals 1 and 2.

If the continuity is not as specified, replace the bulb or light.