


INSPECTION

1. INSPECT SECURITY HORN OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to the horn body, and check that the horn blows.

If operation is not as specified, replace the horn.

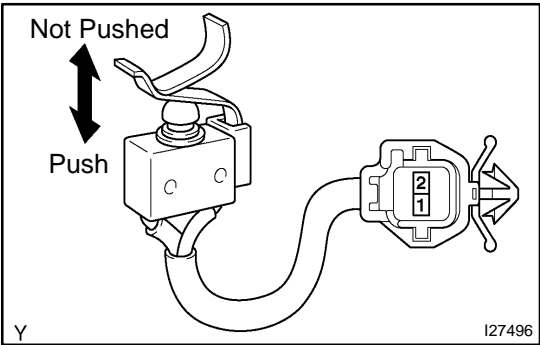

2. INSPECT ENGINE HOOD COURTESY SWITCH CONTINUITY

Condition	Tester Connection	Specified Condition
Push	1 – 2	No continuity
Not pushed	1 – 2	Continuity

If the continuity is not as specified, replace the switch.