

WIRELESS DOOR LOCK CONTROL SYSTEM (Double Cab)

BE2LM-01

PRECAUTION

NOTICES WHEN CHECKING

(a) Power door LOCK/UNLOCK function:

The wireless remote control function operates only when the following 3 conditions are met.

- (1) No key is inserted into the ignition key cylinder.
- (2) All the doors are closed (door open indicator off).
- (3) The power door lock system operates normally.

HINT:

- The UNLOCK function operates even when any door is open.
 - The UNLOCK function operates even when the key is inserted into the ignition key cylinder, however it must be in the OFF position.
- (b) Remote panic function:
The wireless remote control function operates only when the following condition is met.
The ignition switch is OFF.

HINT:

The key can be inserted, however it must be in the OFF position.

(c) The wireless door lock remote control operational area differs depending on the situation.

- (1) The operational area differs depending on the operators and the ways the transmitter is held.
- (2) In certain areas, the remote control function will only operate partially for the operational area will be reduced due to the vehicle body shape and the influence of the surrounding environment.
- (3) Since the transmitter uses faint electric waves, strong electric waves or noise in the frequency used may reduce the operational area or the remote control may not function.
- (4) When the battery weakens, the operational area is reduced or the remote control may not function.

HINT:

If the door control transmitter has been left in a place that is exposed to direct sunlight, such as on the instrument panel, it may cause the battery to weaken or cause other such problems.