

REGISTRATION PROCEDURE

REGISTER RECOGNITION CODE

HINT:

- Register the recognition code when replacing the door control transmitter or the door control receiver.
- The add mode is used to register new recognition codes while still retaining codes already registered. This mode is used when a new transmitter is added. If the number of registered codes exceeds 4, the previously registered codes will be erased in order, starting from the first registered code.
- The rewrite mode is used to erase all the previously registered recognition codes in order to register new recognition codes. This mode is used when the transmitter or the door control receiver is replaced a new one.
- The confirmation mode is used to confirm how many recognition codes have already been registered before an additional registration of a recognition codes.
- The prohibition mode is used to erase all the registered codes and disables the wireless door lock function. This mode is used when the transmitter is lost.
- All the following registration procedures must be performed in order continuously.

Flow Chart of Recognition Code Registration


START

Make sure that the following conditions are met.

- No key in ignition key cylinder.
- Driver side door is open (other doors are closed).
- Driver side door is unlocked.


1. Insert key into ignition key cylinder, then pull it out.

2. Press door lock control switch (for manual operation) 5 times to LOCK/UNLOCK at approx. 1 sec. interval.

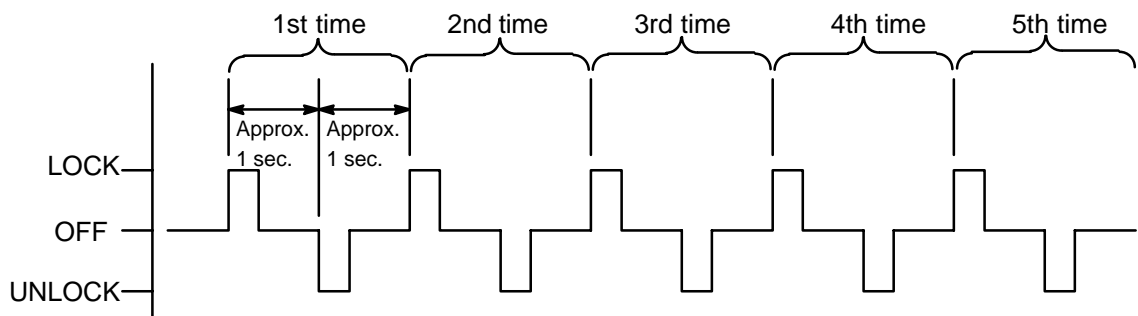

3. Close and open driver side door

4. Press door lock control switch again (for manual operation) 5 times to LOCK/UNLOCK at approx. 1 sec. interval.

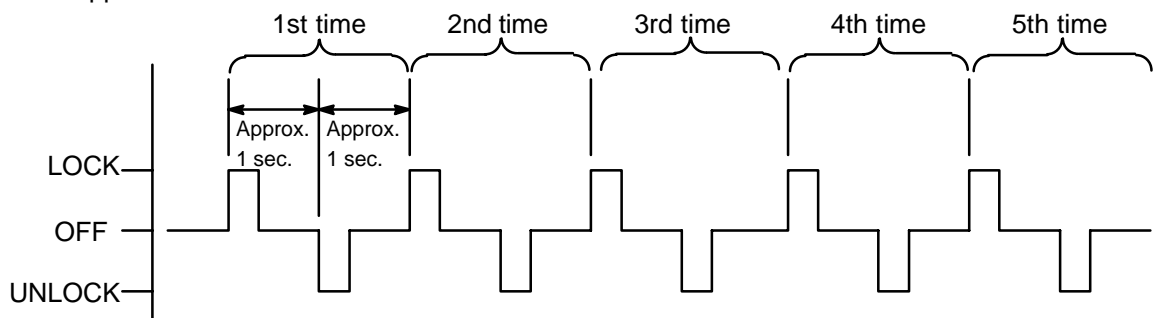

5. Insert key into ignition key cylinder.

Continued on next page


Continued from previous page

Mode Selection:


6. Turn ignition switch from LOCK to ON and back to LOCK at approximately 1 second intervals according to the number of times shown below.

Number of ON-LOCK operations of ignition switch:**Add Mode**


ON-LOCK operation: 1 time

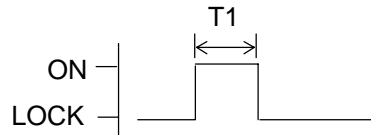T1: Approx. 1 sec.**Rewrite Mode**


ON-LOCK operation: 2 times

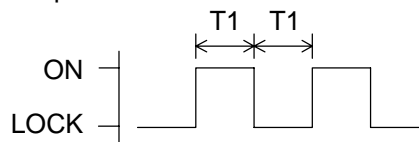**Confirmation Mode**

ON-LOCK operation: 3 times

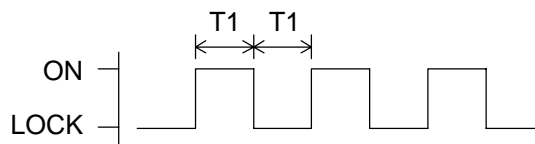**Prohibition Mode**

ON-LOCK operation: 5 times

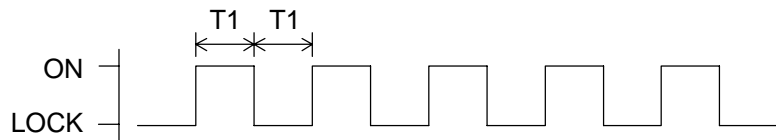

If the number of the ON-LOCK operations of the ignition switch is 0, 4 or 6 or more, there will be no response (power door lock and unlock operation) to show which mode has been selected.

Within 40 sec.

7. Remove key from ignition key cylinder.

Within 3 sec.

Continued on next page

Within
3 sec.


Continued from previous page

Response to selected mode (Power door lock operation):

Body ECU automatically performs power door LOCK–UNLOCK operation to inform which mode has been selected.

Add Mode

LOCK–UNLOCK operation: 1 time

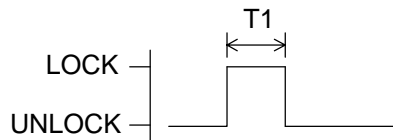


T1: Approx. 1 sec.

T2: Approx. 2 sec.


Rewrite Mode

LOCK–UNLOCK operation: 2 times

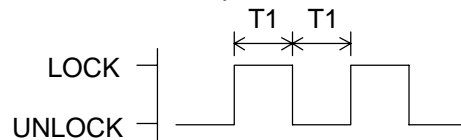


Confirmation Mode

LOCK–UNLOCK operation: The number of registered codes (1 – 5 times)

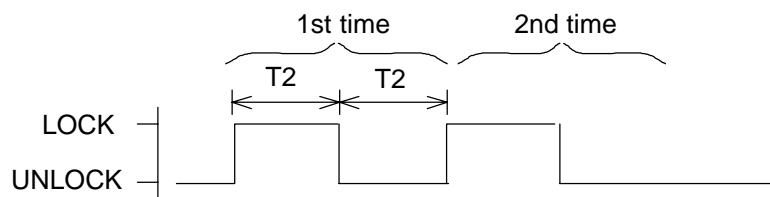

Prohibition Mode

LOCK–UNLOCK operation: 5 times

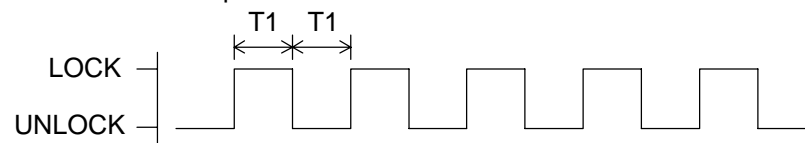

HINT:

- In the confirmation mode, when LOCK–UNLOCK operation is performed twice, the number of registered recognition codes is 2.
- In the confirmation mode, when 0 codes are registered, LOCK–UNLOCK operation is automatically performed 5 times.

Within
40 sec.

Add Mode or
Rewrite Mode

Confirmation Mode and
Prohibition Mode

Continued on next page

Registration procedures are completed.

