


ADJUSTMENT

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

Torque: 23 N·m (235 kgf-cm, 17 ft-lbf)

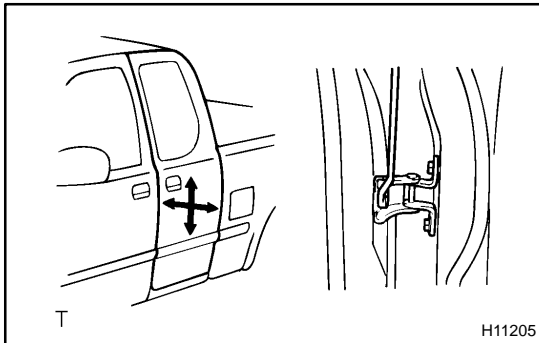


2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the door side bolts.

HINT:

Substitute the standard bolt for the centering bolt (see page [BO-7](#)).


Torque: 23 N·m (235 kgf-cm, 17 ft-lbf)

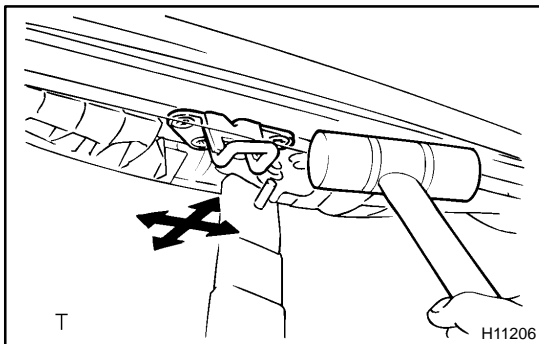

3. ADJUST DOOR LOCK UPPER STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a hammer.
- Tighten the striker mounting screws again.

Torque: 23 N·m (235 kgf-cm, 17 ft-lbf)

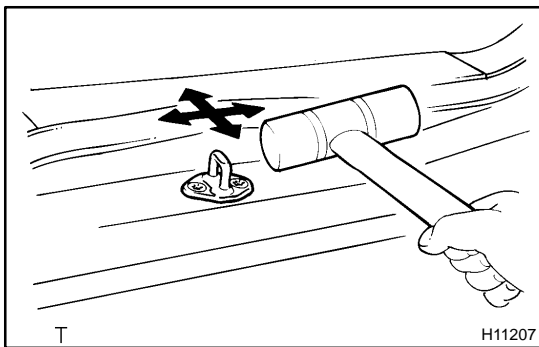

4. ADJUST DOOR LOCK LOWER STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a hammer.
- Tighten the striker mounting screws again.

Torque: 23 N·m (235 kgf-cm, 17 ft-lbf)