

REMOVAL


1. Access cab (Standard body type):

REMOVE REAR BODY SIDE PANEL PROTECTOR

Using a moulding remover, remove the 2 protectors.

NOTICE:

- Each protector has 21 clips as shown in the illustration.
- Be careful not to damage the clips.

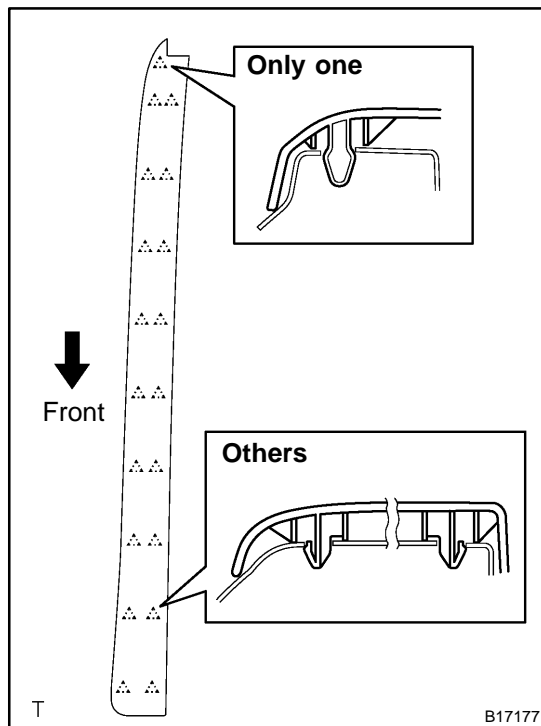

2. Access cab (Wide body type):

REMOVE REAR BODY SIDE PANEL PROTECTOR

Using a moulding remover, remove the 2 protectors.

NOTICE:

- Each protector has 19 clips as shown in the illustration.
- Be careful not to damage the clips.

3. Access cab (Standard body type), Standard cab:


REMOVE TAIL GATE PROTECTOR

- Remove the 6 pins.
- Using a clip remover, remove the protector and 10 clips.

4. Access cab (Wide body type) only:

REMOVE TAIL GATE PROTECTOR

- Using a torx® socket wrench (T30), remove the 4 screws.
- Using a moulding remover, remove the protector and 8 clips.

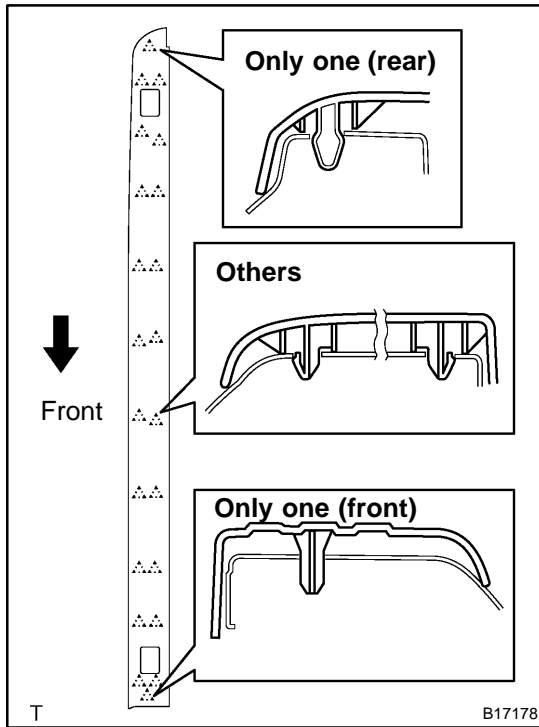**5. Double cab:****REMOVE REAR BODY SIDE PANEL PROTECTOR**

Using a moulding remover, remove the 2 protectors.

- (a) Using a torx® socket wrench (T30), remove the 4 screws.
- (b) Using a moulding remover, remove the protector and 8 clips.

NOTICE:

- Each protector has 22 clips (3 types) as shown in the illustration.
- Be careful not to damage the clips.

6. Double cab:**REMOVE TAIL GATE PROTECTOR**

- (a) Remove the 6 pins.