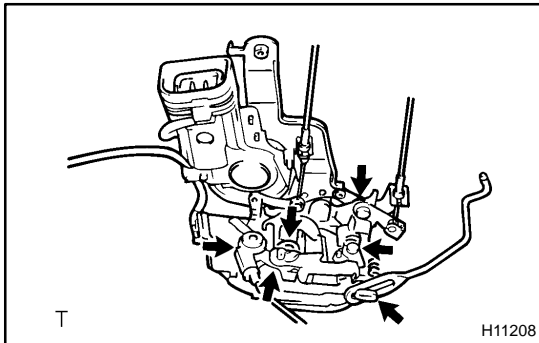


REASSEMBLY

1. INSTALL OUTSIDE HANDLE WITH DOOR LOCK CYLINDER

- Install the door lock cylinder to the outside handle.
- Install the outside handle with door lock cylinder with the 2 bolts.

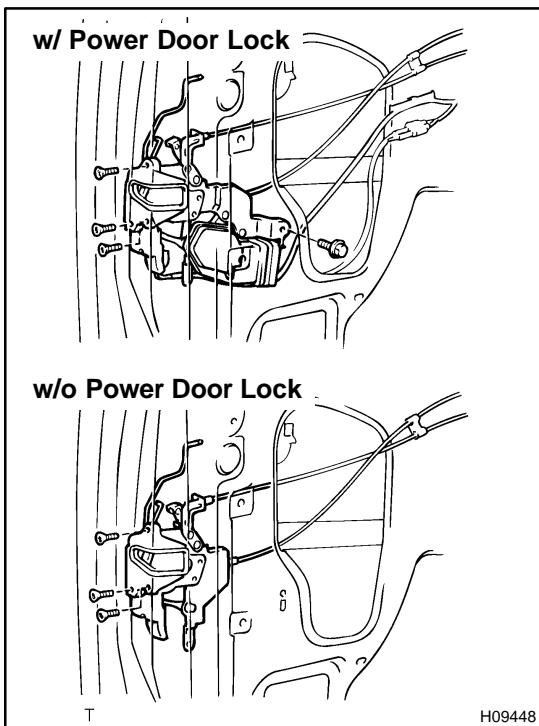
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)



2. INSTALL DOOR LOCK

HINT:

Apply MP grease to the sliding and rotating parts of the door lock.



- Using a torx® socket wrench, install the door lock with the 3 torx® screws.

Torx® socket wrench:

T30 (Part No. 09042-00010 or locally manufactured tool)

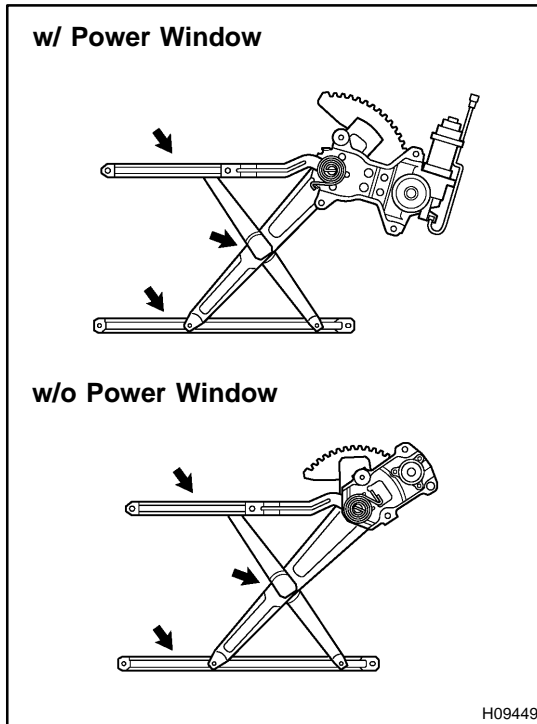
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)

HINT:

Apply adhesive to the 3 screws.

Adhesive: Part No. 08833-00070, THREE BOND 1324 or equivalent

- w/ Power door lock:
Connect the connector and install the bolt.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- Connect the 2 links to the outside handle and door lock cylinder.

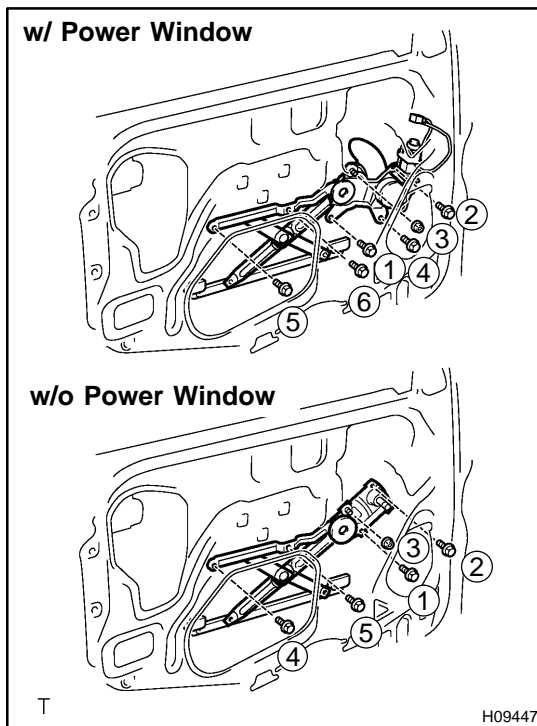


3. INSTALL WINDOW REGULATOR

HINT:

Apply MP grease to the sliding and rotating parts of the window regulator.

- (a) Install the window regulator through the service hole.



- (b) w/ Power window:

Install the window regulator with the 5 bolts and nut.

Torque:

8.0 N·m (82 kgf·cm, 71 in.-lbf) for bolt

5.0 N·m (51 kgf·cm, 44 in.-lbf) for nut

HINT:

When installing the window regulator, tighten the bolts and nut in the order shown in the illustration.

- (c) w/o Power window:

Install the window regulator with the 4 bolts and nut.

Torque:

5.0 N·m (82 kgf·cm, 71 in.-lbf) for bolt

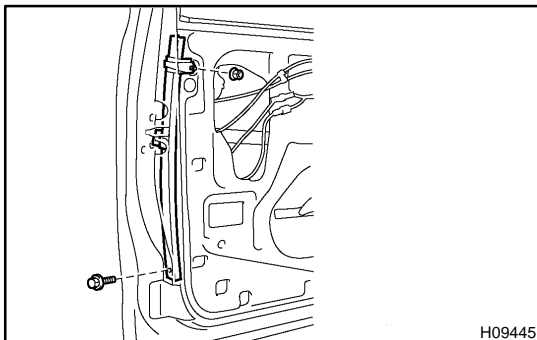
5.0 N·m (51 kgf·cm, 44 in.-lbf) for nut

HINT:

When installing the window regulator, tighten the bolts and nut in the order shown in the illustration.

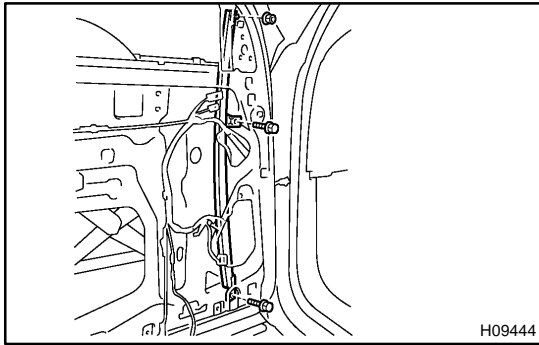
- (d) w/ Power window:

Connect the connector.

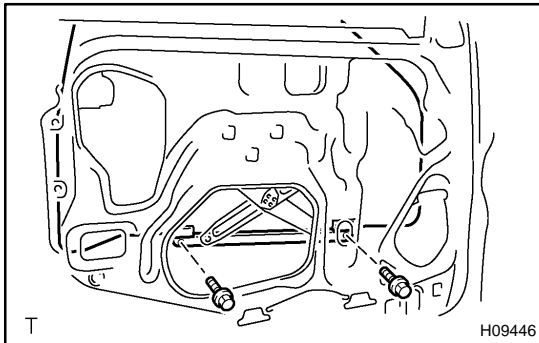


4. INSTALL REAR LOWER FRAME

Install the rear lower frame with the bolt and nut.

**5. INSTALL FRONT LOWER FRAME**

Install the front lower frame with the 2 bolts and nut.

6. INSTALL DOOR GLASS RUN**7. INSTALL DOOR GLASS**

Install the door glass with the 2 bolts.

Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)

NOTICE:

Do not damage the door glass.

8. INSTALL DOOR BELT MOULDING**9. INSTALL OUTSIDE REAR VIEW MIRROR**

(a) Install the outside rear view mirror with the 3 screws.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

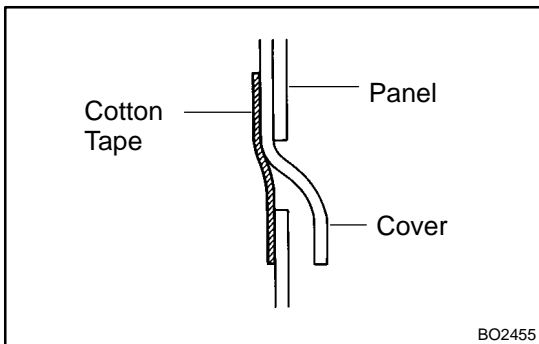
(b) w/ Remote control:

Connect the connector.

10. INSTALL SPEAKER

(a) Install the speaker with the 3 screws.

(b) Connect the connector.

**11. INSTALL SERVICE HOLE COVER**

(a) Install the service hole cover.

HINT:

- When installing the service hole cover, pull out the cables and connectors through the service hole cover.
- There should be no wrinkles or folds after attaching the service hole cover.
- After attaching the service hole cover, confirm the sealing condition.

(b) Connect the clamps and connector.

12. INSTALL INSIDE HANDLE

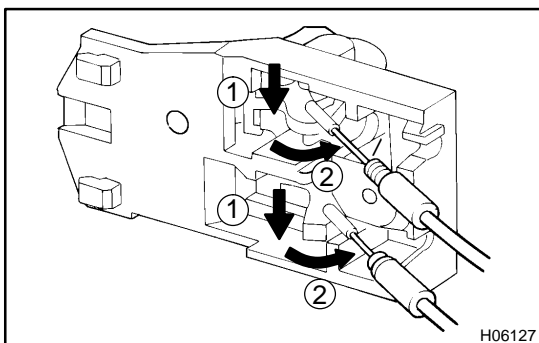
(a) Connect the 2 cables to the inside handle.

(b) Slide the inside handle forward to install it.

(c) Install the screw.

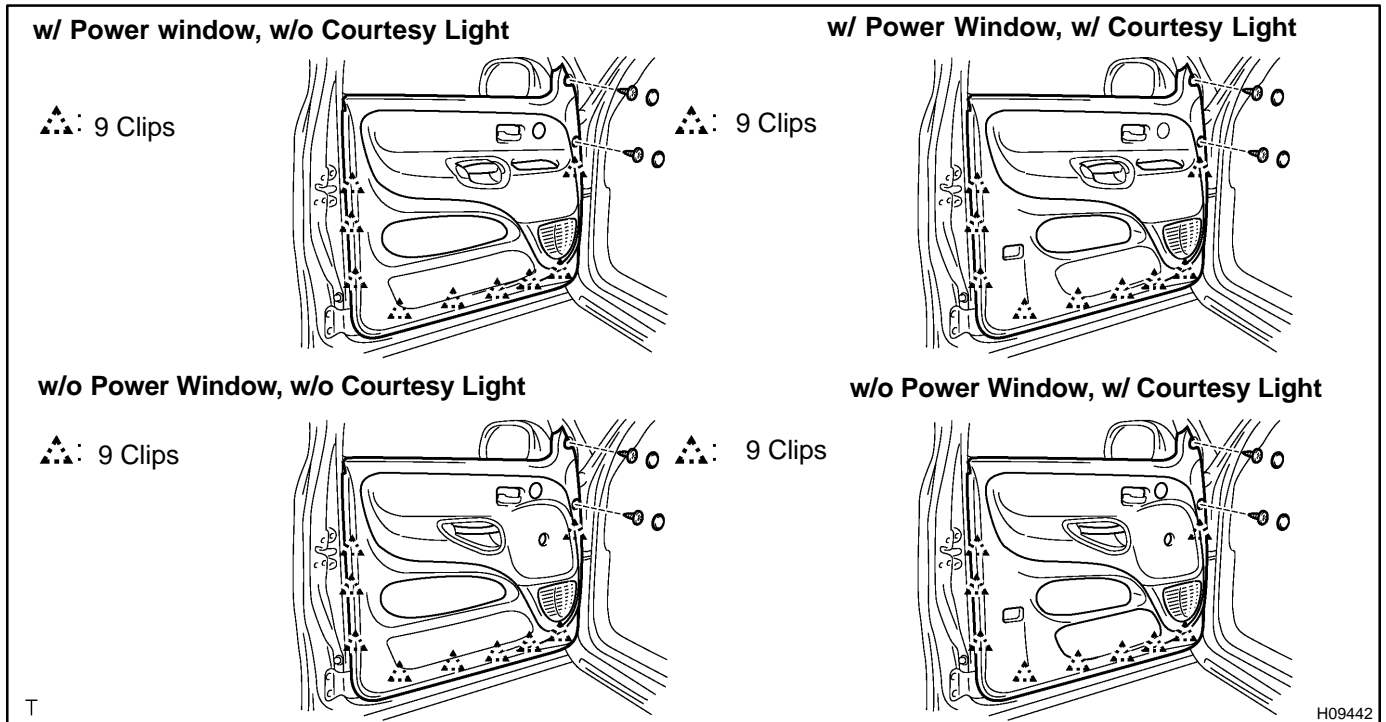
13. INSTALL DOOR ASSIST GRIP

Install the door assist grip to the door trim with the 2 screws.

14. INSTALL LOWER WEATHERSTRIP**15. INSTALL INNER WEATHERSTRIP**

16. INSTALL DOOR TRIM

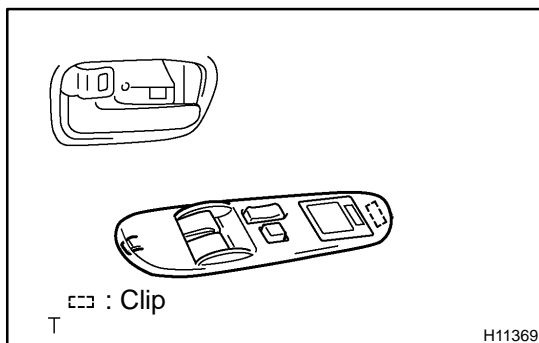
Install the door trim with the 2 screws and 2 caps.

**17. w/ Tweeter speaker:****INSTALL TWEETER SPEAKER**

- (a) Install the tweeter speaker with the 3 screws, then connect the connector.
- (b) Install the tweeter speaker cover.

18. w/ Courtesy light:**INSTALL COURTESY LIGHT**

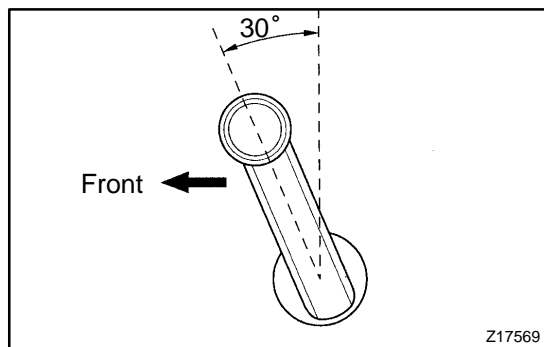
- (a) Connect the connector.
- (b) Install the courtesy light.

19. w/o Courtesy light:**INSTALL COURTESY LIGHT COVER****20. w/ Power window:****INSTALL POWER WINDOW SWITCH**

- (a) Connect the connectors.
- (b) Install the power window switch.

21. INSTALL INSIDE HANDLE BEZEL

Install the inside handle bezel with the screw.

**22. w/o Power window:****INSTALL REGULATOR HANDLE**

Install the regulator handle with the snap ring.

HINT:

With the door window fully closed, install the plate and the regulator handle with the snap ring as shown in the illustration.