

DISASSEMBLY

HINT:


A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. REMOVE DOOR INSIDE BEZEL

- (a) Using a screwdriver, open the cover.

HINT:

Tape the screwdriver tip before use.

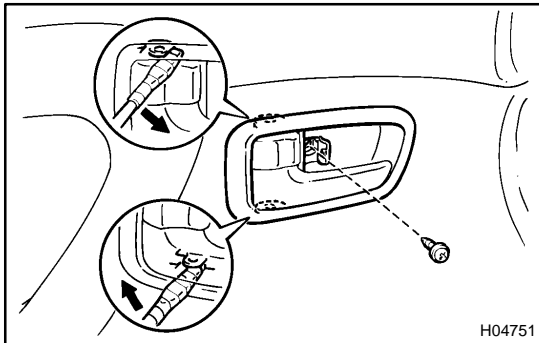


- (b) Remove the screw.

- (c) Using a screwdriver, remove the door inside bezel, as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

2. REMOVE COURTESY LIGHT

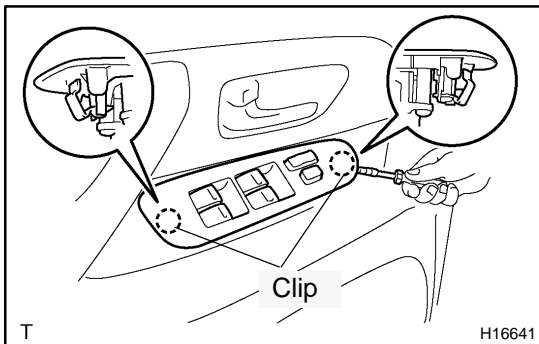

3. REMOVE FRONT ARMREST BASE PANEL UPPER WITH POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the front armrest base panel upper together with the power window switch.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.


- (c) Remove the power window switch from the front armrest base panel upper.

4. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH

Using a screwdriver, remove the front door lower frame bracket garnish.

HINT:

Tape the screwdriver tip before use.

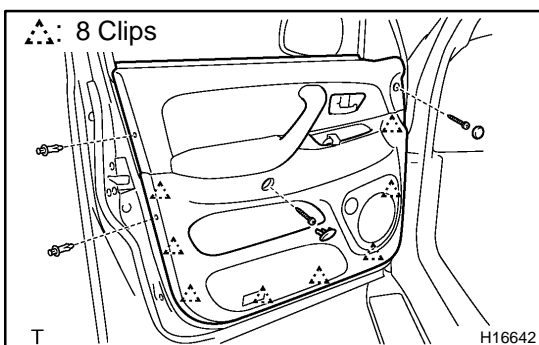

5. REMOVE FRONT DOOR TRIM PANEL

- (a) Using a screwdriver, remove the 2 caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and 2 clips.

- (c) Insert a screwdriver between the front door trim panel and front door panel to remove the front door trim panel.

HINT:

Tape the screwdriver tip before use.

- (d) Pull the front door trim panel upward to remove the front door trim panel.
- (e) Remove the front door glass weatherstrip inner from the front door trim panel.


6. REMOVE TWEETER SPEAKER

7. REMOVE OUTER REAR VIEW MIRROR

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and outer rear view mirror.


8. REMOVE SPEAKER

- (a) Disconnect the connector.
- (b) Remove the 3 screws and speaker.

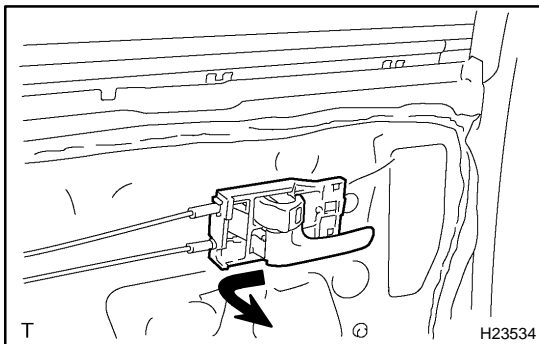

9. REMOVE FRONT DOOR INSIDE HANDLE

- (a) Slide the front door inside handle backward to remove it.

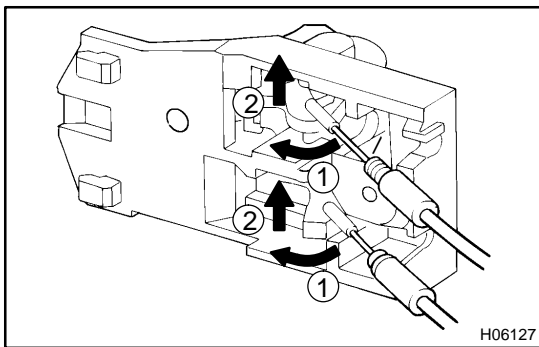

- (b) Disconnect the 2 cables from the front door inside handle, as shown in the illustration.

10. REMOVE FRONT DOOR SERVICE HOLE COVER

- (a) Using a clip remover, remove the clamps and grommets.
- (b) Remove the front door service hole cover.

NOTICE:

Do not tear the front door service hole cover.

11. REMOVE FRONT DOOR GLASS


- (a) Open the front door glass until the bolts appear in the service hole.
- (b) Remove the 2 bolts.

NOTICE:

Do not damage the door glass.

- (c) Pull the front door glass upward to remove it.

12. REMOVE FRONT DOOR GLASS RUN

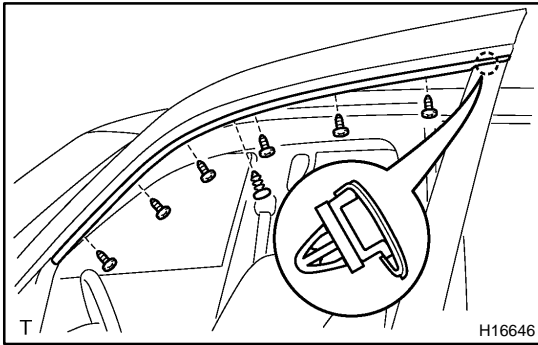


13. REMOVE FRONT DOOR WINDOW FRAME MOULDING UPPER

- Remove the 6 screws.
- Using a screwdriver or clip remover, remove the front door window frame moulding upper.


HINT:

Tape the screwdriver tip before use.

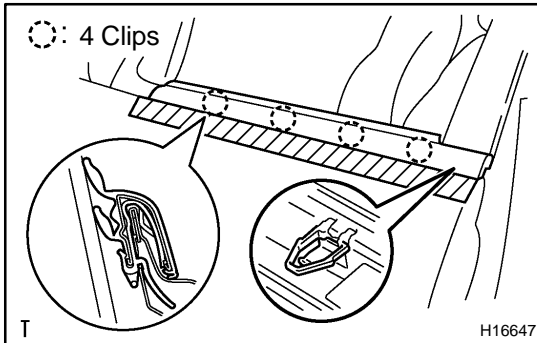


14. REMOVE FRONT DOOR BELT MOULDING

- Apply protective tape to the outer surface, as shown in the illustration, to prevent the vehicle surface from being scratched.
- Using a moulding remover, remove the front door belt moulding.

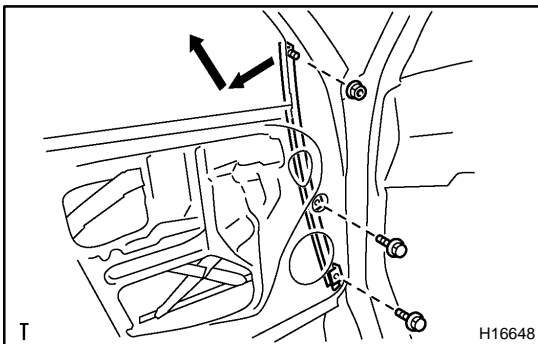

15. REMOVE FRONT DOOR FRAME FRONT LOWER

- Remove the 2 bolts, nut and front door frame front lower, as shown in the illustration.
- Remove the front door glass run No. 2 from the front door frame front lower.

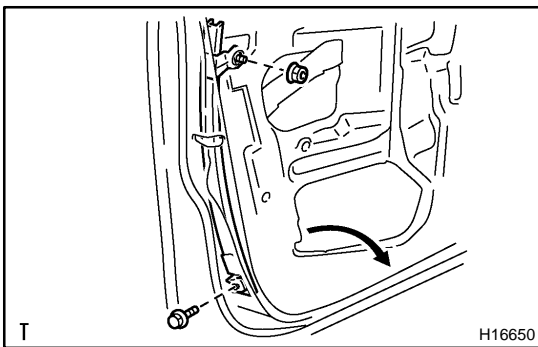


16. REMOVE FRONT DOOR FRAME REAR LOWER

Remove the bolt, nut and front door frame rear lower, as shown in the illustration.

HINT:

Remove the front door frame rear lower through the service hole.

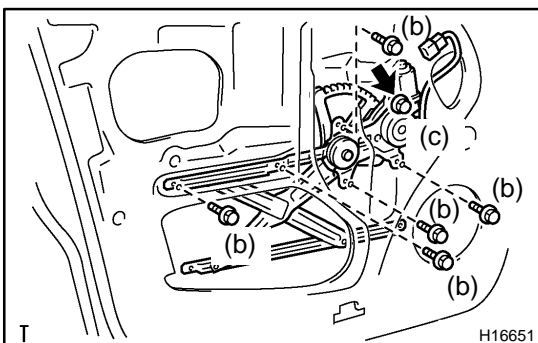

17. REMOVE FRONT DOOR POWER WINDOW REGULATOR

- Disconnect the connector.
- Remove the 5 bolts.
- Loosen the bolt, and remove the front door power window regulator.


HINT:

Remove the front door power window regulator through the service hole.


- (d) Remove the 3 screws and power window regulator motor from the front door power window regulator.

18. REMOVE FRONT DOOR LOCK

- (a) Disconnect the 2 control cables from the clamp.
- (b) Remove the clamp.

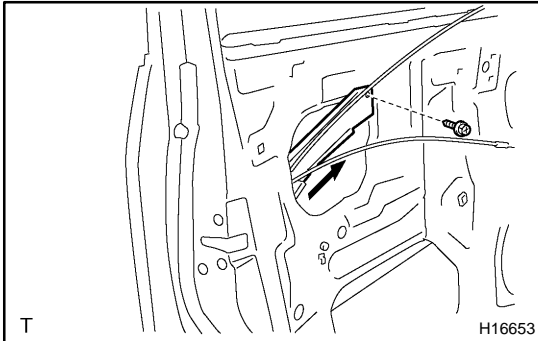

- (c) Remove the screw and front door lock control link protector.
- (d) Disconnect the 2 control links from the front door outside handle and front door lock cylinder.

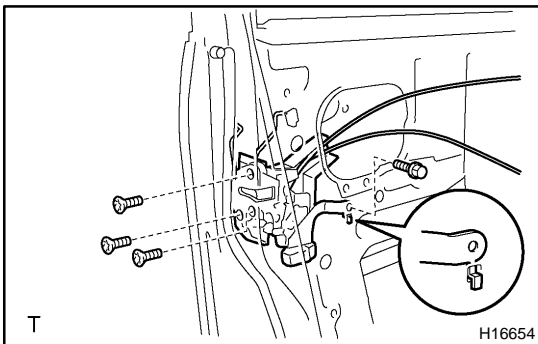

- (e) Disconnect the connector and remove the bolt.
- (f) Using a torx® socket wrench, remove the 3 torx® screws.
Torx® socket wrench:
T30 (Part No. 09042-00010 or locally manufactured tool)
- (g) Remove the front door lock.

HINT:

Remove the front door lock through the service hole.

- (h) Remove the 2 screws and front door lock cover from the front door lock.

19. REMOVE FRONT DOOR OUTSIDE HANDLE WITH LOCK CYLINDER

- (a) Remove the service hole plug.
- (b) Remove the 2 bolts and front door outside handle together with lock cylinder.
- (c) Remove the bolt and lock cylinder from the front door outside handle.

20. REMOVE FRONT DOOR WEATHERSTRIP

Using a clip remover, remove the front door weatherstrip.

21. REMOVE FRONT DOOR WEATHERSTRIP NO. 2