

## REMOVAL

### CAUTION:

Work must not be started until at least 90 seconds after the ignition switch is turned to the LOCK position and the negative (–) terminal cable is disconnected from the battery.

(The SRS is equipped with a back-up power source. If work is started within 90 seconds from disconnecting the negative (–) terminal cable of the battery, the SRS may deploy.)

### NOTICE:

When removing/installing and overhauling the passenger seat, check the passenger occupant classification system and perform the zero point calibration (see page [DI-1829](#)).

### HINT:

The procedures listed below are for the LH side.

#### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for 90 seconds after disconnecting the cable to prevent the airbag working.

#### 2. REMOVE SEAT TRACK COVERS

Using a screwdriver, remove the seat track covers.

### HINT:

Tape the screwdriver tip before use.

#### 3. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors.
- (c) w/ Side airbag:  
Disconnect the airbag connector.
- (d) Remove the front seat.

### NOTICE:

Be careful not to damage the vehicle body.