

DISASSEMBLY


CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

HINT:

Tape the screwdriver tip before using it to remove parts.


1. **REMOVE OCCUPANT CLASSIFICATION ECU**
(See page [RS-154](#))
2. **REMOVE SEAT POSITION SENSOR PROTECTOR**
(See page [RS-145](#))
3. **REMOVE SEAT POSITION SENSOR**
(See page [RS-145](#))
4. **REMOVE SEAT LEG INNER COVER**
Remove the 3 screws and seat leg inner cover.
5. **REMOVE HEADRESTS**

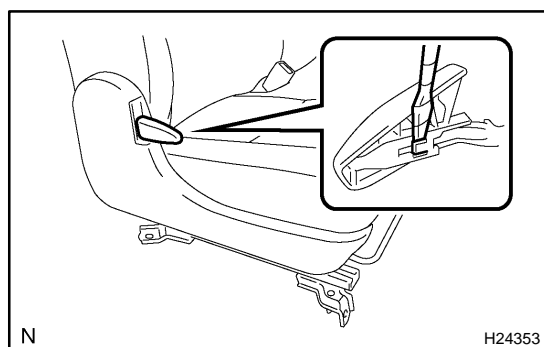


6. **REMOVE RECLINING ADJUSTER RELEASE HANDLE**
Using a screwdriver, remove the reclining adjuster release handle.

HINT:


Tape the screwdriver tip before use.

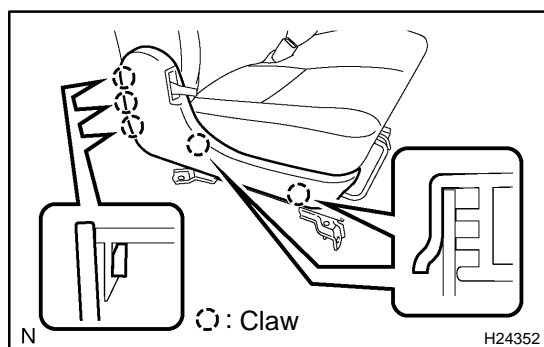


7. **REMOVE RH SEAT CUSHION SHIELD**
Disengage the claws and remove the RH seat cushion shield.
8. **REMOVE SEAT CUSHION LOWER SHIELD**
Remove the 2 screws and seat cushion lower shield.

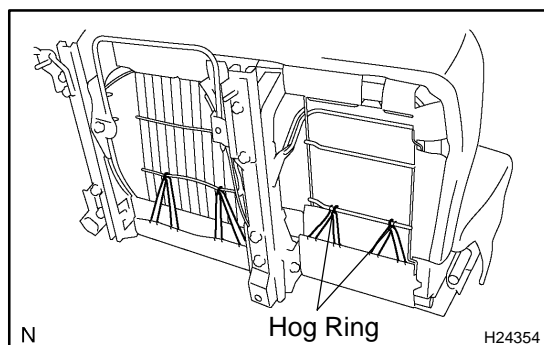


9. **REMOVE SEATBACK ASSEMBLY**
 - (a) Remove the hog rings from the seatback cover belt.
 - (b) Remove the seatback cover belt from the hook.
 - (c) Remove the hog rings from the rearmost portion of the seat cushion frame.

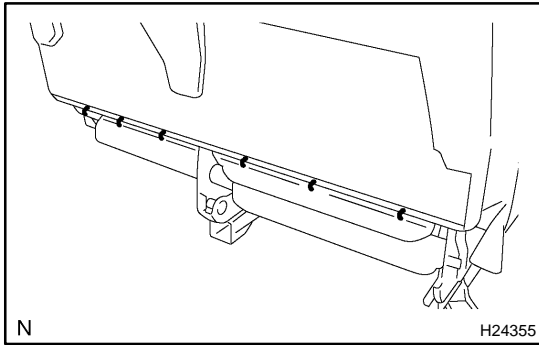


- (d) Remove the hog rings from the seatback cover.
- (e) Open the fastener.
- (f) Remove the bolt and center armrest assembly.
- (g) Remove the 2 bushings.

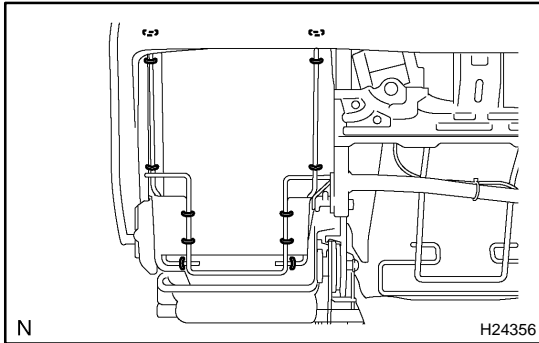


- (h) Remove the hog rings from the seatback cover.

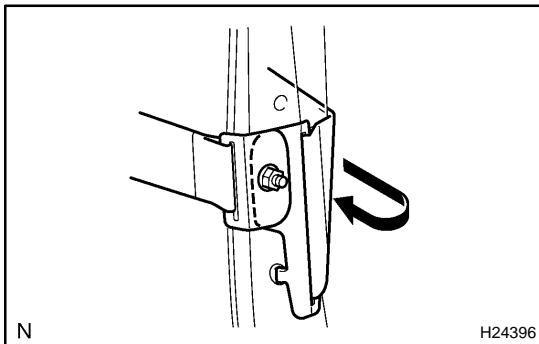


- (i) w/ Side airbag:
Remove the nut and disconnect the seatback cover bracket from the seatback frame.

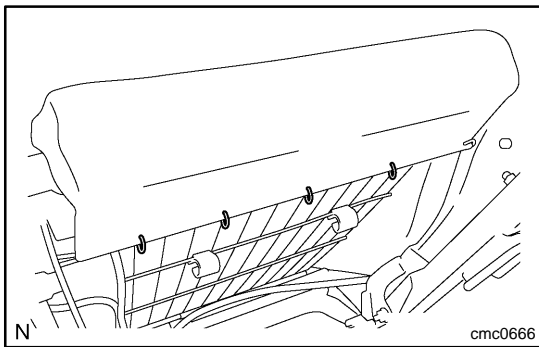


- (j) Remove the hog rings from the seat cushion cover.

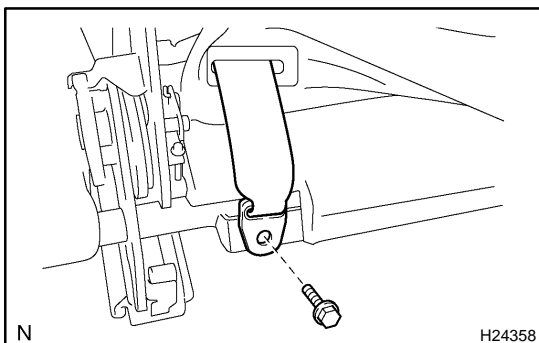

- (k) Remove the bolt and disconnect the front seat center belt from the seat cushion assembly.
- (l) Remove the screw and RH seat cushion lower shield.
- (m) Remove the 2 screws and RH reclining adjuster inside cover.

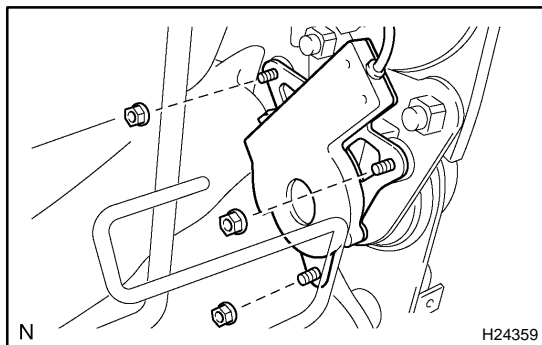


- (n) Remove the 3 nuts and disconnect the front seat center belt.
- (o) Remove the 3 bolts.
- (p) Using a torx® socket wrench, remove the 2 torx® screws and seatback assembly from the seat cushion assembly.
- (q) Remove the bushing from the seatback frame

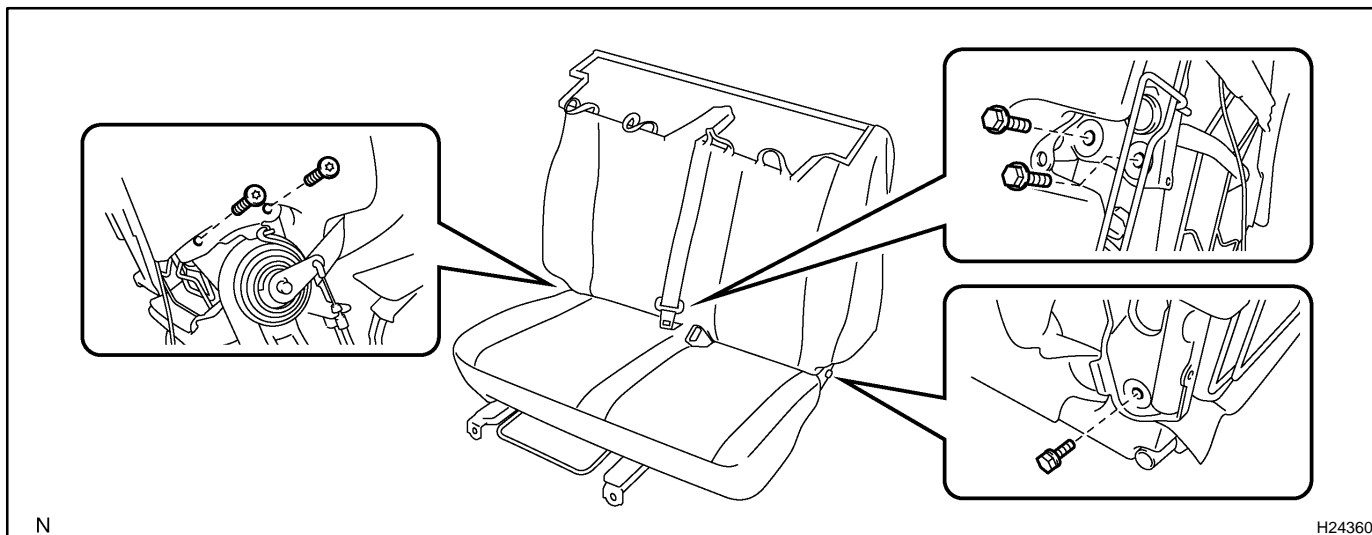

10. REMOVE SEATBACK FRAME


- (a) Remove the 4 headrest supports from the seatback assembly.
- (b) Remove the seatback lock upper bezel.
- (c) Remove the seatback frame from the seatback pad.

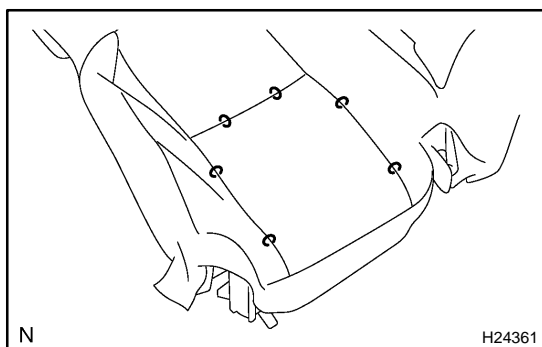

11. REMOVE SEATBACK COVER

Remove the hog rings and seatback cover from the seatback pad.

12. REMOVE SHOULDER BELT COVER

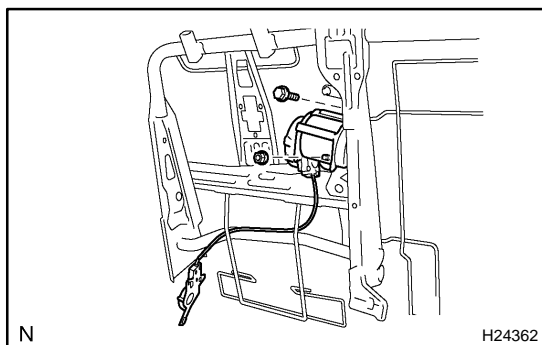

13. REMOVE FRONT SEAT CENTER BELT

- (a) Disconnect the clamps.
- (b) Remove the bolt, nut and front seat center belt.

14. REMOVE RH CENTER SEAT HINGE COVER


Remove the 2 screws and RH center seat hinge cover.

15. REMOVE RH SEAT CUSHION INNER SHIELD AND SEAT CUSHION COVER

Remove the 2 screws, RH seat cushion inner shield and seat cushion cover.

16. REMOVE SEAT HINGE COVER


Remove the screw and seat hinge cover.

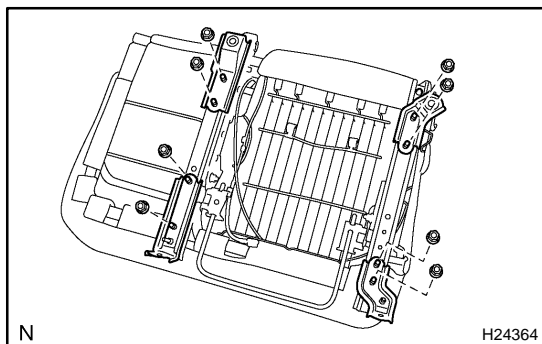**17. REMOVE OUTER SEAT TRACK LOWER FRONT AND REAR BRACKET**


- (a) Remove the 2 nuts and outer seat track lower front bracket.
- (b) Remove the 2 nuts and outer seat track lower rear bracket.

18. REMOVE INNER SEAT TRACK LOWER FRONT AND REAR BRACKET

- (a) Remove the 2 nuts and inner seat track lower front bracket.
- (b) Remove the 2 nuts and inner seat track lower rear bracket.

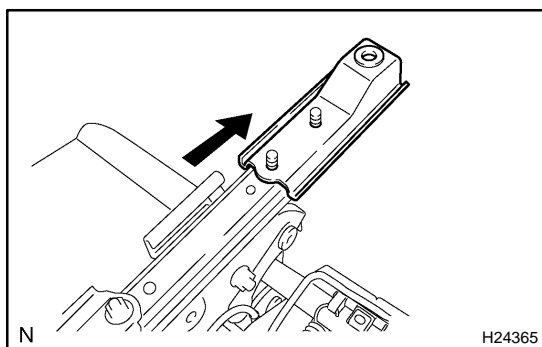**HINT:**

When removing the inner seat track lower rear bracket, slide the inner seat track as shown in the illustration.

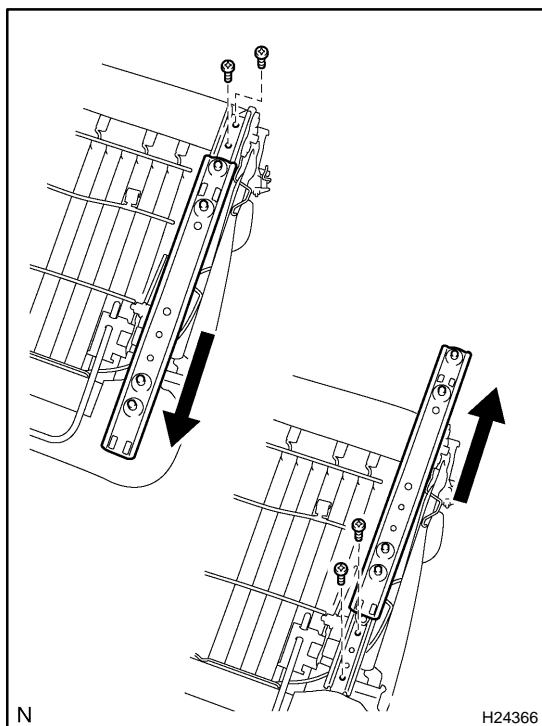
**19. REMOVE OUTER SEAT TRACK****HINT:**

Slide the outer seat track until the torx® screws on the front and rear sides can be seen.

Remove the 4 torx® screws and outer seat track.

20. REMOVE INNER SEAT TRACK

Perform the same procedure on the inner seat track.

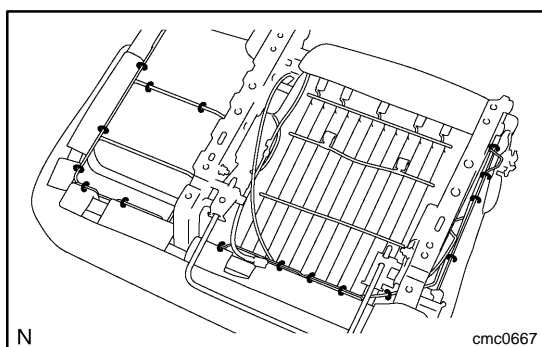**21. REMOVE SEAT CUSHION FRAME**


Remove the hog rings and seat cushion frame from the seat cushion pad.

HINT:

If the seat cushion cover needs to be replaced, replace it with the front seat cushion assembly (service kit) (see page [RS-160](#)).

22. REMOVE OCCUPANT CLASSIFICATION SENSOR
(See page [RS-160](#))**23. REMOVE FRONT SEAT INNER BELT**

- (a) Disconnect the wire harness clamps.
- (b) Remove the bolt and front seat inner belt from the seat cushion frame.

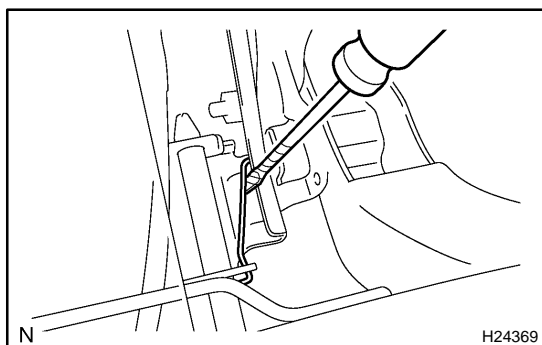**24. REMOVE SEAT TRACK ADJUSTING HANDLE**

- (a) Using a screwdriver, disengage the seat track cover spring.


HINT:

Tape the screwdriver tip before use.

- (b) Perform the same procedure on the other side.
- (c) Remove the seat track adjusting handle.

25. REMOVE RH AND LH SEAT TRACK HANDLE SUB-ASSEMBLY

- (a) Remove the nut and RH seat track handle sub-assembly.
- (b) Perform the same procedure on the other side.

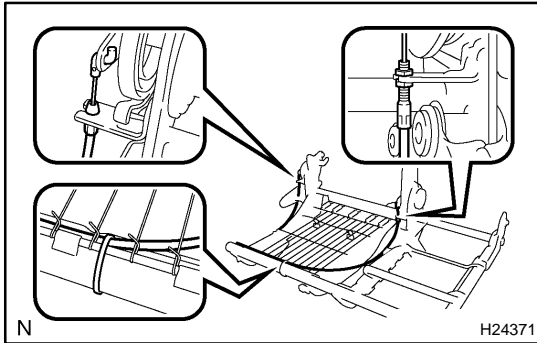**26. REMOVE RECLINING ADJUSTING CABLE**

- (a) Disconnect the clamp.
- (b) Loosen the adjusting nuts.

HINT:

When loosening the nuts, hold one and loosen the other.

- (c) Remove the reclining adjusting cable.