

REASSEMBLY


CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

HINT:


A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. **INSTALL SEAT POSITION SENSOR**
(SEE PAGE [RS-122](#))
2. **INSTALL RH AND LH SEAT CUSHION LOWER SHIELDS**

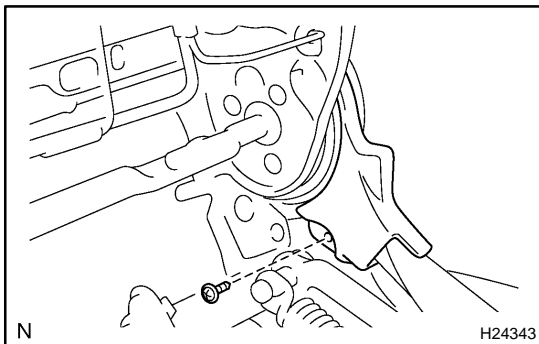


3. **INSTALL RH AND LH LOWER RECLINING ADJUSTER INSIDE COVERS**

- (a) Install the LH lower reclining adjuster inside cover with the screw.
- (b) Perform the same procedure on the other side.

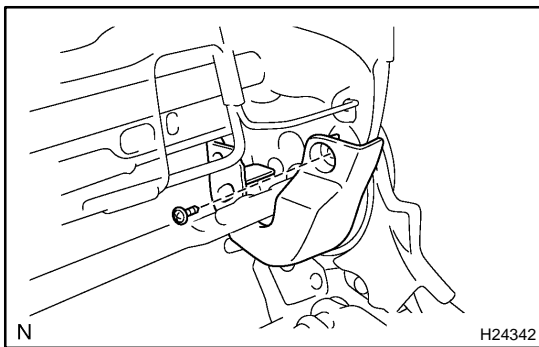

4. **INSTALL RH AND LH UPPER RECLINING ADJUSTER INSIDE COVERS**

- (a) Install the LH upper reclining adjuster inside cover with the screw.
- (b) Perform the same procedure on the other side.

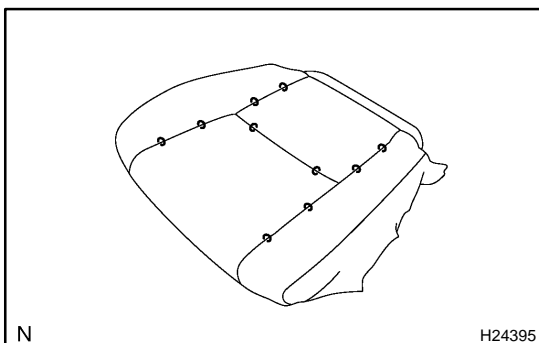

5. **INSTALL SEAT CUSHION COVER**


Install the seat cushion cover to the seat cushion pad with the hog rings.

HINT:


When installing the hog rings, take as much care as possible to prevent wrinkles.

6. **INSTALL SEAT CUSHION COVER AND PAD**

- (a) Install the seat cushion cover with seat cushion pad, and latch the seat cushion cover hooks.

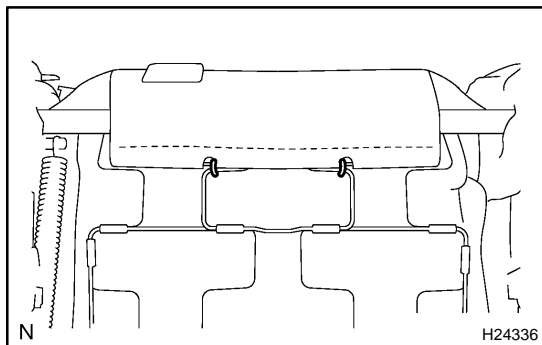


- (b) Install the hog rings to the seat cushion cover.

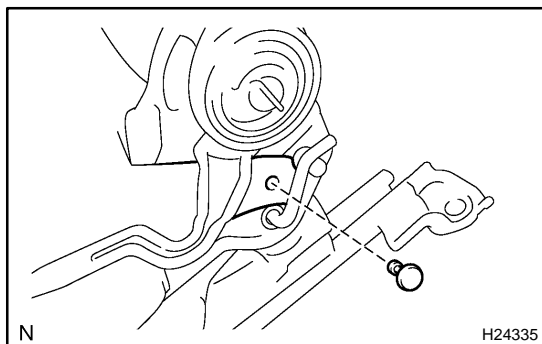

- (c) Install the clip.
(d) Perform the same procedure on the other side.

7. INSTALL SEATBACK COVER


- (a) Install the seatback cover to the seatback pad.
(b) Install the 2 headrest supports.

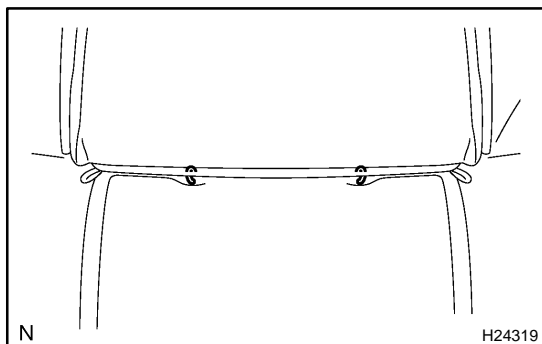


- (c) Turn up the seatback cover and install the hog rings.

8. INSTALL SEATBACK COVER AND PAD


- (a) Install the seatback cover and pad to the seat frame assembly.

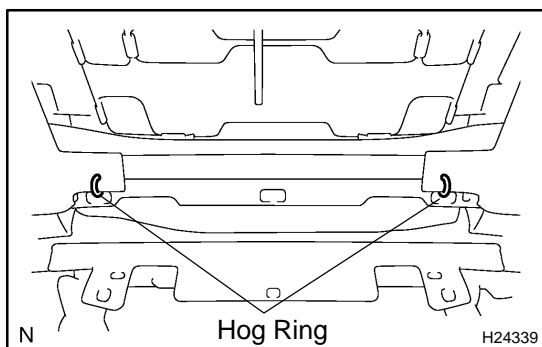

- (b) Install the hog rings to the seat frame assembly.

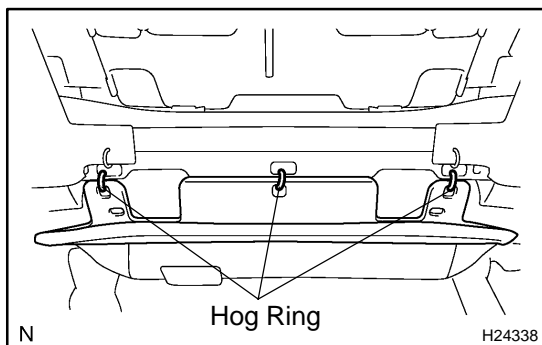


- (c) Install the hog rings to the seat frame assembly.

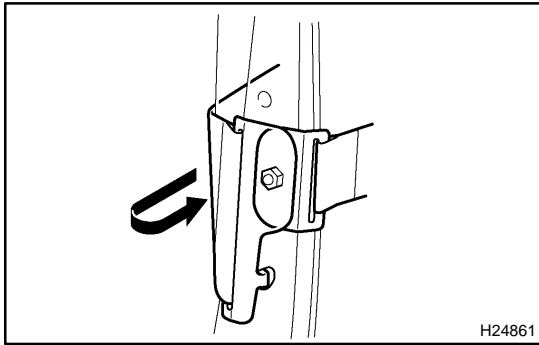


- (d) w/ Side airbag:
Connect the seatback cover bracket to the seat frame assembly with the nut.

Torque: 5.5 N·m (56 kgf-cm, 49 in.-lbf)

- (e) Close the fastener.

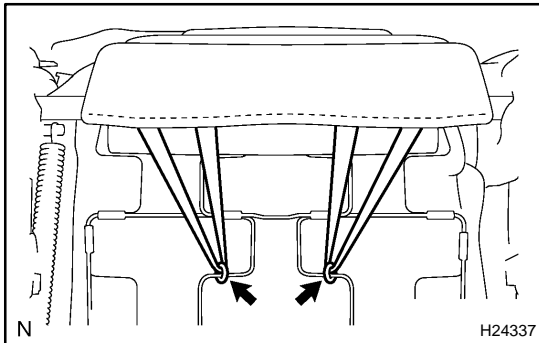


- (f) Install the hog rings to the seat frame assembly.

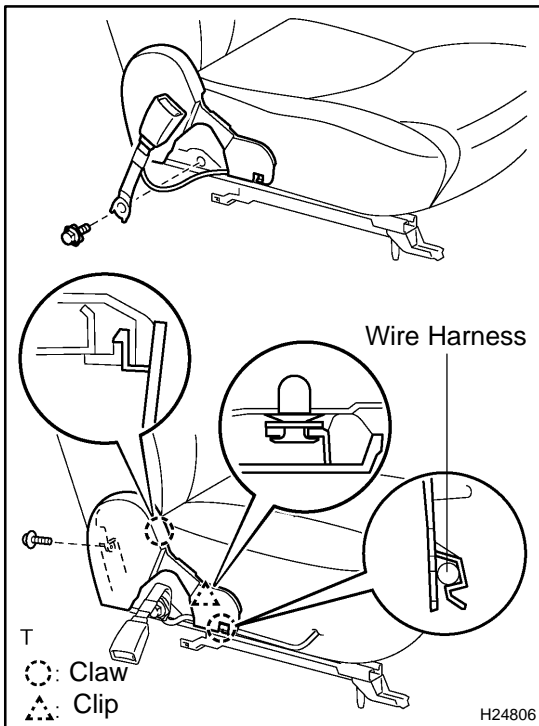

9. INSTALL SEAT CUSHION INNER SHIELD

- (a) Connect the front seat inner belt connectors and clamps.
(b) Install the seat cushion inner shield.
(c) Connect the front seat inner belt wire harness clamp to the seat cushion inner shield.
(d) Install the screw to the seat cushion inner shield.
(e) Install the front seat inner belt with the bolt.


Torque: 42 N·m (430 kgf-cm, 32 ft-lbf)

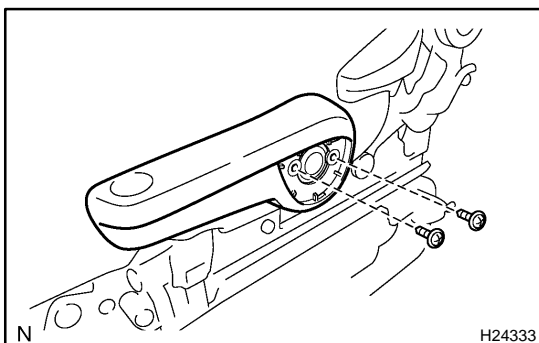

10. INSTALL VERTICAL ADJUSTER HANDLE

- (a) Install the vertical adjuster handle with the 2 screws.
(b) Install the vertical adjuster handle cap.

11. INSTALL RECLINING ADJUSTER RELEASE HANDLE

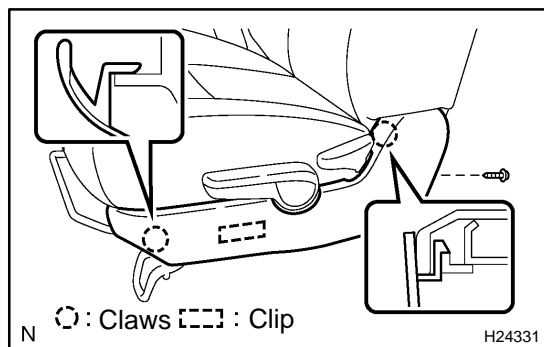**12. INSTALL SEAT CUSHION OUTER SHIELD**

Install the seat cushion outer shield with the screw.

13. INSTALL HEADREST