


## INSTALLATION

### 1. INSTALL WASHER NOZZLES

### 2. INSTALL WIPER LINK

Install the wiper link through the service hole, then torque the 6 bolts.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

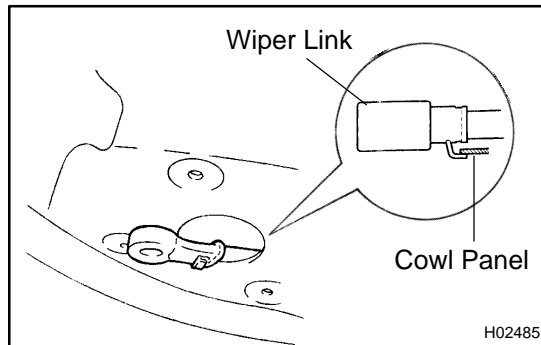

### 3. INSTALL WIPER MOTOR

(a) Install the wiper motor to the wiper link.

HINT:

When installing the wiper motor, connect the claw of wiper link to the cowl panel shown in the illustration.

(b) Torque the 4 bolts.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

(c) Connect the connector.

### 4. INSTALL HOOD TO COWL TOP SEAL

Install the hood to cowl top seal to the cowl top ventilator louver.


### 5. INSTALL COWL TOP VENTILATOR LOUVER

Install the cowl top ventilator louver with the 8 screws and 6 clips.

### 6. INSTALL WIPER ARMS

(a) Operate the wiper once and turn the wiper switch OFF.

(b) Install the wiper arms and tighten the nuts by hand.

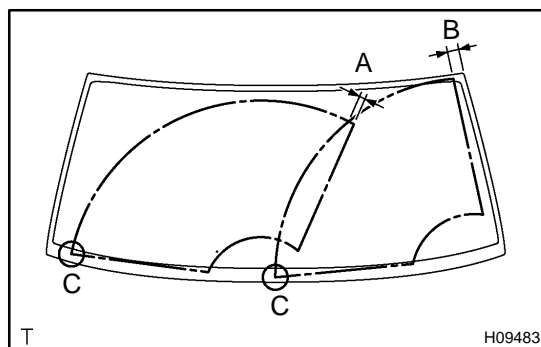

(c) Adjust the installation positions of the wiper arms to the positions shown in the illustration.

**A: Approx. 25.4 mm (1.000 in)**

**B: Approx. 40.0 mm (1.574 in)**

HINT:

When installing the wiper arms, make sure that the tips of the blades are not beyond the ceramic edge as indicated "C" part in the illustration.

(d) Torque the 2 nuts.

**Torque: 20 N·m (205 kgf·cm, 15 ft-lbf)**

(e) Install the 2 caps.