

REMOVAL

1. REMOVE WIPER ARMS

- (a) Using a screwdriver, remove the 2 caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 nuts and wiper arms.


2. REMOVE COWL TOP VENTILATOR LOUVER

- (a) Using a clip remover, remove the 6 clips.

- (b) Remove the 8 screws and cowl top ventilator louver.

3. REMOVE HOOD TO COWL TOP SEAL

Remove the hood to cowl top seal from the cowl top ventilator louver.

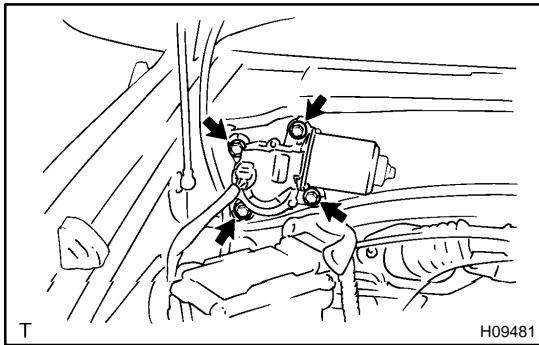

4. REMOVE WIPER MOTOR

- (a) Disconnect the connector.


- (b) Unfasten the 4 bolts.

- (c) Disconnect the wiper motor from the wiper link, then remove the wiper motor.

5. REMOVE WIPER LINK

- (a) Remove the 6 bolts.

- (b) Remove the wiper link through the service hole.

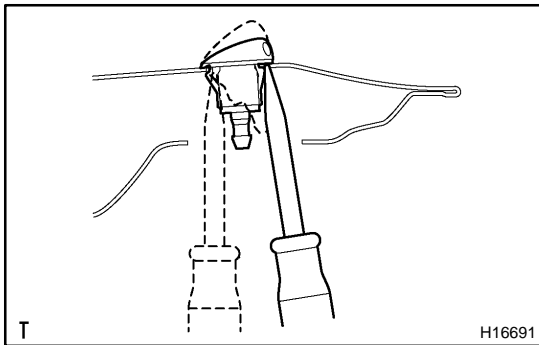

6. REMOVE WASHER NOZZLE

- (a) Disconnect the washer hose.

- (b) Using a screwdriver, remove the nozzle.

HINT:

Tape the screwdriver tip before use.

- (c) Perform the same procedure on the other side.