

## DISASSEMBLY


### CAUTION:

Wear safety gloves, because the sharp edges and surfaces of the seat frame may cause injury to the hands.

### HINT:

- Tape the screwdriver tip before using it to remove the parts.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

### 1. REMOVE HEADREST

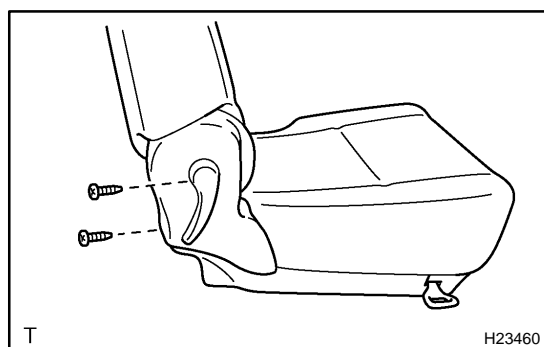


### 2. REMOVE RECLINING ADJUSTER RELEASE HANDLE

- (a) Remove the screw and release handle.


### 3. REMOVE NO. 1 REAR SEAT RECLINING COVER RH

- (a) Remove the screw and No. 1 rear seat reclining cover.

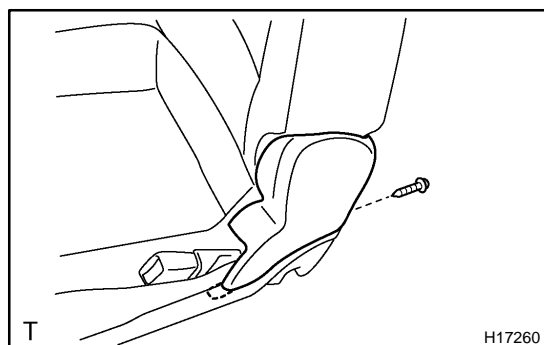

### 4. REMOVE NO. 1 REAR SEAT RECLINING COVER LH

- (a) Remove the screw and No. 1 rear seat reclining cover.

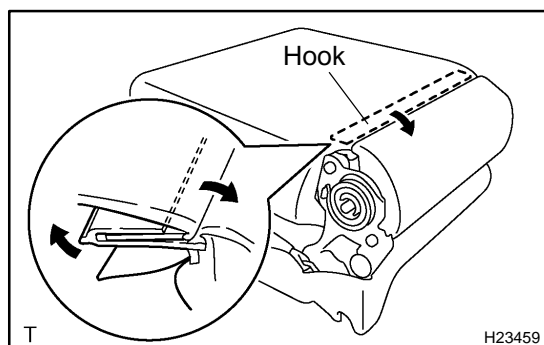

### 5. REMOVE SEATBACK ASSEMBLY

- (a) Tilting the seat forward.  
 (b) As shown in the illustration, disengage the hook and open the seatback cover.  
 (c) Remove the 4 bolts and the seatback assembly.

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**


### 6. REMOVE SEATBACK COVER

- (a) Remove the headrest supports.  
 (b) Disengage the hooks, and remove the seatback frame from the seatback cover with pad.

- (c) Remove the seatback cover from the seatback pad.


HINT:

At the time of reassembly, take as much care as possible to minimize wrinkles when installing hog rings.

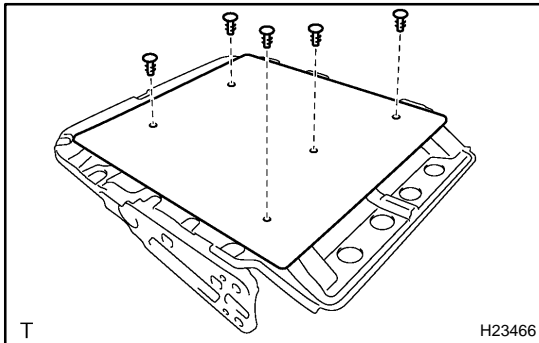


## 7. REMOVE REAR SEATBACK BOARD

Using a clip remover, remove the 5 clips and seatback board.

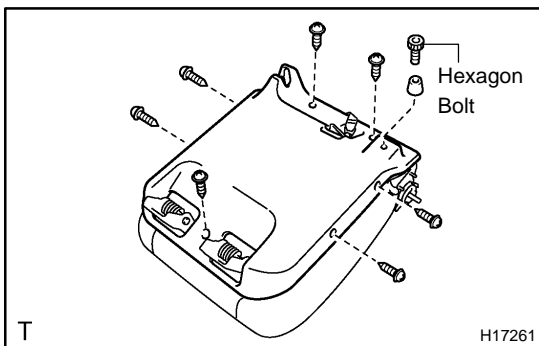

## 8. REMOVE REAR SEAT CUSHION UNDER COVER

- Using a 5 mm hexagon wrench, remove the bolt and cushion.
- Remove the 6 screws and rear seat cushion under cover.
- Remove the screw and fold seat stopper band.

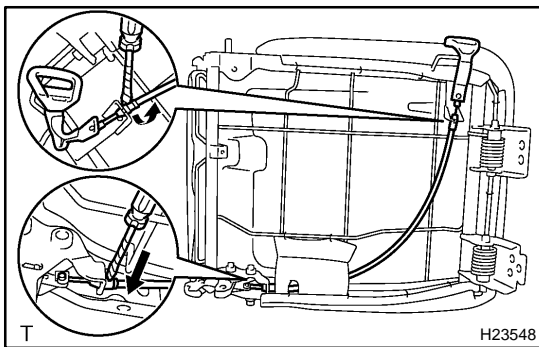


## 9. REMOVE FOLD SEAT LOCK CONTROL CABLE ASSY NO. 1

Using a screwdriver, remove the control cable as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

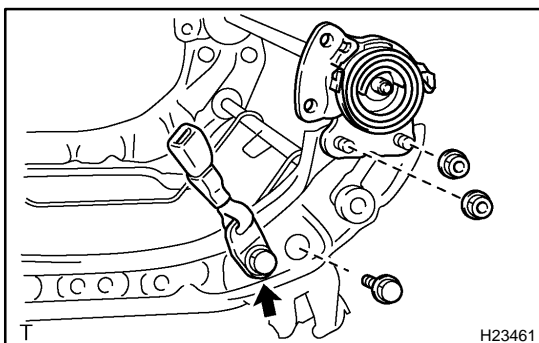

## 10. REMOVE LH REAR SEAT RECLINING ADJUSTER AND REAR SEAT LOCK

- Unfasten the bolt, then remove the rear No. 1 seat inner belt.

**Torque: 42 N·m (430 kgf·cm, 32 ft·lbf)**

- Remove the bolt, 2 nuts and LH rear seat reclining adjuster with rear seat lock.

**Torque:**

**43 N·m (440 kgf·cm, 32 ft·lbf) for bolt**

**43 N·m (440 kgf·cm, 32 ft·lbf) for nut**

- (c) Using a screwdriver, remove the E-ring, then remove the LH rear seat reclining adjuster from the rear seat lock.

**11. REMOVE RECLINING CONNECTING PIPE**

**12. REMOVE RH REAR SEAT RECLINING ADJUSTER**

Remove the 2 nuts and RH rear seat reclining adjuster.

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

**13. REMOVE SEAT CUSHION COVER**

- (a) Remove the seat cushion cover with pad from the seat cushion frame.
- (b) Remove the seat cushion cover from the seat cushion pad.

**HINT:**

At the time of reassembly, take as much care as possible to minimize wrinkles when installing hog rings.

**14. REMOVE REAR SEAT CUSHION HINGE LH**

- (a) Using a screwdriver, remove the E-ring.
- (b) Remove the pin, bushings, spring, collar and rear seat cushion hinge.
- (c) Remove the rear seat cushion hinge on the other side using the same procedures (a to b) described above.