



SIDE STEP REPLACEMENT

B04H5-02

REMOVE SIDE FRONT STEP

Using a screwdriver, remove the side front step.

HINT:

Tape the screwdriver tip before use.

NOTICE:

- Do not damage the body.
- If the clips are damaged, exchange them for new clips.