


## REMOVAL

### HINT:

A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

1. **REMOVE ROOF HEADLINING** (See page [BO-133](#))
2. **REMOVE SLIDING ROOF GLASS ASSEMBLY**
  - (a) Using a torx wrench, remove the 4 screws.
  - (b) Pull the glass upward to remove it.

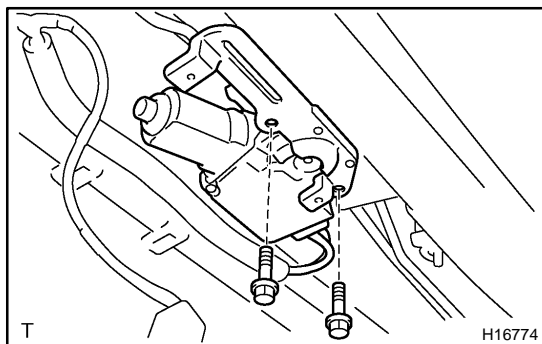

3. **REMOVE DRIVE GEAR**

### NOTICE:

**Remove the drive gear with the sliding roof fully closed.**

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and drive gear.
- (c) Remove the 2 screws and drive gear bracket.

4. **REMOVE SLIDING ROOF HOUSING**

- (a) Disconnect the 4 drain hoses from the housing.
- (b) Disengage the wire harness clamps.
- (c) Remove the 8 bolts, 2 nuts and sliding roof housing.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

