


# WINDSHIELD COMPONENTS

BO4Q2-01

w/ Standard cab:  
w/ Access cab:

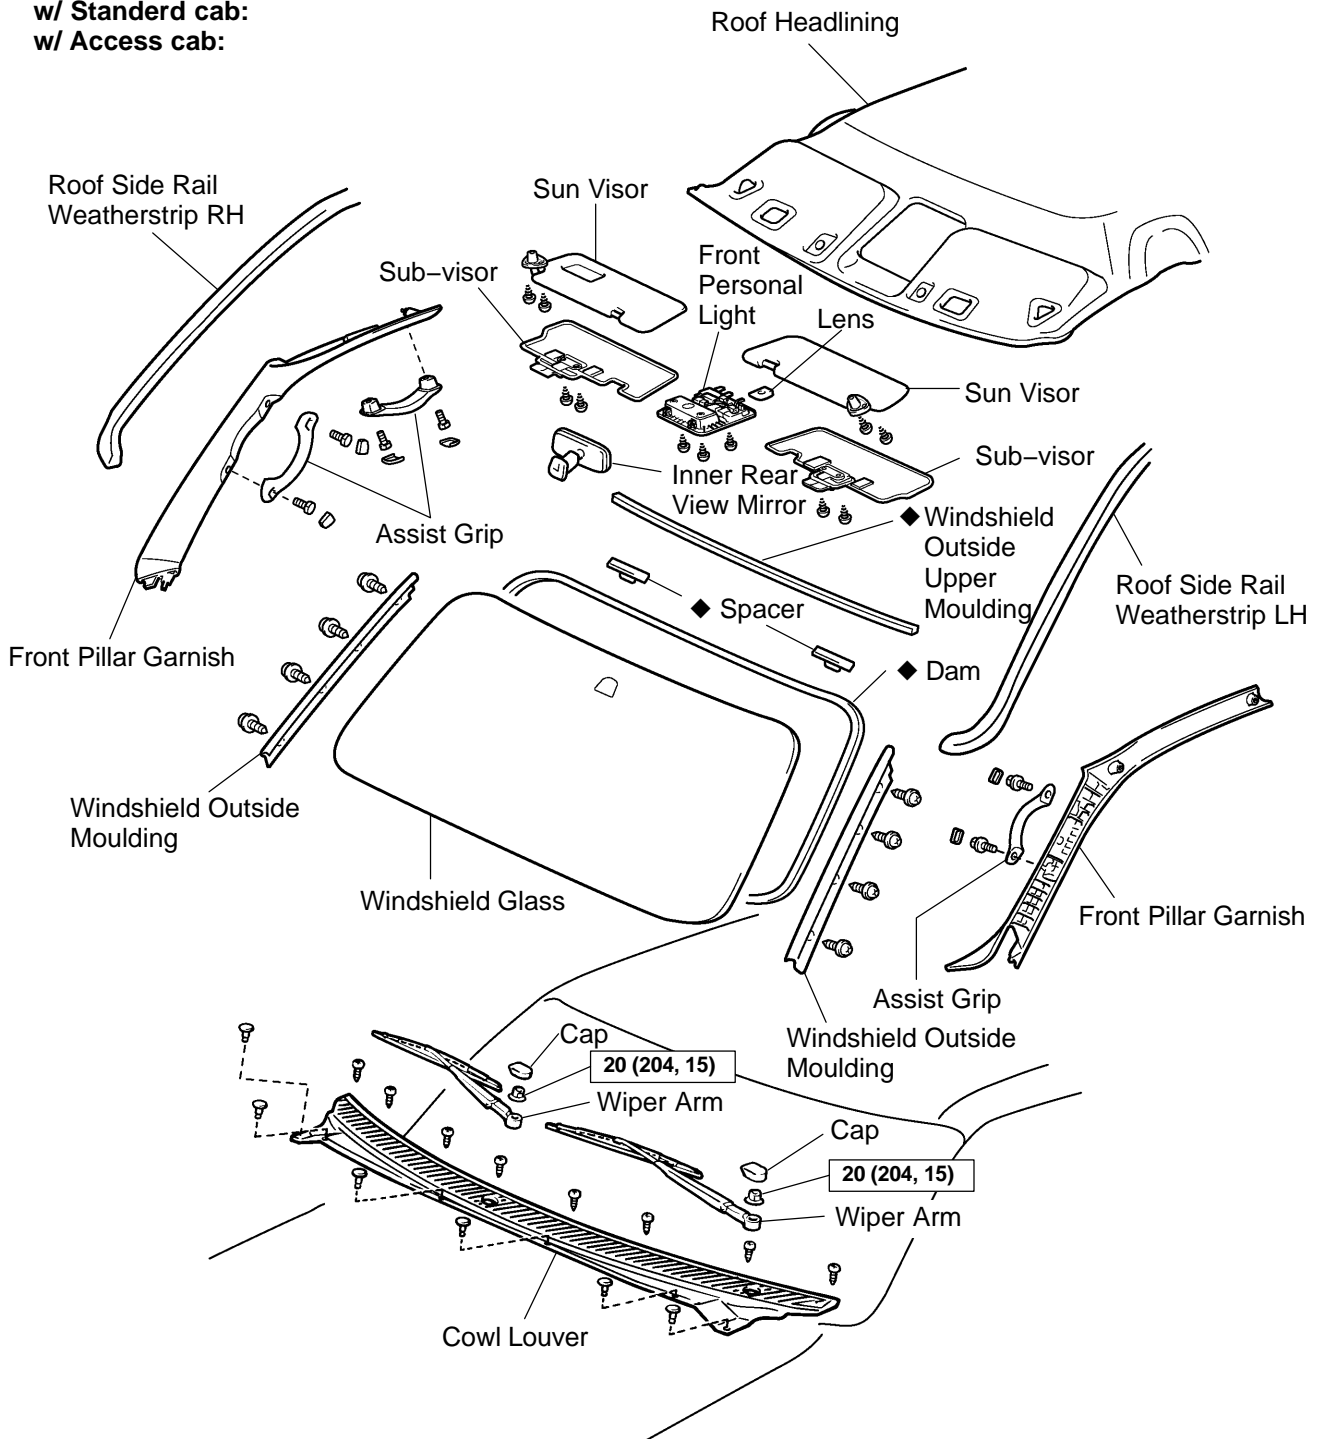


N·m (kgf·cm, ft·lbf) : Specified torque

T ◆ Non-reusable part

H11397

**w/ Double cab:****w/ Sliding roof:**


Siding Roof  
Headlining  
Trim

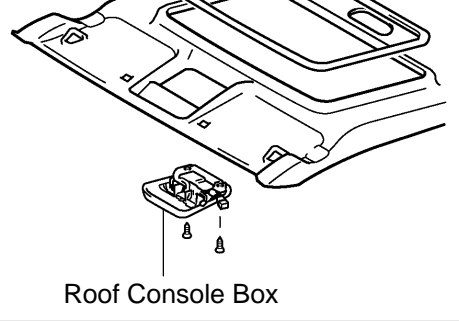

Roof Console Box

Front Door Opening  
Trim Weatherstrip

Roof Headlining

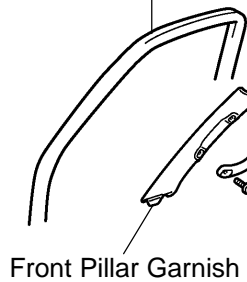

Front Pillar Garnish

Assist Grip  
Assist Grip Plug

Assist Grip Plug

Assist Grip

Sun Visor

Roof Console Box


Front Door  
Opening Trim  
Weatherstrip

**w/ Electro chromic  
inner rear view mirror:**

Mirror Cover



Inner Rear  
View Mirror

2.5 (25, 22 in.-lbf)

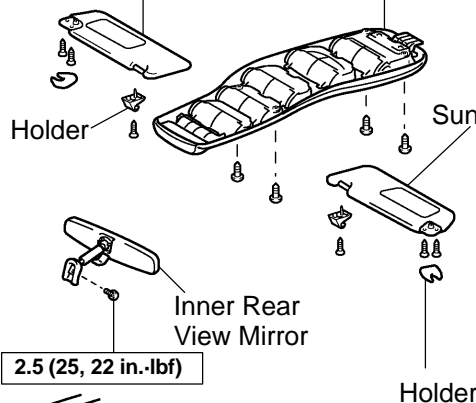

Inner Rear  
View Mirror

2.5 (25, 22 in.-lbf)

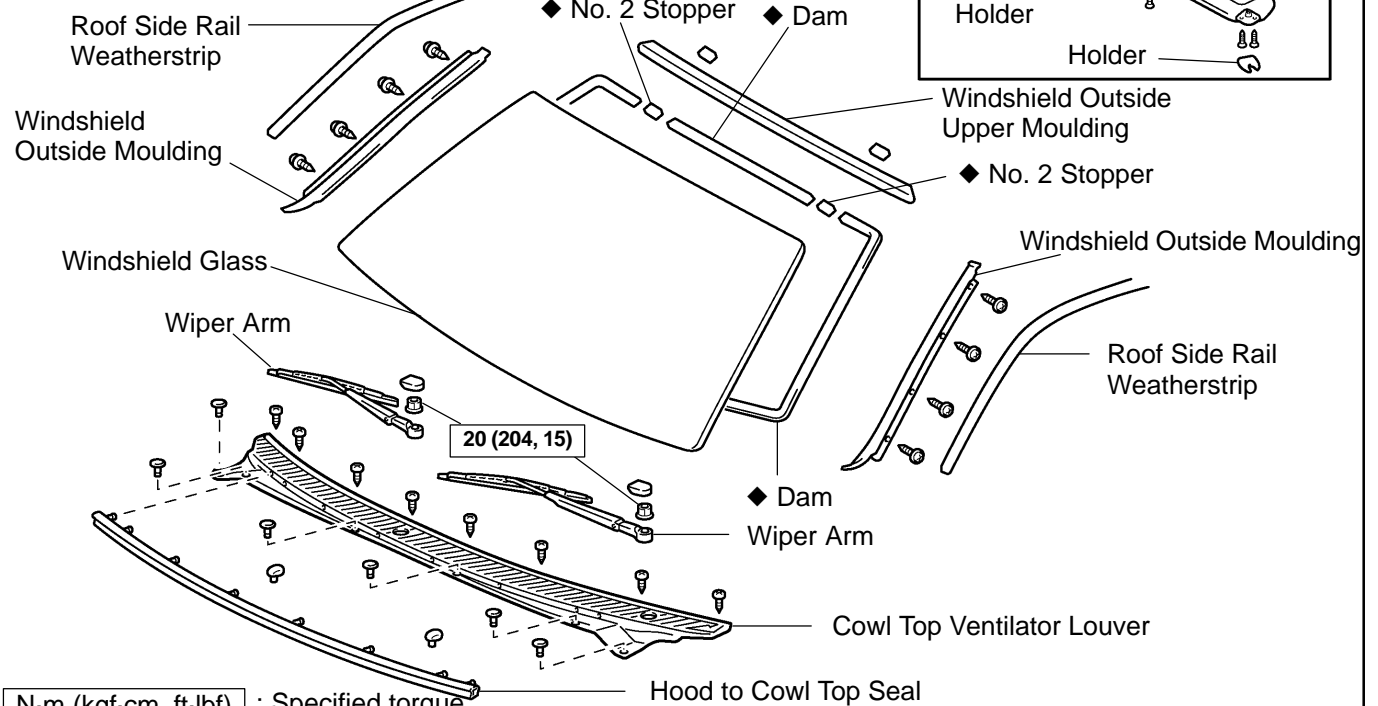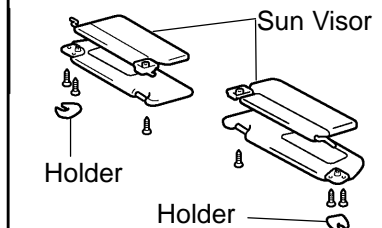**w/ Double sun visor:**

Roof Side Rail  
Weatherstrip

Windshield  
Outside Moulding

Windshield Glass

Wiper Arm

20 (204, 15)

Wiper Arm

Cowl Top Ventilator Louver

Hood to Cowl Top Seal

N·m (kgf·cm, ft·lbf) : Specified torque

C ◆ Non-reusable part