


REMOVAL

HINT:

While supporting the hood by hand, remove the hood support from the hood.

1. REMOVE INNER REAR VIEW MIRROR

Remove the inner rear view mirror as shown in the illustration.

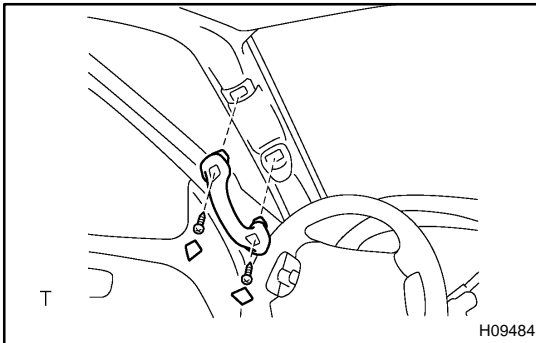

2. REMOVE ASSIST GRIPS

(a) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.

(b) Driver side:

Using a torx® driver, remove the 2 torx® screws and assist grip.

Torx® driver: T30 (Part No.09041-00030 or locally manufactured tool)

(c) Standard cab, Access cab, Passenger side:


Using a torx® driver, remove the 4 torx® screws and 2 assist grips.

Torx® driver: T30 (Part No.09041-00030 or locally manufactured tool)

(d) Double cab cab, Passenger side:

Using a torx® driver, remove the 2 torx® screws and assist grips.

Torx® driver: T30 (Part No.09041-00030 or locally manufactured tool)

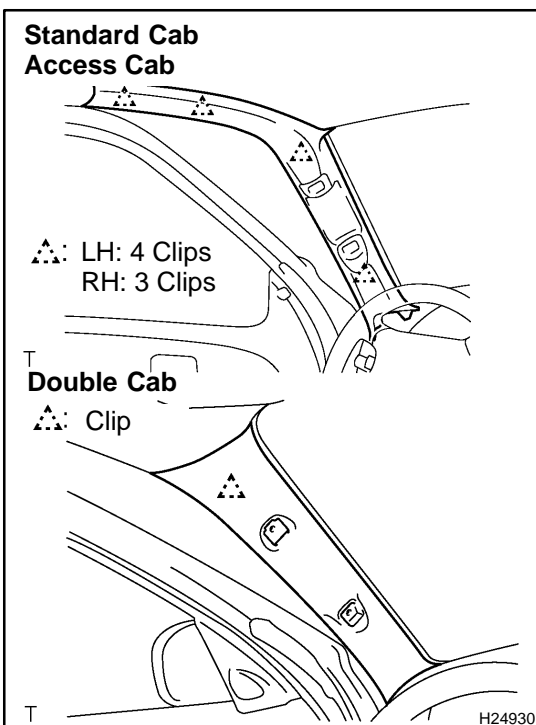

3. REMOVE FRONT PILLAR GARNISH

(a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

(b) Employ the same manner described above to the other side.

4. REMOVE SUN VISORS


(a) Remove the 4 screws and 2 sun visors.

(b) w/ Light:

Disconnect the connector.

5. REMOVE SUB-VISORS

Remove the 4 screws and 2 sub-visors.

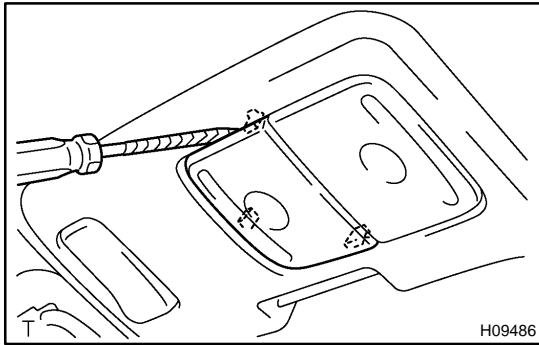


6. REMOVE FRONT PERSONAL LIGHT

- (a) Using a screwdriver, remove the left side lens.

HINT:

Tape the screwdriver tip before use.

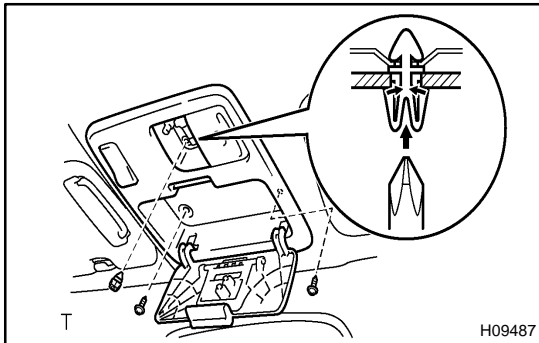


- (b) Remove the 2 screws.

- (c) Using a screwdriver, rotate the clip by 90° and remove it.

HINT:

Tape the screwdriver tip before use.

- (d) Remove the front personal light, then disconnect the connector.

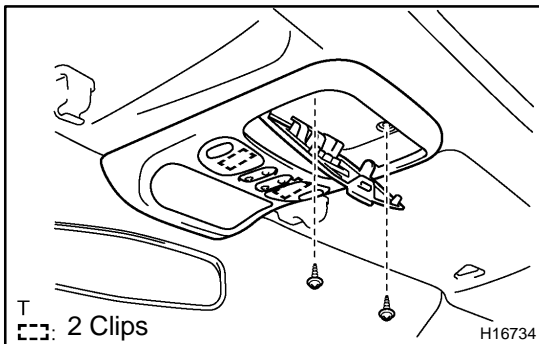

7. w/ Sliding roof:

REMOVE ROOF CONSOLE BOX


- (a) Remove the 2 screws.

- (b) Using a screwdriver, remove the roof console box.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connectors.

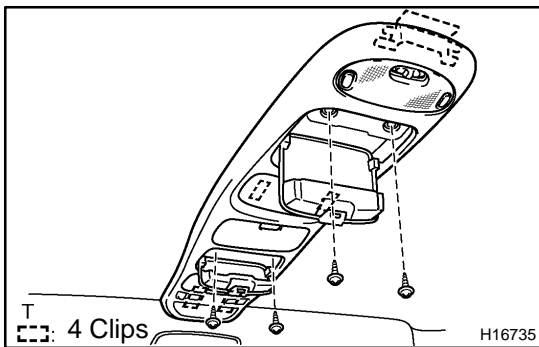

8. w/o Sliding roof:

REMOVE ROOF CONSOLE BOX

- (a) Remove the 4 screws.

- (b) Using a screwdriver, remove the roof console box.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connectors.

9. REMOVE SUN VISOR HOLDERS

Remove the 2 screws and 2 sun visor holders.

10. REMOVE FRONT PART OF ROOF HEADLINING


11. REMOVE WIPER ARMS

- (a) Using a screwdriver, remove the 2 caps.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 2 nuts and wiper arms.

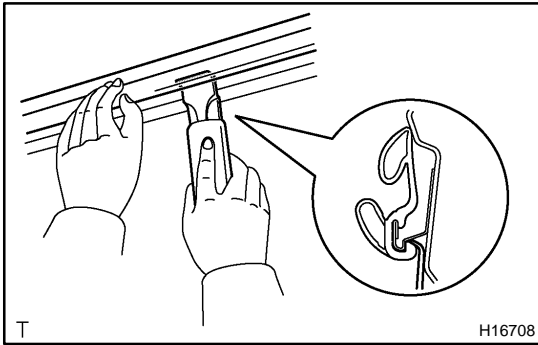**12. REMOVE COWL TOP VENTILATOR LOUVER**


- (a) Remove the hood to cowl top seal.
- (b) Using a clip remover, remove the 6 clips.
- (c) Remove the 8 screws and cowl top ventilator louver.

13. REMOVE FRONT PART OF ROOF SIDE RAIL WEATHERSTRIP LH AND RH

Using SST, pull off the roof side rail weatherstrip from front end.
SST 09806-30010

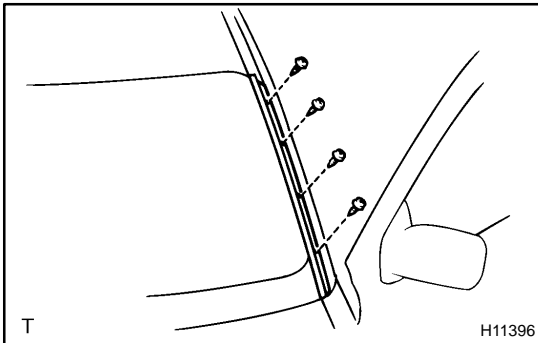**14. REMOVE WINDSHIELD OUTSIDE MOULDING**

- (a) Remove the 4 screws and windshield outside moulding.
- (b) Perform the same procedure on the other side.

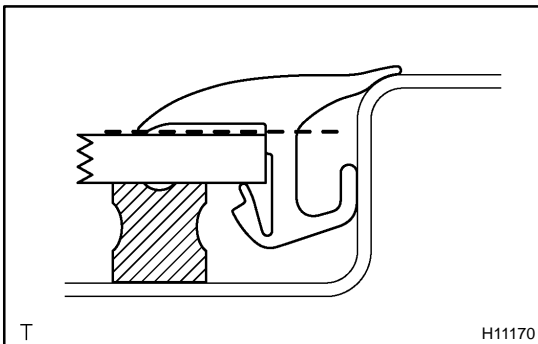
**15. w/ Standed cab, Access cab:****REMOVE WINDSHIELD OUTSIDE UPPER MOULDING**

- (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:

Do not damage the body with the knife.


- (b) Remove the remaining moulding.

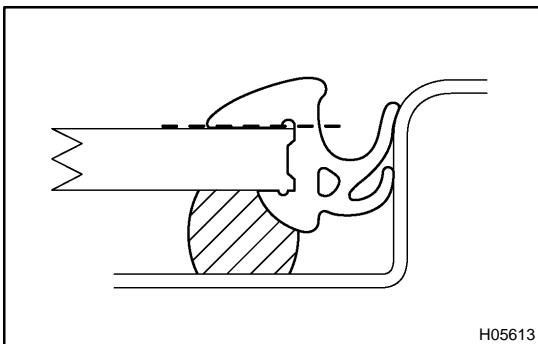**16. w/Double cab:****REMOVE WINDSHIELD OUTSIDE UPPER MOULDING**

Using a knife, cut off the moulding as shown in the illustration.

NOTICE:


Do not damage the body with the knife.

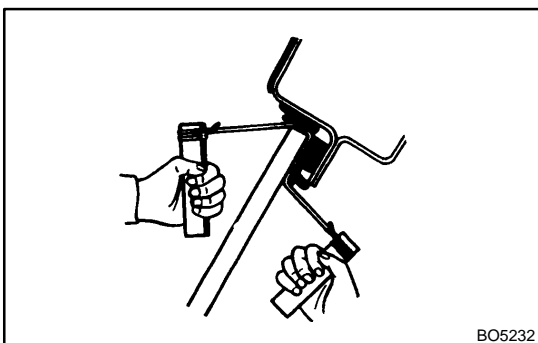**17. REMOVE WINDSHIELD GLASS**

- (a) Push piano wire through between the body and glass from the interior.
- (b) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

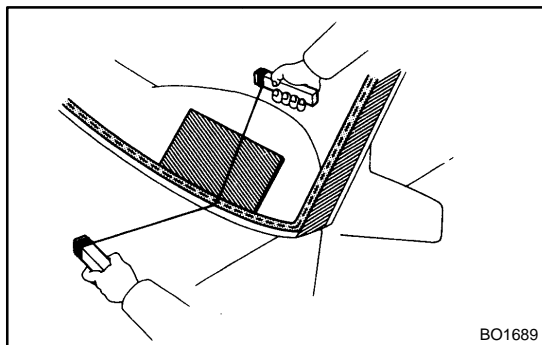**NOTICE:**

When separating the glass, take care not to damage the paint and exterior ornaments. To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

(c) Cut the adhesive by pulling the piano wire around it.

(d) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.