

REMOVAL

1. Resin bumper type:

REMOVE FRONT BUMPER EXTENSION

Remove the 4 nuts and front bumper extension.


NOTICE:

If the protector are damaged, exchange them for new protector.

2. w/ Front mudguard:

REMOVE FRONT MUDGUARD

Remove the 4 screws and front mudguard.

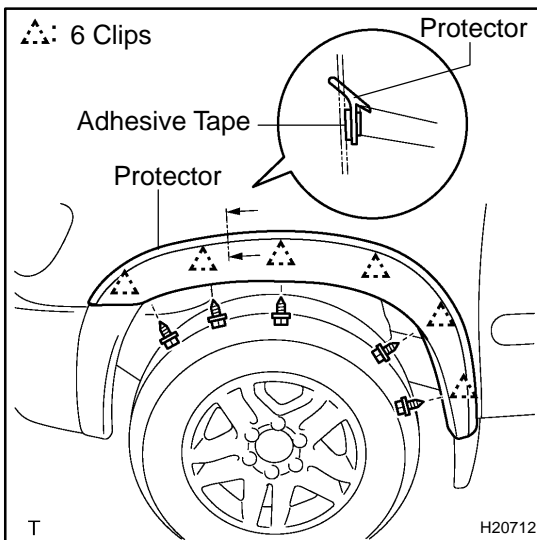

3. REMOVE FRONT FENDER OUTSIDE MOULDING

(a) Remove the 6 screws.

(b) Using a heat light, heat the moulding to 20 to 30°C (68 to 86°F).

NOTICE:

Do not heat the moulding excessively.

(c) Cut off the adhesive tape with a knife.

NOTICE:

Do not damage the body.

(d) Remove the moulding.


NOTICE:

If the clips are damaged, exchange them for new clips.

4. w/ Rear mudguard:

REMOVE REAR MUDGUARD

Remove the 4 screws and rear mudguard.

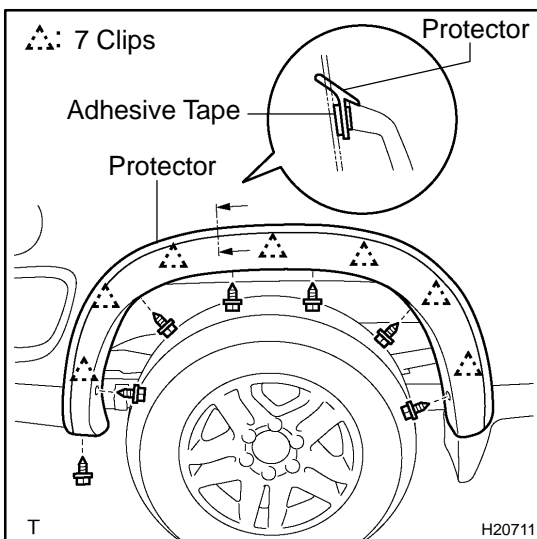

5. REMOVE QUARTER OUTSIDE MOULDING

(a) Remove the 6 screws.

(b) Using a heat light, heat the moulding to 20 to 30°C (68 to 86°F).

NOTICE:

Do not heat the moulding excessively.

(c) Cut off the adhesive tape with a knife.

NOTICE:

Do not damage the body.

(d) Remove the moulding.

NOTICE:

If the clips are damaged, exchange them for new clips.